

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [AMZCHEF](#) /
- › [AMZCHEF Portable Espresso Machine User Manual](#)

AMZCHEF CP024

AMZCHEF Portable Espresso Machine

USER MANUAL

Model: CP024 | Brand: AMZCHEF

Introduction

Thank you for choosing the AMZCHEF Portable Espresso Machine. This device is designed to provide a convenient and high-quality espresso experience wherever you are. Featuring a powerful 9000mAh battery, 2-in-1 brewing compatibility for ground coffee and NS capsules, and rapid self-heating capabilities, it is ideal for camping, RV trips, hiking, office use, or daily commutes. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure you get the most out of your portable espresso machine.



The AMZCHEF Portable Espresso Machine, designed for coffee enjoyment on the go.

Safety Information

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in

electric shock, fire, or serious injury.

- Do not immerse the machine, power cord, or plug in water or other liquids.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Use only pure water for brewing. Do not use milk or other liquids in the water tank.
- Ensure the water tank lid is securely closed before operation, especially when using the self-heating function.
- Do not touch hot surfaces immediately after brewing. Allow the machine to cool down before handling.
- Only use the provided USB-C cable for charging.
- Do not operate the machine if it is damaged or malfunctioning. Contact customer support for assistance.
- Avoid overfilling the water tank; refer to the MAX fill line.

What's in the Box

Verify that all components are present upon unboxing:

- AMZCHEF Portable Electric Espresso Machine
- User Manual (this document)
- USB-C Cable



The AMZCHEF Portable Espresso Machine and its included accessories.

Setup

Before first use, please follow these steps:

1. **Initial Charge:** Fully charge the espresso machine using the provided USB-C cable. Connect the cable to the machine's charging port and a compatible USB power source (e.g., wall adapter, power bank, car charger). The LCD display will indicate charging status. A full charge takes approximately 3 hours.
2. **First Cleaning:** Before brewing coffee, perform a cleaning cycle. Fill the water tank with clean water (without coffee or capsule), select the heating brew function, and let the machine run a cycle. Discard the water. Repeat this process 2-3

times.

3. **Familiarize Components:** Identify the water tank, coffee chamber (for ground coffee or capsules), and the coffee cup/holder.



The machine can be conveniently charged via USB-C at home, with a power bank, or in a car.

Operating Instructions

The AMZCHEF Portable Espresso Machine offers versatile brewing options and smart controls.

Understanding the LCD Display and Controls

LCD Display



The LCD display shows battery level and temperature, with dedicated buttons for heating brew and direct brew.

- **Battery Level:** Indicates remaining battery charge.
- **Temperature:** Displays the current water temperature in Celsius or Fahrenheit.
- **Heating Brew Button (Wavy lines icon):** Initiates the self-heating and brewing process.
- **Direct Brew Button (Snowflake icon):** Initiates brewing using pre-heated water (no self-heating).

2-in-1 Brewing: Ground Coffee & NS Capsules

The machine is compatible with both ground coffee and Nespresso® compatible capsules.



Higher Power

Compact&Long-Lasting



9000mah

80ML Cold Water 3-4 Cups

40ML Cold Water 6-7 Cups

Hot Water 200+ Cups

Other



7500mah

80ML Cold Water 2-3 Cups

40ML Cold Water 4 Cups

Hot Water 200+ Cups

The machine features two distinct chambers for Nespresso capsules and ground coffee.

Brewing Process (General Steps)

Follow these steps for a perfect espresso:

- Select Chamber:** Choose the appropriate chamber for your coffee type (ground coffee or NS capsule).
- Prepare Coffee:**
 - *For Ground Coffee:* Fill the ground coffee chamber with your desired amount of fine-ground coffee (up to 12g). Tamp lightly if desired.
 - *For NS Capsule:* Insert a Nespresso® compatible capsule into the capsule chamber.
- Fill Water Tank:** Unscrew the water tank lid and fill with pure water. The tank has markings for 40ml and 80ml. Do not exceed the MAX fill line. Securely close the lid.
- Attach Coffee Cup:** Place the machine directly onto your coffee cup or the included holder.
- Select Brewing Function:**
 - *For Hot Brew (Self-Heating):* Press the Heating Brew button (wavy lines icon). The machine will heat the water to the optimal temperature (approx. 198°F / 92°C) in about 200 seconds, then automatically begin brewing.

- *For Direct Brew (Using Pre-heated Water):* If you are using pre-heated hot water, press the Direct Brew button (snowflake icon). The machine will immediately begin brewing.

6. **Brewing Complete:** The machine will beep 4 times and the LCD will display "End" when brewing is complete. Remove your coffee cup and enjoy.



Visual guide to the brewing process.

Key Features in Operation

- **Fast Self-Heating:** Heats 2.7oz (80ml) of water from 77°F to 198°F in approximately 200 seconds.
- **20 Bar Professional Pressure:** Ensures rich crema and full-bodied espresso extraction.
- **High-Capacity Battery:** The 9000mAh battery allows for more than 6 hot shots (40ml) or over 200 shots with hot water on a full charge.

Fast Self-Heating

Speed Meets Flavor



Boils in just
200S

The machine's fast self-heating function.

Portable & Wireless

Make High-quality coffee outdoors

◆ -- 2.9 inch -- ◆



9 inch

Product weight: 1.6LBS

The 20 Bar professional pump ensures rich espresso with crema.

Maintenance

Regular cleaning and maintenance will prolong the life of your espresso machine.

- **After Each Use:** Disassemble the coffee chamber and coffee cup/holder. Rinse all removable parts with clean water immediately after use.
- **Cleaning the Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- **Deep Cleaning (Periodically):** For thorough cleaning, you can run a cycle with a descaling solution (follow descaling solution instructions) or a mixture of water and white vinegar (1 part vinegar to 4 parts water). Afterwards, run 2-3 cycles with plain water to rinse thoroughly.
- **Storage:** Ensure all parts are dry before reassembling and storing the machine in a cool, dry place.

2-IN-1 Design

For Nespresso Capsules
Airport Quick Shot



For Coffee Ground
Mountain Barista Mode



The machine's components are designed for easy cleaning.

Troubleshooting

If you encounter issues with your AMZCHEF Portable Espresso Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Low battery or no charge.	Charge the machine fully using the USB-C cable.
No coffee dispenses.	Water tank empty; coffee chamber clogged; incorrect assembly.	Ensure water tank is filled. Clean coffee chamber. Reassemble parts correctly.
Coffee is weak or watery.	Insufficient coffee grounds/incorrect capsule; coarse grind; not enough water.	Use appropriate amount of fine-ground coffee or a fresh capsule. Ensure sufficient water.
Machine not heating water.	Low battery; heating element malfunction.	Ensure battery is fully charged. If problem persists, contact support.
Leaking during operation.	Parts not securely tightened; seals damaged.	Ensure all components are tightly screwed. Check seals for damage.

If the problem persists after attempting these solutions, please contact AMZCHEF customer support.

Specifications

Feature	Detail
Brand	AMZCHEF
Model Name	Portable Electric Espresso Machine

Feature	Detail
Model Number	CP024
Color	Aluminum
Product Dimensions	2.87"D x 2.87"W x 9.06"H
Item Weight	2.83 pounds
Battery Capacity	9000mAh (3 Lithium Ion batteries included)
Coffee Input Type	Capsule & Ground Coffee
Pressure	20 Bar
Special Feature	Programmable, Self-Heating, LCD Display
Human Interface Input	Buttons
Recommended Uses	Home, Camping, Hiking, Traveling, Backpacking, Office, RV

Warranty and Support

Your AMZCHEF Portable Espresso Machine comes with a **12-month warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For any questions, technical assistance, or warranty claims, please contact AMZCHEF customer service. We are committed to providing **24-hour quality service** to ensure a good user experience.

You can find more information and contact details by visiting the official AMZCHEF store on Amazon: [AMZCHEF Store](#)