

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KLIM](#) /

› [KLIM K7 Cassette Tape Player and MP3 Converter User Manual](#)

## KLIM K7

# KLIM K7 Cassette Tape Player and MP3 Converter User Manual

Model: K7 | Brand: KLIM

## INTRODUCTION

The KLIM K7 is a versatile portable cassette tape player that also functions as an MP3 converter. It allows you to enjoy your classic cassette tapes, record audio using its built-in microphone, and convert your cherished tape recordings into digital MP3 files directly onto an SD card. With its rechargeable battery, integrated speaker, and included accessories, the KLIM K7 offers a blend of vintage charm and modern convenience.



Figure 1: KLIM K7 highlighting its core functionalities.

## WHAT'S IN THE BOX

Your KLIM K7 package includes everything you need to get started:

- KLIM K7 Cassette Tape Player / MP3 Converter

- KLIM Fusion Earphones
- Earphone Cap Accessories (1 Pair of Large/Medium/Small Silicone Earphone Caps, 1 Clip)
- USB-C Charging Cable
- 16GB TF Card (Micro SD Card)
- TF Card Reader
- User Manual



**PERFECT FOR  
ANY OCASION!**

Figure 2: All items included with your KLIM K7.

## PRODUCT OVERVIEW

The KLIM K7 features a compact design with intuitive controls. Key components include:

- **Cassette Compartment:** For inserting and playing cassette tapes.
- **Control Buttons:** Play, Stop, Fast Forward, Rewind, Record, Mode, Volume.
- **Built-in Speaker:** For audio playback without earphones.
- **Built-in Microphone:** For recording audio directly to the SD card.
- **SD Card Slot:** For inserting the 16GB Micro SD card for recording and MP3 playback.
- **3.5mm Earphone Jack:** For private listening with included earphones.
- **USB-C Port:** For charging the internal rechargeable battery.
- **LCD Display:** Shows track number, recording status, and battery level.

# WHY CHOOSE KLIM K7?



Cassette to MP3  
Digital Converter



Tape Player



Recorder  
(to SD card)



Figure 3: Front view of the KLIM K7 with controls.

## SETUP

- 1. Charge the Battery:** Connect the supplied USB-C cable to the player's USB-C port and to a compatible USB power adapter (not included) or computer USB port. The device has a 1000mAh rechargeable battery and typically requires 2 hours for a full charge.
- 2. Insert SD Card:** Locate the SD card slot on the side of the player. Gently insert the included 16GB Micro SD card until it clicks into place. Ensure it is inserted correctly to avoid damage.
- 3. Power On:** Slide the ON/OFF switch to the 'ON' position to power on the device.



Figure 4: Charging the KLIM K7 via USB-C.

## OPERATING INSTRUCTIONS

---

### Playing Cassette Tapes

1. Open the cassette compartment.
2. Insert a cassette tape and close the compartment securely.
3. Press the 'PLAY' button on the top of the device to start playback.
4. Adjust volume using the volume dial on the side.
5. Use 'F.FWD' (Fast Forward) and 'F.REW' (Fast Rewind) buttons to navigate the tape.
6. Press 'STOP' to end playback.

### Converting Cassette to MP3

The KLIM K7 allows direct conversion of cassette audio to MP3 files on the inserted SD card.

1. Ensure an SD card is inserted and the device is powered on.
2. Insert the cassette tape you wish to convert.
3. Press the 'PLAY' button on the top to start the cassette.
4. Long press the 'RECORD' button (red dot) on the front panel. The LCD will show 'REC' and a timer will start, indicating recording is active.
5. Press the 'RECORD' button again to stop the recording. The recorded audio will be saved as an MP3 file on the SD card.
6. To transfer files to a computer, remove the SD card and use the included SD card reader.



Figure 5: Steps for Cassette to MP3 conversion.

Video 1: Demonstrating the USB C Cassette to MP3 Converter functionality.

## Using the Built-in Microphone & Speaker

The KLIM K7 features a built-in microphone for direct audio recording and an integrated speaker for playback.

1. Ensure an SD card is inserted.
2. Long press the 'RECORD' button (red dot) on the front panel. The LCD will show 'REC' and a timer will start.
3. Speak into the built-in microphone to record your voice or surrounding audio.
4. Press the 'RECORD' button again to stop recording.
5. To play back recordings, use the navigation buttons to select the desired file on the SD card and press 'PLAY'.

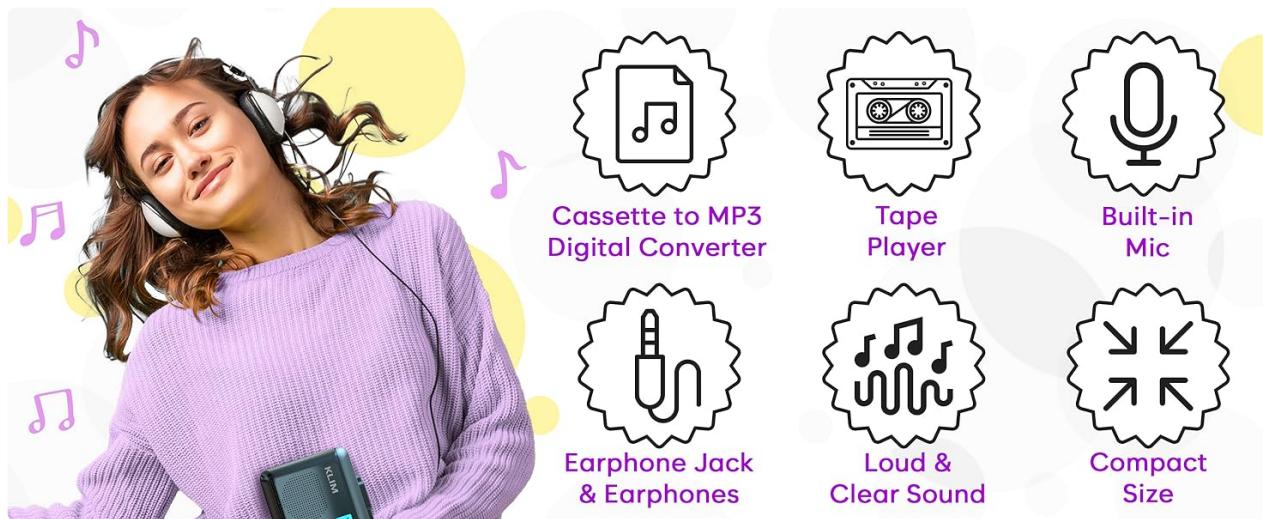


Figure 6: Recording audio using the built-in microphone.

Video 2: Short demonstration of the Bluetooth Cassette Recorder.

## Using as an SD Card Music Player

The KLIM K7 can also play MP3 files directly from the SD card.

1. Ensure an SD card with MP3 files is inserted.
2. Use the navigation buttons (forward/backward arrows) to browse through the MP3 files on the SD card.
3. Press 'PLAY' to start playback of the selected MP3 file.

## Connecting Earphones and Bluetooth

For private listening, plug the included KLIM Fusion earphones into the 3.5mm earphone jack. The built-in speaker will automatically mute.



*Figure 7: Enjoying music with included earphones.*

The KLIM K7 also supports Bluetooth connectivity for wireless earphones or speakers.

1. Turn on your Bluetooth headphones or speaker and set them to pairing mode.
2. On the KLIM K7, press and hold the Bluetooth button (usually indicated by a 'BT' or Bluetooth symbol). The indicator light will flash blue.
3. Once connected, the indicator light will remain solid blue.

*Video 3: Guide on how to connect Bluetooth earphones to the device.*

*Video 4: Overview of a Bluetooth Cassette Tape Player, demonstrating general use.*

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Do not use liquid cleaners or aerosols.
- **Cassette Head Cleaning:** Periodically clean the cassette player's head and pinch rollers with a cotton swab lightly dampened with isopropyl alcohol to ensure optimal sound quality and tape longevity.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For long-term storage, charge the battery to about 50% every few months to maintain battery health.

## TROUBLESHOOTING

- **No Power:** Ensure the battery is charged. Connect the USB-C charging cable and allow it to charge for at least 30 minutes before attempting to power on again.
- **Poor Sound Quality (Cassette):** Clean the cassette player's head and pinch rollers. Ensure the cassette tape itself is in good condition. Old or degraded tapes may produce poor audio.
- **Recording Issues:** Check if the SD card is properly inserted and has sufficient free space. Ensure the 'RECORD' button is long-pressed to initiate recording.
- **Bluetooth Pairing Failure:** Ensure your Bluetooth headphones/speaker are in pairing mode and within

range. Turn off any other nearby Bluetooth devices that might interfere with the pairing process.

- **SD Card Not Recognized:** Reinsert the SD card. Ensure the card is not damaged. Try formatting the SD card (this will erase all data) on a computer if issues persist.

## SPECIFICATIONS

- **Product Dimensions:** 4.76 x 3.61 x 1.56 inches
- **Item Weight:** 7.7 ounces
- **Manufacturer:** KLIM
- **Item Model Number:** Cassette Player (K7)
- **Batteries:** 1 Lithium Ion battery required (included), 1000mAh
- **Charging:** Type-C USB (DC 5V, 0.6A)
- **Storage:** Supports Micro SD Card (16GB included)
- **Connectivity:** 3.5mm Earphone Jack, Bluetooth
- **Features:** Cassette Playback, MP3 Conversion to SD, Built-in Microphone, Built-in Speaker



Figure 8: Dimensions and portability of the KLIM K7.

## WARRANTY AND SUPPORT

KLIM is committed to producing quality electronics built to last. The KLIM K7 comes with a 5-year assurance. If you encounter any problems, please contact KLIM customer support for assistance. Our team of specialists is available to answer your questions within 24 hours.

For further support, visit the official KLIM website or refer to the contact information provided in your product packaging.