

[Manuals.plus](#) /

› [ELYKEN](#) /

› ELYKEN 2-Section 100L Rolling Laundry Sorter (Model HLC10) Instruction Manual

ELYKEN HLC10

ELYKEN 2-Section 100L Rolling Laundry Sorter (Model HLC10) Instruction Manual

PRODUCT OVERVIEW

This manual provides instructions for the ELYKEN 2-Section 100L Rolling Laundry Sorter, Model HLC10. This product is designed to help organize and transport laundry efficiently within your home. It features a durable steel frame, a removable and washable canvas liner, and smooth-rolling wheels for ease of use.



Image: The ELYKEN 2-Section 100L Rolling Laundry Sorter in a home setting.

Key Features:

- **Spacious Capacity:** 100L volume, suitable for a week's laundry.
- **2-Section Sorting:** Allows for easy separation of laundry (e.g., lights and darks).
- **Removable Liner Bag:** Machine washable canvas liner for convenient transport and cleaning.
- **Rolling Wheels:** Four casters, two with brakes, for easy movement and secure placement.
- **Durable Construction:** Sturdy steel frame with rust-resistant powder coating and PVC mesh.

Two Spacious Compartments

Accommodates a week's laundry

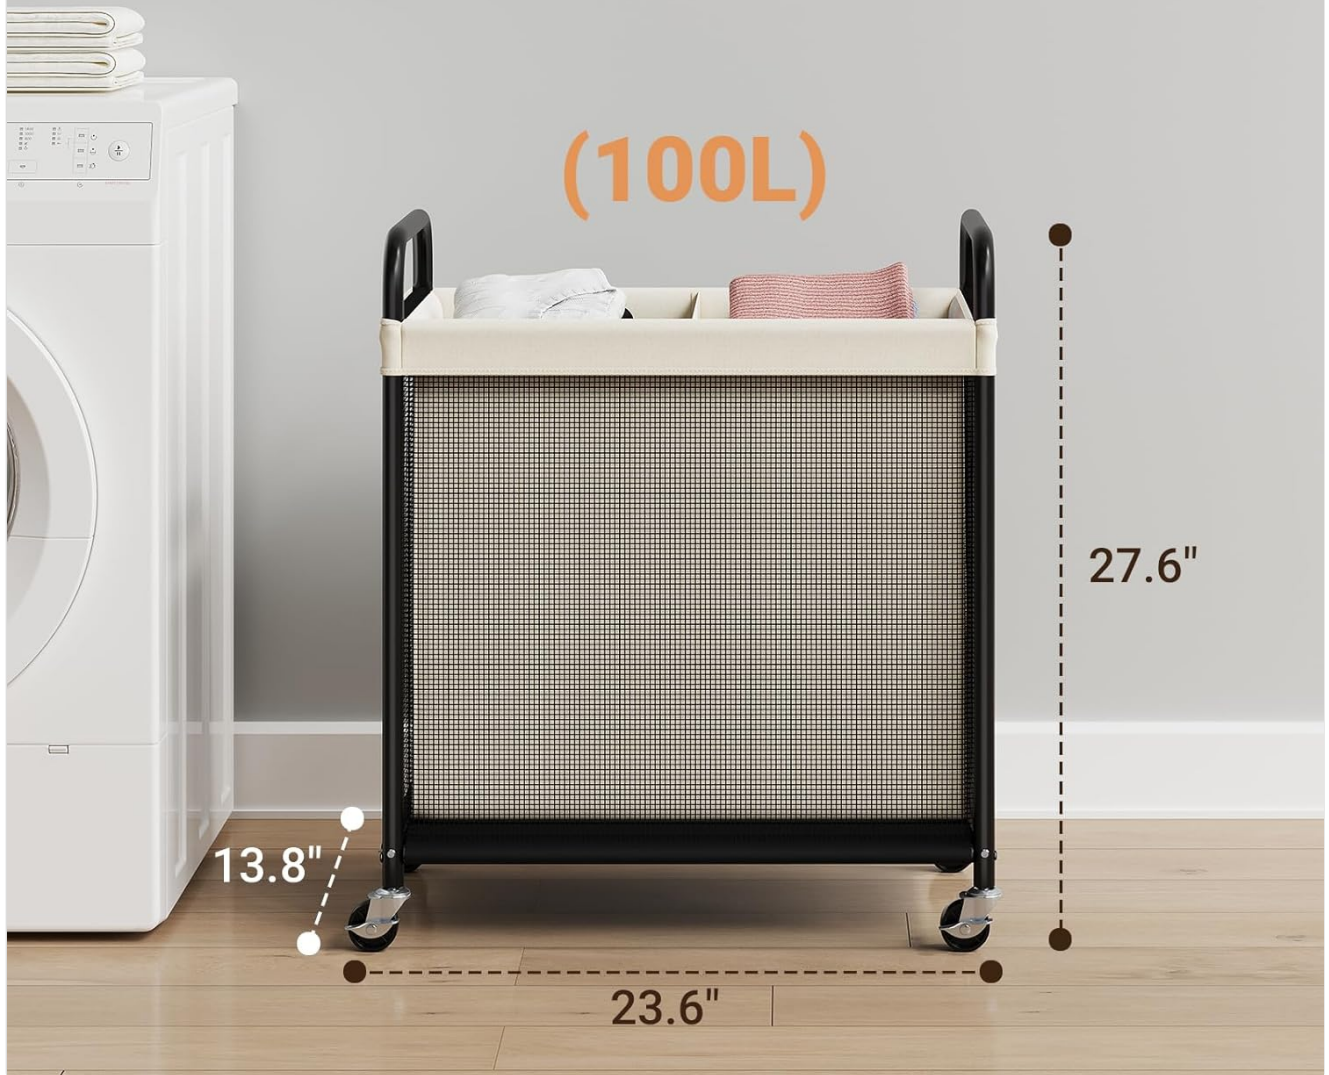


Image: Visual representation of the laundry sorter's dimensions (23.6" L x 13.8" W x 27.6" H) and 100L capacity.

SETUP INSTRUCTIONS

Please follow these steps to assemble your ELYKEN Laundry Sorter. Ensure all components are present before beginning assembly.

Components:

- Steel Frame components
- PVC Mesh outer bag
- Canvas Liner Bag (2-section)
- 4 Wheels (2 with brakes)
- Assembly hardware (screws, wrench, etc. - typically included)

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.

Verify that all listed components are present.

2. **Assemble the Base Frame:** Connect the horizontal and vertical steel frame components to form the base structure. Secure them using the provided hardware.
3. **Attach Wheels:** Insert the four wheels into the designated slots on the bottom of the frame. Ensure the two wheels with brakes are positioned on the same side for easier access. Press firmly until they click into place.
4. **Install PVC Mesh Outer Bag:** Slide the PVC mesh outer bag onto the assembled frame. Ensure it is properly aligned and secured around the frame.
5. **Insert Canvas Liner Bag:** Place the 2-section canvas liner bag inside the PVC mesh outer bag, aligning the top edges with the frame's handles. The liner should fit snugly within the two sections.
6. **Final Check:** Ensure all connections are secure and the hamper stands stably. Test the wheel brakes.

OPERATING INSTRUCTIONS

Sorting Laundry:

The ELYKEN Laundry Sorter features two distinct sections to facilitate easy sorting of your clothes. Utilize one section for light-colored garments and the other for dark-colored garments to prevent color bleeding during washing.

2 Sections for Sorting Clothes

Save time, no more mixed-up laundry!




Image: A family sorting clothes into the two sections of the laundry hamper, labeled 'Light' and 'Dark'.

Using the Removable Liner Bag:

The canvas liner bag is designed for convenience. When it's time to do laundry, simply lift the liner bag out of the frame using its integrated handles. This allows you to transport your sorted laundry directly to the washing machine without moving the entire sorter.



Removable Liner Bag with Handles

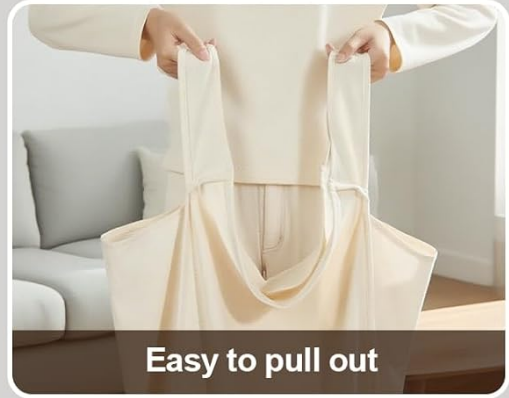

Easy to pull out



Durable canvas



Machine Washable

Image: A person easily pulling out the removable canvas liner bag from the laundry sorter, highlighting its handles and machine washable feature.

Moving and Locking the Sorter:

The laundry sorter is equipped with four 360-degree rotating wheels for effortless mobility. To move the sorter, simply push or pull it by the metal handles. To secure the sorter in place, press down on the levers of the two braked wheels until they lock. To release, lift the levers.

Easy To Move With Wheels & Metal Handles



360°

360° Rotation



2 Wheels with Brakes



Smooth rolling

Image: A person moving the laundry sorter, illustrating the 360-degree rotation of wheels and the brake function.

MAINTENANCE

Cleaning the Canvas Liner Bag:

The canvas liner bag is machine washable. For best results, wash in cold water on a gentle cycle with mild detergent. Air dry or tumble dry on low heat. Do not bleach.

Cleaning the Frame and PVC Mesh:

Wipe the steel frame and PVC mesh outer bag with a damp cloth and mild soap. Avoid abrasive cleaners that could damage the finish. Ensure all parts are dry before reassembling or using.

PVC Mesh Outer Bag

Can be used independently



Clothes



Scarves



Toys



Towel



Balls



Yoga Mats



Image: The PVC mesh outer bag shown holding various items, demonstrating its independent use and durability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wheels not rolling smoothly.	Debris caught in wheels; wheels locked; loose attachment.	Check for and remove any debris. Ensure brakes are disengaged. Verify wheels are securely attached to the frame.
Liner bag does not fit correctly.	Liner is not properly aligned or inserted.	Remove the liner bag and reinsert, ensuring the top edges are aligned with the frame and the divider is centered.
Frame feels unstable.	Loose connections in the frame assembly.	Check all screws and connections. Tighten any loose hardware. Ensure all frame components are fully engaged.

SPECIFICATIONS

- **Model Number:** HLC10
- **Product Dimensions:** 23.6" L x 13.8" W x 27.6" H
- **Capacity:** 100 Liters
- **Color:** Beige
- **Material:** Alloy Steel, Canvas, PVC Mesh
- **Item Weight:** 7.3 pounds
- **Special Features:** Handle, Removable Liner, Washable, Wheeled
- **Number of Sections:** 2

WARRANTY AND SUPPORT

Specific warranty details for the ELYKEN 2-Section 100L Rolling Laundry Sorter (Model HLC10) are not provided in this document. For warranty information, product support, or to inquire about replacement parts, please contact ELYKEN customer service directly through their official website or the retailer where the product was purchased.

Always refer to the packaging or the official ELYKEN website for the most current and detailed warranty and support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question