

[Manuals.plus](#) /

› [HONOR](#) /

› HONOR Choice ROS-ME01 Wireless Bluetooth On-Ear Headphones User Manual

HONOR ROS-ME01

HONOR Choice ROS-ME01 Wireless Bluetooth On-Ear Headphones User Manual

Model: ROS-ME01

PRODUCT OVERVIEW

The HONOR Choice ROS-ME01 Wireless Bluetooth On-Ear Headphones are designed to deliver high-quality audio with advanced noise cancelling capabilities. Featuring an 80-hour battery life and quick charge functionality, these headphones provide extended listening pleasure and clear call quality. This manual provides essential information for setup, operation, maintenance, and troubleshooting.



Image: HONOR Choice ROS-ME01 On-Ear Headphones. These black headphones feature soft earcups and an adjustable headband, designed for comfort and extended wear. The image highlights the sleek design and robust build of the device.

1. Unboxing and Initial Charge

Carefully remove the headphones and all accessories from the packaging. Before first use, it is recommended to fully charge the headphones.

- Connect the provided USB-C charging cable to the charging port on the headphones.
- Connect the other end of the cable to a compatible USB power adapter (not included) or a computer's USB port.
- The LED indicator on the headphones will show the charging status. A full charge typically takes approximately 2 hours.

2. Bluetooth Pairing

To connect your headphones to a device via Bluetooth:

1. Ensure the headphones are powered off.
2. Press and hold the Power button for approximately 5-7 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, computer), go to the Bluetooth settings.
4. Search for available devices and select "HONOR Choice ROS-ME01" from the list.
5. Once connected, the LED indicator will flash blue slowly or turn solid blue (depending on model variant).
6. If prompted for a password, enter "0000".

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the Power button for 2 seconds until the LED indicator flashes blue.
- **Power Off:** Press and hold the Power button for 3 seconds until the LED indicator flashes red and then turns off.

Music Playback

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Press and hold the Volume Up (+) button for 2 seconds.
- **Previous Track:** Press and hold the Volume Down (-) button for 2 seconds.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.

Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.
- **Redial Last Number:** Double-press the Multi-function button.

Noise Cancelling (ANC)

- **Activate/Deactivate ANC:** Press the ANC button once. The LED indicator for ANC will illuminate when active.

MAINTENANCE

Cleaning

- Use a soft, dry, lint-free cloth to clean the surfaces of the headphones.
- For earcups, gently wipe with a slightly damp cloth if necessary, then dry immediately.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Avoid getting moisture into any openings.

Storage

- Store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every few months to preserve battery life.

Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the battery to high temperatures or direct heat.
- Use only the provided charging cable or a certified equivalent.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing blue/red). Turn device Bluetooth off and on. Move headphones closer to device. Forget device on your phone and re-pair.
No sound or low volume.	Volume too low on headphones or device; headphones not connected.	Increase volume on both headphones and connected device. Reconnect headphones to device.
Noise Cancelling not working effectively.	ANC not activated; improper fit.	Ensure ANC is activated. Adjust headphones for a snug fit over your ears.

SPECIFICATIONS

Model: ROS-ME01

Brand: HONOR

Type: Wireless Bluetooth On-Ear Headphones

Color: Black

Battery Life: Up to 80 hours (playback time, actual results may vary)

Battery Type: Lithium Polymer (included)

Charging Port: USB-C (cable included)

Features: Noise Cancelling, High Sound Quality, Quick Charge, Clear Talk Quality

Dimensions (Package): 22.4 x 20.3 x 7.2 cm

Weight (Item): 0.45 Kilograms (451 g)

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official HONOR website. Keep your purchase receipt as proof of purchase for warranty claims.

For technical support or further assistance, please contact HONOR customer service through their official support channels. Contact details can typically be found on the HONOR website or in the product packaging.

Note: Specifications and features are subject to change without notice.

© 2025 HONOR. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question