

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fischer](#) /

› [Fischer Air Fryer Dual Grill 6L \(Model 37005-104677\) Instruction Manual](#)

## Fischer 37005-104677

# Fischer Air Fryer Dual Grill 6L Instruction Manual

Model: 37005-104677

## 1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances.
- Do not immerse the cord, plug, or appliance in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Supervise children closely when the appliance is in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries.
- Do not place the appliance near hot gas or electric burners, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Avoid contact with hot surfaces. Use handles or knobs.

## 2. PRODUCT OVERVIEW

The Fischer Air Fryer Dual Grill 6L is a versatile kitchen appliance designed for healthier cooking. It combines air frying technology with a dual grill function, offering multiple cooking methods in one compact unit.

### Key Features:

- **Dual Resistance:** Equipped with both superior and inferior heating elements for uniform heat distribution and consistent cooking results.
- **Large Capacity:** A 6-liter basket accommodates larger portions, including a full-sized pizza.
- **4-in-1 Functionality:** Capable of frying, baking, reheating, and dehydrating.
- **9 Pre-programmed Recipes:** One-touch access to common cooking settings via the touchscreen.
- **Touch Screen Control:** Intuitive digital interface for precise temperature and time adjustments.

- **Adjustable Temperature:** Temperature range from 60°C to 200°C (140°F to 392°F).
- **60-Minute Timer:** Features an automatic shut-off for convenience and safety.
- **High Power:** Up to 2600W for rapid heating and efficient cooking.
- **Non-stick Basket:** Ensures easy food release and simplifies cleaning.

## Components:

Familiarize yourself with the main parts of your Air Fryer Dual Grill.



**Image 2.1:** Front view of the Fischer Air Fryer Dual Grill 6L. This image shows the sleek black exterior and the control panel.



**Image 2.2:** The air fryer with its cooking basket partially open, revealing the interior space and handle.



**Image 2.3:** A close-up view of the removable cooking basket, featuring the integrated grill plate for various cooking styles.

### **3. SETUP AND FIRST USE**

## Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.
3. Retain packaging for future storage or transport if necessary.

## Cleaning Before First Use:

1. Wipe the exterior of the appliance with a damp cloth.
2. Wash the cooking basket and grill plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Do not immerse the main unit in water.

## Placement:

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance to allow for proper air circulation.
- Do not place the appliance directly under cabinets or near flammable materials.

## Power Connection:

- Plug the power cord into a grounded electrical outlet. The appliance is designed for 110V power supply.

## 4. OPERATING INSTRUCTIONS

### General Operation:

1. Place food into the cooking basket. Do not overfill.
2. Slide the cooking basket back into the appliance until it clicks into place.
3. Press the power button on the touchscreen to turn on the appliance.
4. Select a pre-programmed setting or manually adjust the temperature and time.
5. Press the start button to begin cooking.
6. The timer will count down, and the appliance will automatically shut off when cooking is complete.
7. Carefully pull out the basket and remove food using heat-resistant tongs.

### Using Pre-programmed Settings:

- The appliance features 9 pre-programmed settings for common dishes.
- After powering on, tap the desired program icon on the touchscreen. The appliance will automatically set the optimal temperature and time.
- You can adjust the pre-set time or temperature if needed before starting.

### Manual Temperature and Time Adjustment:

- After powering on, use the temperature control buttons to set the desired temperature between 60°C and 200°C.
- Use the timer control buttons to set the cooking time, up to 60 minutes.
- Press the start button to begin cooking.

### Specific Cooking Functions:

The Dual Grill function allows for grilling directly in the basket.



**Image 4.1:** A whole pizza being cooked on the grill plate within the air fryer basket, demonstrating the appliance's capacity.



**Image 4.2:** Multiple cooked burgers resting on the grill plate, showcasing the grilling capability of the air fryer.



**Image 4.3:** A colorful mix of vegetables, including broccoli, carrots, and onions, being air-fried in the basket.

- **Frying:** Ideal for crispy results with minimal oil. Ensure food is evenly coated with a small amount of oil for best results.
- **Baking:** Use for items like cakes, muffins, or casseroles.
- **Reheating:** Quickly warm up leftovers while maintaining texture.
- **Dehydrating:** Use lower temperatures and longer times to dehydrate fruits, vegetables, or jerky.
- **Pizza Function:** The 6L capacity allows for cooking a whole pizza. Place the pizza directly on the grill plate.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

### After Each Use:

1. Unplug the air fryer and allow it to cool completely before cleaning.

2. Remove the cooking basket and grill plate.
3. Wash the basket and grill plate with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak them in hot soapy water for about 10 minutes.
4. The non-stick coating facilitates easy cleaning. Avoid using metal utensils or abrasive cleaning materials that could damage the coating.
5. Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
6. Clean the interior of the appliance with a damp cloth if necessary. Ensure no water enters the heating element area.
7. Dry all parts thoroughly before reassembling or storing.

### Storage:

- Store the cleaned and dried appliance in a cool, dry place.
- Do not wrap the power cord tightly around the appliance.

## 6. TROUBLESHOOTING

If you encounter issues with your Fischer Air Fryer Dual Grill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the problem persists, contact customer support.
Food is not cooked evenly.	Basket overloaded; incorrect temperature/time; food not shaken/flipped.	Do not overload the basket. Adjust temperature and time as needed. For best results, shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty food cooking.	Clean the basket and grill plate thoroughly after each use. For fatty foods, place a small amount of water in the bottom of the outer pan to prevent smoke.
Food is not crispy.	Insufficient oil; basket overloaded; incorrect temperature/time.	Lightly coat food with oil. Do not overload. Increase cooking time or temperature slightly.
Basket does not slide in properly.	Basket not aligned correctly; food obstructing.	Ensure the basket is empty and aligned with the guides. Push firmly until it clicks into place.

## 7. SPECIFICATIONS

Feature	Detail
Brand Name	Fischer
Manufacturer	FISCHER
Model	37005-104677
Color	Black

Feature	Detail
Model Name	AIR FRYER DUAL GRILL 6L
Special Features	Programmable
Voltage	110 Volts
Power Source Type	Electric Power
Material Type	Polypropylene (PP)
Product Dimensions	51 x 42.5 x 19.5 cm (20.1 x 16.7 x 7.7 inches)
Product Weight	6.8 kilograms (14.99 lbs)
Capacity	6 Liters
Inmetro Registration	BRA25/00171
EAN	7896513323193

## 8. WARRANTY AND SUPPORT

Fischer products are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official Fischer website. For technical assistance, spare parts, or service inquiries, please contact Fischer customer support. Keep your proof of purchase (receipt) for warranty claims.