

MyMealivos 50W Megaphone Speaker

MyMealivos 50W Megaphone Speaker User Manual

Model: 50W Megaphone Speaker

Brand: MyMealivos

1. INTRODUCTION

Thank you for choosing the MyMealivos 50W Megaphone Speaker. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before operation and retain it for future reference.

Safety Information

- Do not expose the megaphone to extreme temperatures, direct sunlight, or high humidity.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the megaphone yourself. Contact qualified service personnel.
- Ensure proper battery installation and disposal according to local regulations.
- Avoid pointing the megaphone directly at people's ears at close range when operating at high volume to prevent hearing damage.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- MyMealivos 50W Megaphone Speaker
- Rechargeable Battery (1800mAh)
- Charging Cable
- Detachable Shoulder Strap
- Handheld Microphone

3. PRODUCT OVERVIEW AND CONTROLS

Familiarize yourself with the components and controls of your megaphone.



Figure 3.1: MyMealivos 50W Megaphone Speaker with accessories.

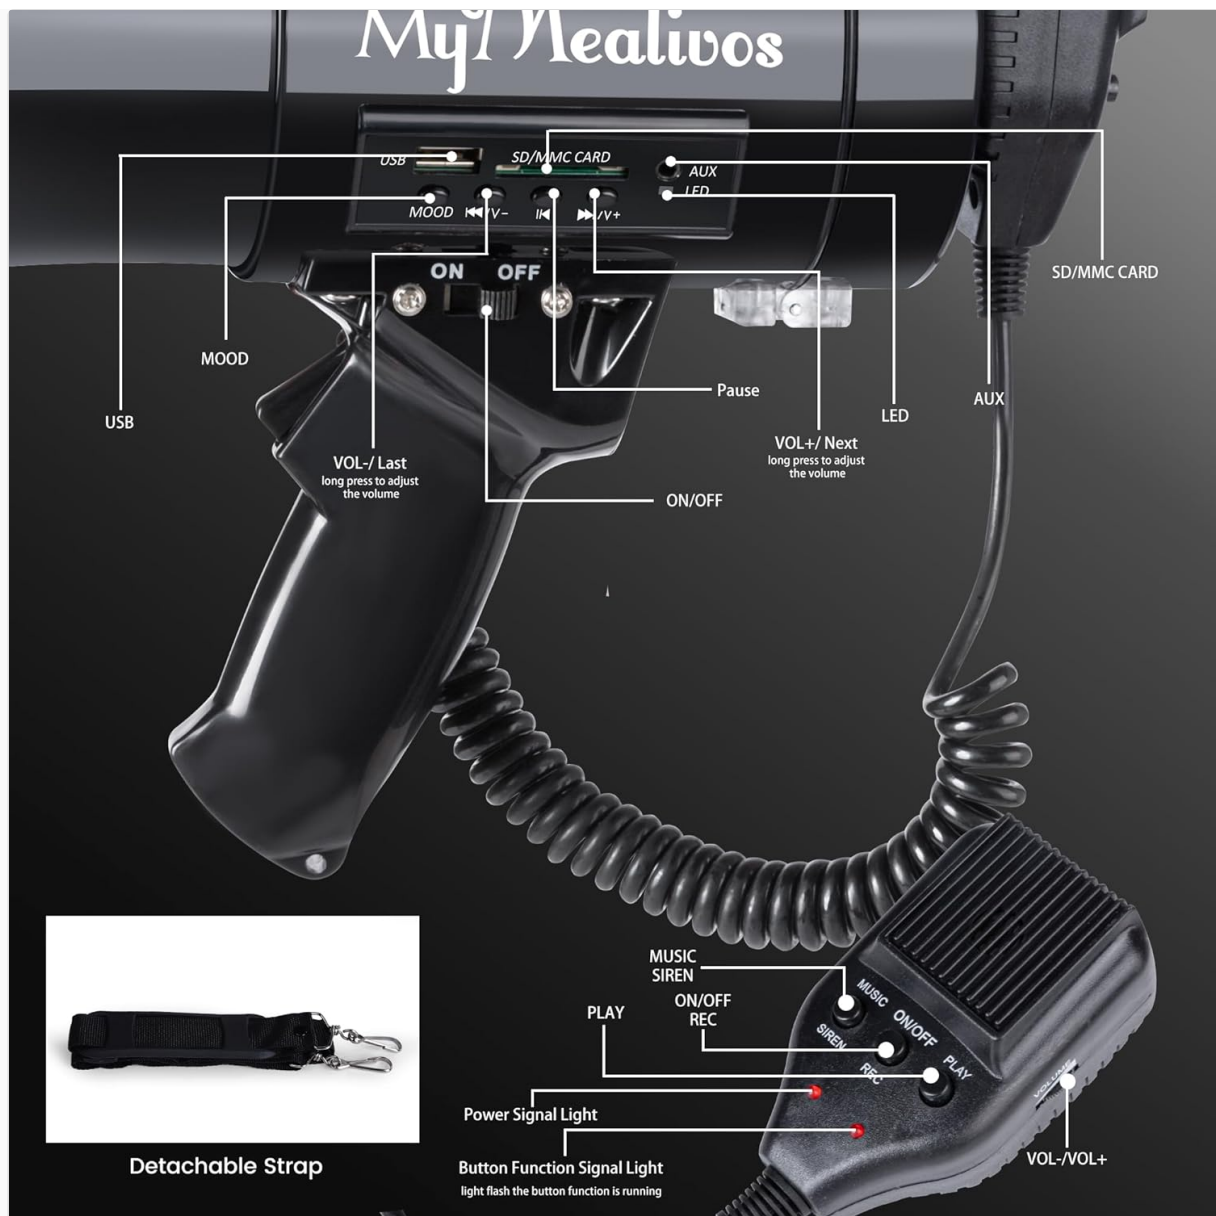


Figure 3.2: Control panel and microphone functions.

Control Descriptions:

- **ON/OFF Switch (Main Unit):** Powers the megaphone on or off.
- **Volume Controls (Main Unit):** Adjusts the overall output volume. Long press for continuous adjustment.
- **MODE Button (Main Unit):** Switches between AUX, USB, and SD/MMC card input modes.
- **USB Port:** For connecting USB flash drives for audio playback.
- **SD/MMC Card Slot:** For inserting SD or MMC cards for audio playback.
- **AUX Input:** 3.5mm jack for connecting external audio devices.
- **Handheld Microphone:**
 - **ON/OFF (Mic):** Activates/deactivates the microphone for voice amplification.
 - **PLAY Button:** Plays recorded messages or audio from media inputs.
 - **REC Button:** Initiates recording of voice messages.
 - **SIREN Button:** Activates the built-in siren sound.
 - **VOL+/- Buttons (Mic):** Adjusts microphone volume.
 - **Power Signal Light:** Indicates power status.

4. SETUP

4.1 Battery Installation

The megaphone can be powered by the included rechargeable battery or 8 C-cell batteries (not included).



Figure 4.1: Battery compartment for rechargeable or C-cell batteries.

1. Locate the battery compartment on the side of the megaphone.
2. Open the battery compartment cover.
3. **For Rechargeable Battery:** Insert the provided rechargeable battery, ensuring the correct polarity.
4. **For C-cell Batteries:** Insert 8 C-cell batteries, observing the polarity markings inside the compartment.
5. Close the battery compartment cover securely.

4.2 Charging the Rechargeable Battery

The included rechargeable battery takes approximately 4-5 hours for a full charge, providing 6-10 hours of use.

1. Connect the charging cable to the charging port on the megaphone.
2. Plug the other end of the charging cable into a suitable power source.

3. The power indicator light will show charging status (refer to indicator light section for details).
4. Once fully charged, disconnect the charging cable.

4.3 Attaching the Shoulder Strap



Figure 4.2: Detachable shoulder strap.

1. Locate the metal loops on the megaphone body.
2. Attach the clips of the detachable shoulder strap to these loops.
3. Adjust the strap length for comfortable carrying.

5. OPERATION

5.1 Power On/Off

1. To power on, slide the main ON/OFF switch on the megaphone body to the 'ON' position.
2. To power off, slide the main ON/OFF switch to the 'OFF' position.

5.2 Voice Amplification

HIGH POWERED

50 WATT POWER OUTPUT MEGAPHONE



Figure 5.1: Using the megaphone for voice amplification.

1. Ensure the main ON/OFF switch is in the 'ON' position.
2. Slide the ON/OFF switch on the handheld microphone to the 'ON' position.
3. Speak clearly into the microphone.
4. Adjust the volume using the VOL+/- buttons on the microphone or the main volume controls on the megaphone body.

5.3 Siren Function

The siren function is designed to attract attention quickly.

1. Ensure the main ON/OFF switch is in the 'ON' position.
2. Press the **SIREN** button on the handheld microphone. The siren sound will activate.
3. Press the **SIREN** button again to deactivate the siren.

5.4 Recording and Playback

The megaphone supports recording voice messages up to 240 seconds.

1. Ensure the main ON/OFF switch is in the 'ON' position.
2. Press the **REC** button on the handheld microphone to start recording. The power signal light may

indicate recording status.

3. Speak clearly into the microphone.
4. Press the **REC** button again to stop recording.
5. To play back your recording, press the **PLAY** button on the handheld microphone.
6. Press **PLAY** again to stop playback.

5.5 Media Playback (AUX/USB/SD Card)

The megaphone supports audio playback from AUX, USB, and SD/MMC card inputs.

1. Ensure the main ON/OFF switch is in the 'ON' position.
2. **For AUX Input:** Connect your external audio device (e.g., smartphone, MP3 player) to the AUX port using a 3.5mm audio cable. Press the **MODE** button until 'AUX' mode is selected.
3. **For USB Input:** Insert a USB flash drive containing audio files into the USB port. Press the **MODE** button until 'USB' mode is selected.
4. **For SD/MMC Card Input:** Insert an SD or MMC card containing audio files into the SD/MMC card slot. Press the **MODE** button until 'SD' mode is selected.
5. Use the PLAY/PAUSE and VOL+/- buttons on the main unit to control playback and volume.

6. MAINTENANCE

6.1 Cleaning

- Wipe the exterior of the megaphone with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

6.2 Storage

- Store the megaphone in a cool, dry place away from direct sunlight.
- If storing for an extended period, remove the rechargeable battery or C-cell batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound output	<ul style="list-style-type: none"> • Megaphone not powered on. • Low battery. • Volume too low. • Microphone switch off. 	<ul style="list-style-type: none"> • Ensure main ON/OFF switch is 'ON'. • Charge or replace batteries. • Increase volume. • Slide microphone switch to 'ON'.
Recording not working	<ul style="list-style-type: none"> • REC button not pressed correctly. • Recording time exceeded (max 240s). 	<ul style="list-style-type: none"> • Press REC button firmly to start/stop. • Ensure recording is within the 240-second limit.
Media playback issues (USB/SD/AUX)	<ul style="list-style-type: none"> • Incorrect mode selected. • Corrupted media files. • Loose cable connection (AUX). 	<ul style="list-style-type: none"> • Press MODE button to select correct input. • Ensure media files are compatible. • Check AUX cable connection.
Siren not activating	<ul style="list-style-type: none"> • SIREN button not pressed. • Megaphone not powered on. 	<ul style="list-style-type: none"> • Press the SIREN button on the microphone. • Ensure main ON/OFF switch is 'ON'.

8. SPECIFICATIONS

Feature	Detail
Power Output	50 Watts
Voice Coverage	Up to 1600 feet
Siren Coverage	Up to 1200 yards
Recording Time	Up to 240 seconds
Power Supply	1800mAh Rechargeable Battery (included) or 8 x C Batteries (not included)
Charging Time	4-5 hours (for rechargeable battery)
Usage Time	6-10 hours (with rechargeable battery)
Input Options	AUX, USB, SD Card
Dimensions (L x W x H)	Approximately 14 x 10 x 9 inches (Package)
Weight	Approximately 1.36 Kilograms (Package)

9. WARRANTY AND SUPPORT

MyMealivos products are designed for reliability and performance. For warranty information, technical support, or any questions regarding your megaphone, please refer to the contact information provided with your purchase or visit the official MyMealivos website.