



[Manuals.plus](#) /

> [WDZP](#) /

> WDZP Treadmill Replacement Remote Control User Manual for LONTEK CW1F U18F Models

WDZP B0FG7LGJD9

WDZP Treadmill Replacement Remote Control User Manual

Model: B0FG7LGJD9 | Compatible with LONTEK CW1F U18F Treadmills

INTRODUCTION

This manual provides detailed instructions for the WDZP replacement remote control, designed for use with LONTEK CW1F and U18F treadmills. Please read this manual thoroughly before using the remote control to ensure proper operation and to maximize your workout experience.

Treadmill and Walking Pad Replacement Remote Control



Perfectly compatible with your device

Image: The WDZP Treadmill Remote Control shown alongside a person using a treadmill, illustrating its intended use.

COMPATIBILITY

This replacement remote control is specifically designed to be compatible with the following treadmill models:

- LONTEK CW1F Treadmill
- LONTEK U18F Treadmill

Important Note: Ensure your treadmill model matches the listed compatible models. Remote controls can vary significantly in appearance and button layout. This remote is not universally compatible with all treadmill brands or models. Refer to the image below for visual confirmation of the remote's appearance.

No Setup • No App • No Stress



Image: An illustration demonstrating the process of installing two AAA batteries into the remote control, with a clear indication that batteries are not included.

2. Pairing Instructions

To establish a connection between the remote control and your treadmill, follow these pairing steps:

1. **Turn off the Treadmill's power switch.** Ensure the treadmill is completely powered off at the main switch.
2. **Press and hold the "+" and "-" buttons simultaneously** on the remote control for more than 5 seconds. Continue holding until the remote control's indicator light begins to flash.
3. **Release the buttons.**
4. **Quickly turn on the Treadmill's power.** The treadmill display should show "0:00" once pairing is successful, indicating it is ready for use.

Important Pairing Notes:

- Please pair the remote control within 10 centimeters of the treadmill display screen for optimal signal reception during the pairing process.
- If your treadmill has a red safety lock, you must remove the safety lock before proceeding with the pairing. After successful pairing, re-insert the safety lock back onto the treadmill.
- Some running machines may operate in either automatic or manual modes. This remote control is

designed for use when the treadmill is in manual mode (M). If the treadmill is in automatic mode (A), the remote control may not function.

How To Pairing

1. Turn off the Treadmill's power switch.
2. Press and hold the "+" and "-" buttons at the same time for more than 5 seconds until the remote control light flashes.
3. Release the buttons, quickly turn on the Treadmill's power, and start using when the display shows 0:00.



⚠ Noted



This is treadmill's power button

- ① Please pair the remote control within 10 centimeters of the treadmill display screen.
- ② If there is a red safety lock, during the pairing process, you need to remove the safety lock first before proceeding with the pairing. After the pairing is successful, then place the safety lock back on the treadmill.
- ③ Some running machines have either automatic or manual modes. The remote control can only be used to operate the treadmill when it is in the manual mode (M). In the automatic mode (A), the remote control cannot be used.

Image: A step-by-step visual guide for pairing the remote control with the treadmill, including important notes regarding proximity and safety lock.

OPERATION

The WDZP replacement remote control provides efficient and precise control over your treadmill's functions. It features a simple 5-button layout for easy operation.

- **"+" Button:** Increases speed or incline.
- **"-" Button:** Decreases speed or incline.
- **"M" Button:** Likely for Mode selection or program changes (refer to your treadmill's manual for specific "M" button functionality).
- **"ON/OFF" Button:** Powers the treadmill on or off.

This remote allows you to effortlessly manage your workout pace and settings, enhancing your exercise sessions.

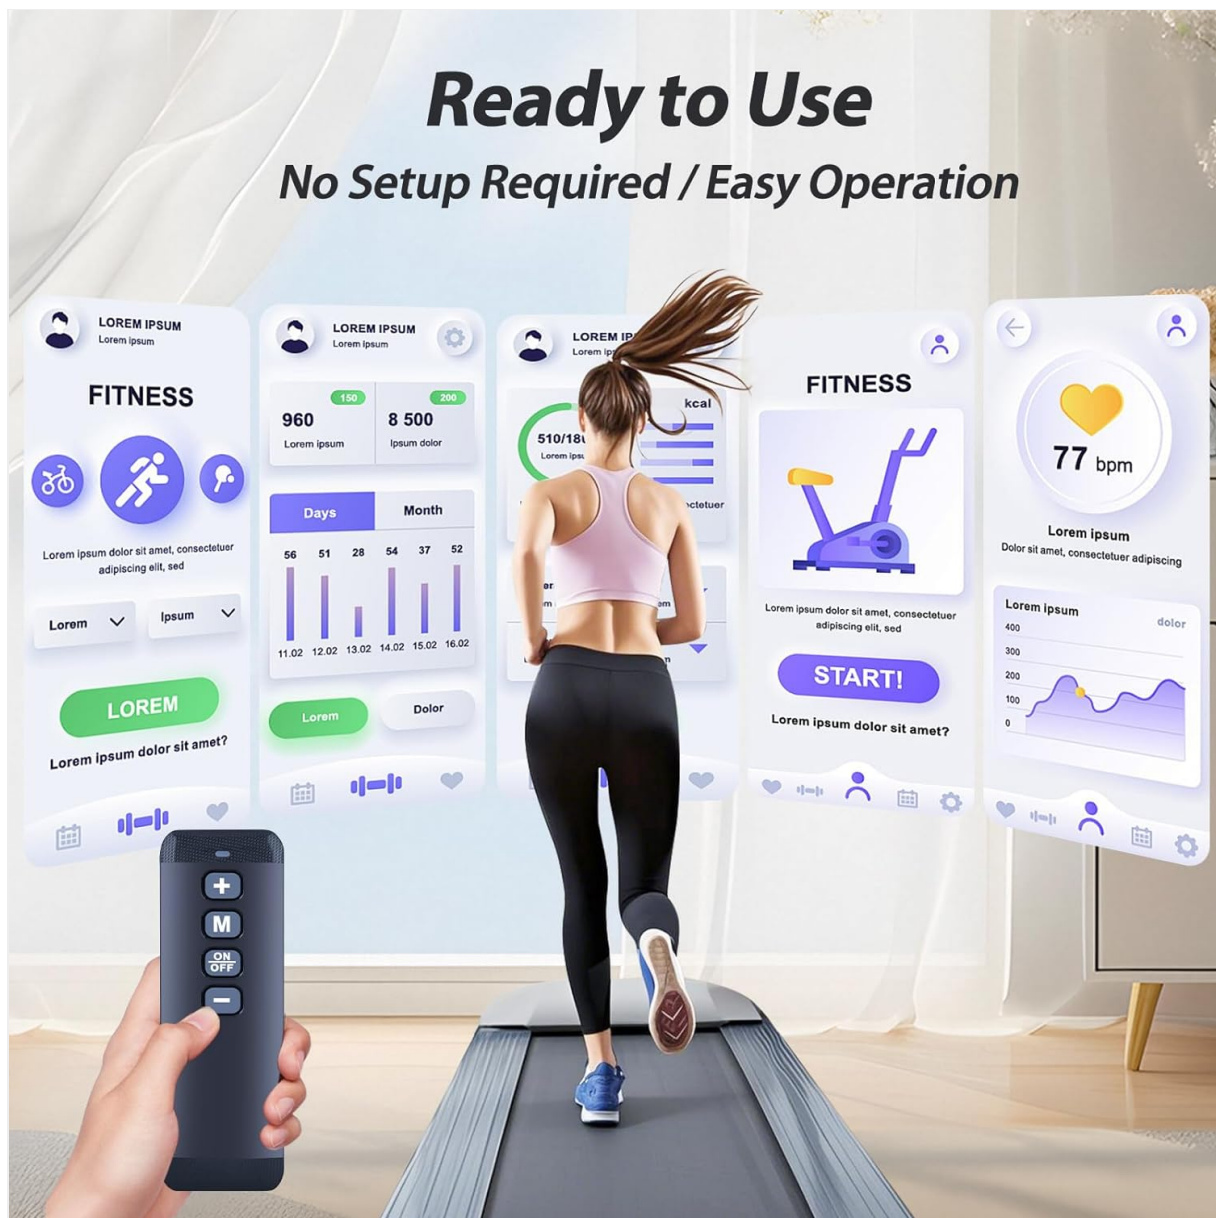


Image: The remote control being held, with a background showing a person running on a treadmill and a digital fitness interface, illustrating the ease of use.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades or if the indicator light does not flash during pairing attempts. Always use new AAA batteries.
- **Storage:** Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Protection:** Avoid dropping the remote control or exposing it to excessive force, which could damage its internal circuitry or casing.

TROUBLESHOOTING

If you encounter issues with your WDZP treadmill remote control, refer to the following common problems

and solutions:

Problem	Solution
Remote control not responding.	Check battery orientation. Replace with new AAA batteries.
Remote control not pairing with treadmill.	Review "Pairing Instructions" carefully. Ensure remote is within 10 cm of the treadmill display. Remove safety lock during pairing. Confirm treadmill is in manual mode (M).
Limited range or intermittent control.	Replace batteries. Ensure a clear line of sight. Minimize other infrared devices nearby.
Buttons not functioning correctly.	Inspect for visible damage. If issues persist after battery replacement and re-pairing, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	WDZP
Model Number	B0FG7LGJD9
Compatible Treadmills	LONTEK CW1F, LONTEK U18F
Connectivity Technology	Infrared
Number of Buttons	5
Maximum Range	40 Feet
Battery Type	2 x 1.5V AAA batteries (not included)
Material	High-quality ABS
Special Feature	Ergonomic design



Image: A diagram illustrating the physical dimensions of the remote control (length, width, thickness).

WARRANTY AND SUPPORT

WDZP provides a warranty for this product to ensure customer satisfaction.

- **Warranty Period:** This product comes with a 1-Year warranty.
- **Coverage:** The warranty covers manufacturing defects and quality problems.
- **Service:** In case of compatibility issues or quality problems, WDZP offers free exchange or refund.

For warranty claims, technical support, or any inquiries regarding your WDZP Treadmill Replacement Remote Control, please contact WDZP customer service through the retailer where the product was purchased or refer to the contact information provided with your product packaging.