

[Manuals.plus](#) /

› [KingSom](#) /

› KingSom Handheld Steam Cleaner Instruction Manual

KingSom Cleaner

KingSom Handheld Steam Cleaner Instruction Manual

Model: Cleaner

1. INTRODUCTION

The KingSom Handheld Steam Cleaner is designed for effective and chemical-free cleaning across various surfaces in your home and car. Utilizing 2500W of power, it generates high-temperature steam up to 248°F (120°C) in just 10 seconds, capable of tackling grease, grime, dust, and stains. Its 6 adjustable steam levels and large 47.3oz water tank provide extended cleaning sessions and precise control.



The image displays the KingSom Handheld Steam Cleaner emitting high-temperature steam to clean a kitchen range hood, highlighting its 2500W power and 10-second fast heat-up.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged before filling or emptying the water tank, or when not in use.
- Do not direct steam at people, animals, or electrical appliances. Steam is extremely hot and can cause burns.
- Keep the appliance out of reach of children and pets.
- Do not immerse the appliance in water or other liquids.
- Use only clean tap water. Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the appliance or create hazardous fumes.
- Exercise caution when handling hot parts and accessories. Allow the appliance to cool completely before storing.
- **Note:** When the steam cleaner is first started, water may flow out of the nozzle for 2-3 seconds before steam

begins to emit. This is normal as the heating tube fills with water. Wait for the steam to stabilize before beginning cleaning.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- KingSom Handheld Steam Cleaner Unit
- Brass Brush
- Nylon Brush
- Plastic Brush
- User Manual
- Additional accessories (e.g., window scraper, fabric steam tool, surface scraper, straight nozzle)

MULTI-FEATURE DETAIL STEAMER FOR CLEANING



Water Inlet



LCD Screen



Upgraded Hose



Bottom Drainage



6 Level Adjustable



This image presents the various cleaning attachments that come with the steam cleaner, such as brass, nylon, and plastic brushes, and different nozzles for diverse cleaning tasks.

4. PRODUCT FEATURES

- **Powerful Steam Generation:** 2500W heating element produces steam up to 248°F (120°C) for deep cleaning and sanitization.
- **Fast Heat-Up:** Ready to use in approximately 10 seconds.
- **6 Adjustable Steam Levels:** Customize steam output for different cleaning tasks and surfaces. Control options include buttons on the handle and on the main unit.
- **LCD Display:** Monitor the selected steam level at a glance for precise control.
- **Large Capacity Water Tank:** A 47.3oz (1400ml) transparent water tank allows for extended cleaning without frequent refills.
- **Chemical-Free Cleaning:** Harnesses the natural power of steam to clean and sanitize without the need for harsh chemicals, making it safe for homes with children, pets, and sensitive individuals.
- **Versatile Accessories:** Includes a variety of brushes and nozzles for cleaning walls, cooktops, smoke lamps, microwave ovens, washing machines, refrigerators, and other hard-to-reach areas.



A detailed view of the steam cleaner's LCD screen, showing the selected steam level, and the control buttons for power and steam adjustment.



This image illustrates the steam cleaner's large 47.3oz transparent water tank, allowing users to easily monitor the water level.

5. SETUP

1. **Unpack the Appliance:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Fill the Water Tank:** Ensure the appliance is unplugged. Open the water inlet cap and fill the transparent water tank with clean tap water. Do not overfill beyond the maximum fill line. Close the cap securely.
3. **Attach Accessories:** Select the appropriate cleaning attachment for your task. Align the attachment with the nozzle and twist or push firmly until it locks into place. Ensure it is securely fastened.
4. **Connect to Power:** Plug the power cord into a grounded electrical outlet.

6. OPERATING INSTRUCTIONS

1. **Power On:** Press the power button on the main unit or the handle. The LCD display will illuminate.
2. **Heat-Up:** The appliance will begin heating. This typically takes about 10 seconds. Wait until the steam is

consistently emitted before starting to clean. As noted in the safety section, some water may initially flow out.

3. **Adjust Steam Level:** Use the '+' and '-' buttons on the handle or the main unit to select one of the 6 adjustable steam levels. The chosen level will be shown on the LCD display. Start with a lower setting for delicate surfaces and increase for tougher stains.
4. **Begin Cleaning:** Direct the nozzle or attached accessory towards the surface to be cleaned. Move the steam cleaner slowly over the area, allowing the steam to penetrate and loosen dirt. For stubborn stains, hold the nozzle closer for a few seconds.
5. **Refilling During Use:** If the water tank runs low, unplug the unit, allow it to cool slightly, and refill as per the setup instructions.
6. **Power Off:** When finished, press the power button to turn off the appliance and unplug it from the outlet.



A person is shown using the KingSom Handheld Steam Cleaner to clean a sofa, with an inset showing the adjustable steam control buttons on the handle.

7. MAINTENANCE

1. **Empty Water Tank:** After each use, ensure the appliance is unplugged and cooled. Open the bottom

drainage hole or water inlet cap to empty any remaining water from the tank.

- 2. **Clean Accessories:** Wash brushes and nozzles with warm water and mild soap. Allow them to air dry completely before storing.
- 3. **Wipe Down Unit:** Wipe the exterior of the steam cleaner with a damp cloth. Do not use abrasive cleaners.
- 4. **Descaling:** Over time, mineral deposits may build up in the heating element, especially in hard water areas. If steam output decreases, descaling may be necessary. Consult the full user manual for specific descaling instructions, typically involving a vinegar solution.
- 5. **Storage:** Store the appliance and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty; Appliance not heated sufficiently; Mineral buildup.	Refill water tank; Allow 10 seconds for heat-up; Perform descaling procedure.
Water dripping from nozzle	Normal during initial 2-3 seconds of operation; Condensation.	Wait for steam to stabilize; This is normal and will reduce as steam flow becomes consistent.
Attachments not staying on	Attachment not properly secured.	Ensure attachment is aligned and twisted/pushed firmly until it locks into place.
Appliance not turning on	Not plugged in; Power outlet issue.	Check power cord connection; Try a different outlet; Contact customer support if issue persists.

9. SPECIFICATIONS

Feature	Detail
Brand	KingSom
Model Name	Cleaner
Wattage	2500 watts
Power Source	AC
Water Tank Capacity	47.3 oz (1400 ml)
Max Steam Temperature	Up to 248°F (120°C)
Heat-Up Time	Approximately 10 seconds
Adjustable Steam Levels	6 levels
Item Weight	4.09 pounds
Package Dimensions	11.61 x 7.17 x 7.01 inches
Special Features	Carry Handle, Compact Design, High Pressure, Large Capacity Tank, Lightweight

10. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the retailer. For technical support or inquiries, please reach out to KingSom customer service through their official channels.