

## Strex SP334

# Strex Airfryer XXL SP334 - 10L Dual Basket Hot Air Fryer User Manual

Model: SP334 | Brand: Strex

## 1. INTRODUCTION

Thank you for choosing the Strex Airfryer XXL SP334. This appliance is designed to cook a variety of foods using hot air circulation, offering a healthier alternative to traditional frying methods. With its dual 5-liter baskets, 10 pre-set programs, and intelligent cooking functions, you can prepare complete meals efficiently. Please read this manual thoroughly before first use to ensure safe and optimal operation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

## 3. PRODUCT OVERVIEW

The Strex Airfryer XXL SP334 features a dual-basket design, allowing for versatile cooking.



**Figure 3.1:** Strex Airfryer XXL SP334 with food in both cooking baskets. This image shows the appliance from the front-right angle, highlighting the two transparent cooking baskets filled with chicken nuggets and french fries, and the digital control panel at the top.

### 3.1 Components

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital display and touch controls for settings.
- **Cooking Baskets (x2):** Removable 5-liter baskets with non-stick coating.
- **Crisper Plates (x2):** Inserted into the baskets for optimal air circulation.
- **Power Cord:** 1.5 meters long for flexible placement.

# DUBBELE AIRFRYER 10L

2 keer zo snel, zonder extra gedoe



**Figure 3.2:** Overview of key features including dual cooking drawers, 2500W power, touchscreen operation, and dishwasher-safe components. The image displays the front of the airfryer with icons representing these features.

## 3.2 Control Panel

The intuitive digital control panel allows for easy adjustment of settings and selection of cooking programs.

# KOKEN MET EEN DRUK OP DE KNOP

Voorgeprogrammeerde standen voor  
perfecte resultaten



**Figure 3.3:** A close-up view of the Strex Airfryer XXL's digital control panel. It shows the temperature and time display, power button, temperature/time adjustment buttons, and icons for 10 pre-set cooking programs, along with 'SYNC FINISH' and 'DUAL COOK' functions. A hand is shown pressing one of the program icons.

- **Power Button:** Turns the appliance on/off.
- **Temperature/Time Adjustment:** Buttons to increase or decrease temperature and cooking time.
- **Pre-set Programs:** 10 dedicated icons for common dishes (e.g., fries, chicken, fish, meat, vegetables).
- **SYNC FINISH:** Synchronizes cooking times for different foods in each basket to finish simultaneously.
- **DUAL COOK:** Applies the same cooking settings to both baskets.
- **Basket Select Buttons (1 & 2):** To select and adjust settings for individual baskets.

## 4. SETUP

### 4.1 Unpacking

1. Carefully remove all packaging materials from the airfryer.

2. Check that all components are present and undamaged.
3. Remove any stickers or labels from the appliance.



### ● Strex Dubbele Airfryer



### ● Verpakking



### ● Handleiding

Figure 4.1: Contents of the Strex Airfryer XXL packaging, including the airfryer unit, its box, and the user manual.

## 4.2 Initial Cleaning

1. Wipe the exterior of the appliance with a damp cloth.
2. Wash the cooking baskets and crisper plates in warm, soapy water, then rinse and dry thoroughly. These parts are also dishwasher safe.
3. Ensure all parts are completely dry before reassembling.

## 4.3 Placement

- Place the airfryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm of free space around the back and sides of the appliance to allow for proper ventilation.
- Do not place the appliance directly against a wall or under cabinets during operation.

- Plug the power cord into a grounded wall outlet.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Operation

1. Place the crisper plate into the cooking basket.
2. Add ingredients to the cooking basket. Do not overfill.
3. Slide the basket back into the airfryer.
4. Press the Power button to turn on the appliance.
5. Select a basket (1 or 2) if cooking in only one, or proceed for both.
6. Adjust the temperature (50°C to 200°C) and time using the +/- buttons.
7. Press the Power button again to start cooking.
8. The airfryer will beep when cooking is complete. Carefully pull out the basket and remove food.

### 5.2 Using Pre-set Programs

The airfryer comes with 10 pre-programmed settings for common dishes.

1. Prepare ingredients and place them in the basket(s).
2. Press the Power button.
3. Select the desired pre-set program icon on the control panel. The default time and temperature for that program will display.
4. You can manually adjust the time and temperature if needed.
5. Press the Power button to start cooking.

### 5.3 Dual Cook Function

Use DUAL COOK to apply the same cooking settings to both baskets simultaneously. This is ideal for cooking larger quantities of the same food.

1. Prepare ingredients and place them in both baskets.
2. Press the Power button.
3. Press the DUAL COOK button.
4. Set the desired temperature and time. These settings will apply to both baskets.
5. Press the Power button to start cooking.



  
**2500W**  
**VERMOGEN**

# KRACHT & GEMAK IN DE KEUKEN

2 gerechten tegelijk:  
krokant, snel en overzichtelijk



**Figure 5.1:** The Strex Airfryer XXL demonstrating its dual cooking capability, with chicken in one basket and french fries in the other, both cooking at the same time.

## 5.4 Sync Finish Function

The SYNC FINISH function allows you to cook two different foods with different cooking times, ensuring they both finish at the same moment.

1. Prepare ingredients for both baskets.
2. Press the Power button.
3. Select Basket 1 and set its temperature and time.
4. Select Basket 2 and set its temperature and time.
5. Press the SYNC FINISH button. The airfryer will automatically adjust the start times for each basket so they conclude cooking simultaneously.
6. Press the Power button to start.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your airfryer.

## 6.1 Cleaning After Each Use

1. Unplug the airfryer and allow it to cool completely before cleaning.
2. Remove the cooking baskets and crisper plates.
3. Wash the baskets and crisper plates in warm, soapy water or place them in the dishwasher. Use a non-abrasive sponge.
4. Wipe the exterior of the airfryer with a damp cloth. Do not use harsh abrasives or metal scouring pads.
5. Clean the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove food residue from the heating element.
6. Ensure all parts are thoroughly dry before storing or next use.



**Figure 6.1:** A cooking basket from the Strex Airfryer XXL being placed into a dishwasher, illustrating the ease of cleaning.

## 6.2 Storage



Store the airfryer in a cool, dry place. Ensure the power cord is neatly wrapped and not kinked.

## 7. TROUBLESHOOTING

If you encounter issues with your Strex Airfryer XXL, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Airfryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Baskets are overloaded; food not shaken/flipped.	Do not overfill baskets. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the baskets and crisper plates thoroughly. Remove excess fat from ingredients.
Food is not crispy.	Too much moisture; insufficient cooking time/temperature.	Pat food dry before cooking. Increase cooking time or temperature slightly. Ensure crisper plate is used.
Error code on display.	Internal malfunction.	Unplug the appliance, wait 10 minutes, then plug it back in. If the error persists, contact customer support.

## 8. SPECIFICATIONS



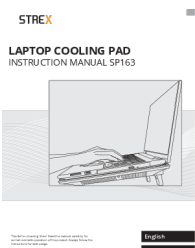 
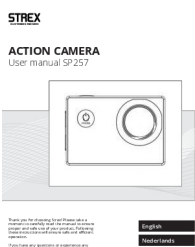 
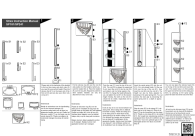 

Brand	Strex
Model Number	SP334
Total Capacity	10 Liters (2 x 5 Liter baskets)
Power/Wattage	2500W
Voltage	240 Volt
Temperature Range	50°C to 200°C
Number of Programs	10 Automatic Programs
Special Functions	Dual Cook, Sync Finish
Material	Plastic, Metal
Product Dimensions (LxWxH)	40 x 36.1 x 32 cm
Cord Length	1.5 meters
Dishwasher Safe Parts	Cooking Baskets, Crisper Plates

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Strex website.

If you require assistance with your Strex Airfryer XXL SP334, please contact Strex customer service.

## Related Documents - SP334

 <p>STREX WIRELESS DOORBELL User manual SP112</p>	<p><a href="#">STREX Draadloze Deurbel SP112 Handleiding</a></p> <p>Gedetailleerde gebruikershandleiding voor de STREX Draadloze Deurbel SP112. Bevat installatie-instructies, veiligheidsrichtlijnen, technische specificaties en probleemoplossing.</p>
 <p>STREX ACTION CAMERA 5K User manual SP304</p>	<p><a href="#">STREX Action Camera 5K SP304 User Manual: Features, Operation, and Safety</a></p> <p>Comprehensive user manual for the STREX Action Camera 5K (SP304). Learn about its features, operating instructions, technical specifications, and safety guidelines for capturing your adventures.</p>
 <p>STREX LAPTOP COOLING PAD INSTRUCTION MANUAL SP163</p>	<p><a href="#">Strex SP163 Laptop Cooling Pad Instruction Manual</a></p> <p>This manual provides instructions for the Strex SP163 Laptop Cooling Pad, detailing its specifications and usage for laptops sized 12-17 inches. It covers setup, fan operation modes, and contact information for support.</p>
 <p>STREX ACTION CAMERA User manual SP257</p>	<p><a href="#">Strex Action Camera SP257 Gebruikershandleiding</a></p> <p>Gedetailleerde gebruikershandleiding voor de Strex Action Camera SP257. Ontdek hoe u deze compacte, waterdichte camera installeert, bedient en onderhoudt voor sport- en actiemomenten. Bevat technische specificaties, veiligheidsinstructies en garantie-informatie.</p>
 <p>STREX SP181/SP241 Telescopic Shower Rack Assembly Instructions</p>	<p><a href="#">Strex SP181/SP241 Telescopic Shower Rack Assembly Instructions</a></p> <p>Detailed instructions for assembling the Strex SP181/SP241 telescopic shower rack, including part identification and step-by-step guidance for installation without drilling.</p>
 <p>STREX ACTION CAMERA 5K User manual SP304</p>	<p><a href="#">Handleiding STREX Action Camera 5K SP304</a></p> <p>Leer hoe u uw STREX Action Camera 5K SP304 veilig en efficiënt gebruikt met deze uitgebreide gebruikershandleiding. Bevat installatie-, bedienings- en veiligheidsinstructies.</p>

