

Maxhonor FS-005

Maxhonor Electric Fireplace with Mantel

Model: FS-005

Brand: Maxhonor

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before using this electric fireplace. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the fireplace is connected to a properly grounded outlet with the correct voltage (120V AC, 60Hz). Do not use extension cords or power strips.
- Keep combustible materials such as furniture, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and away from the sides and rear.
- Do not operate the fireplace if the power cord or plug is damaged, or if the heater malfunctions or has been dropped or damaged in any manner.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- The fireplace is equipped with an overheat protection device. If the heater overheats, it will automatically shut off. To reset, unplug the unit, wait 5-10 minutes, and then plug it back in.
- Close supervision is necessary when any heater is used by or near children or individuals with reduced physical, sensory, or mental capabilities.
- Do not use outdoors. This electric fireplace is for indoor use only.

PACKAGE CONTENTS

Verify that all components are present and undamaged before assembly. The product is shipped in two separate packages, which may arrive at different times.

- Electric Fireplace Insert (50-inch)
- Mantel Components (various panels and hardware)

- Remote Control
- Decorative Firewood (for display in storage space)
- Assembly Instructions Manual

ASSEMBLY INSTRUCTIONS

Detailed, step-by-step assembly instructions are provided in a separate manual included with your purchase. Please refer to that document for specific guidance on assembling the mantel and installing the electric fireplace insert.

It is recommended that two people assist with the assembly process to ensure stability and ease of construction, especially when handling larger components.

Ensure all parts are accounted for and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.



Image: Product dimensions for the Maxhonor Electric Fireplace with Mantel. The overall dimensions are 58.6 inches wide, 42.5 inches high, and 7.7 inches deep. The fireplace insert itself is 50 inches wide and 17 inches high.

OPERATING INSTRUCTIONS

The Maxhonor Electric Fireplace can be operated using the touch screen controls on the unit or the included remote control.



Image: Remote control and touch panel functions. Icons indicate controls for timer, temperature, heater, flame dimmer, flame color, and power.

1. Powering On/Off

- Press the **Power** button on the remote control or the touch panel to turn the fireplace on or off.

2. Flame Effects

The fireplace features realistic LED flame technology with adjustable settings.

- **Flame Color:** Press the **Flame Color** button to cycle through 12 different flame color options.
- **Flame Brightness:** Press the **Dimmer** button to adjust the flame brightness through 5 levels.

Dynamic 3D Flame

5 Brightness Adjustment



12 Colors



Image: Dynamic 3D flame effects with 5 brightness levels (from 100% to 0%) and 12 distinct flame color options, including various shades of orange, green, purple, blue, and mixed colors.

3. Heat Settings

The heating function operates independently of the flame effect, allowing for year-round use.

- **Heater Power:** Press the **Heater** button to toggle between 750W and 1500W heat settings.
- **Temperature Adjustment:** Use the **Temp** button to set the desired temperature between 62°F (17°C) and 82°F (28°C).

4. Timer Function

Set a timer for automatic shut-off to conserve energy.

- Press the **Time** button to activate the timer. Each press will cycle through 1-hour increments, from 1 to 8 hours.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your electric fireplace.

- **Cleaning:** Always unplug the fireplace before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Air Vents:** Periodically check and clean the air intake and exhaust vents to ensure they are free from dust and debris, which can impede airflow and cause overheating. Use a vacuum cleaner with a brush attachment if necessary.
- **Storage:** If storing the fireplace for an extended period, ensure it is clean and dry. Store it in a cool, dry place, preferably in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power to the unit, power cord not fully plugged in, circuit breaker tripped, or unit is in overheat protection mode.	Check power outlet and ensure cord is securely plugged in. Reset circuit breaker if tripped. Unplug the unit for 5-10 minutes to reset overheat protection, then plug back in.
No heat output.	Heater function not activated, temperature setting too low, or overheat protection engaged.	Ensure the heater function is turned on. Increase the temperature setting. Check for blocked air vents and reset overheat protection if necessary.
Flame effect not working.	Flame effect is turned off or brightness is set to 0%.	Activate the flame effect using the remote or touch panel. Increase the flame brightness setting.
Remote control not working.	Batteries are dead or incorrectly inserted, or remote is too far from the unit.	Replace batteries with new ones, ensuring correct polarity. Move closer to the fireplace and point the remote directly at the receiver.
Unit shuts off unexpectedly.	Overheat protection activated due to blocked vents or prolonged use.	Unplug the unit, allow it to cool for 5-10 minutes. Clear any obstructions from air vents. Plug back in and resume operation.

SPECIFICATIONS

Feature	Detail
Model Number	FS-005
Brand	Maxhonor
Mantel Dimensions (D x W x H)	7.7" x 58.6" x 42.5" (19.6 cm x 148.8 cm x 108 cm)
Fireplace Insert Dimensions (D x W x H)	4" x 50" x 17.1" (10.2 cm x 127 cm x 43.4 cm)
Power Source	Corded Electric
Voltage	120V AC, 60Hz

Feature	Detail
Heat Output	750W / 1500W
Heating Coverage	Up to 400 sq ft (37 sq meters)
Material	Engineered Wood, Metal
Flame Colors	12 Adjustable Colors
Flame Brightness	5 Adjustable Levels
Temperature Range	62°F - 82°F (17°C - 28°C)
Timer	1-8 Hour Settings
Safety Features	Overheat Protection
Installation Type	Freestanding

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the specific warranty documentation included with your purchase. You may also contact Maxhonor customer service directly through their official website or the retailer where the product was purchased.

When contacting support, please have your model number (FS-005) and purchase date available.