

[Manuals.plus](#) /

› [MOASIS](#) /

› MOASIS MFEW-134 5-Tier Shoe Rack with Doors User Manual

MOASIS MFEW-134

MOASIS MFEW-134 5-Tier Shoe Rack with Doors User Manual

Model: MFEW-134

1. INTRODUCTION

This manual provides instructions for the assembly, setup, operation, and maintenance of your MOASIS MFEW-134 5-Tier Shoe Rack with Doors. This shoe cabinet is designed to organize footwear efficiently while enhancing the aesthetic of your entryway, mudroom, hallway, or living room.

The unit features a closed design with magnetic closures for smooth access, a top drawer for small items, and adjustable shelves to accommodate various shoe sizes. Its farmhouse style blends functionality with a cozy, inviting touch.



Image 1.1: The MOASIS 5-Tier Shoe Rack with Doors, shown open and filled with various types of footwear.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use.

- Always use the provided tip-resistant kit to secure the cabinet to a wall. This prevents accidental tipping, especially in households with children or pets.

- Install the non-slip foot pads to protect your floors from scratches and to enhance stability.
- Do not exceed the maximum weight limit of **154 pounds (70 kg)** on the countertop.
- Each individual shelf has a maximum weight capacity of **33 pounds (15 kg)**. Distribute weight evenly.
- Keep small parts and packaging materials away from children during assembly.

THICKENED WOODEN TABLETOP



Tip-resistant
Kit



154 lbs
Load Capacity



Image 2.1: Detail of the cabinet's top surface, indicating the tip-resistant kit and load capacity for safe use.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact MOASIS customer support.

- Main Shoe Rack Frame
- Doors (with magnetic closures)
- Drawer (with handles)
- Adjustable Shelves (4 pieces)
- Tip-Resistant Kit
- Non-slip Foot Pads
- Assembly Hardware (screws, dowels, etc.)
- User Manual (this document)

4. SPECIFICATIONS

Feature	Detail
Brand	MOASIS
Model Name	MFEW-134
Product Dimensions (D x W x H)	15" x 31.5" x 43.3" (38.1 cm x 80 cm x 110 cm)
Item Weight	79.7 pounds (36.15 kg)
Color	White
Furniture Finish	Engineered Wood
Number of Storage Levels	5 (4 adjustable shelves plus base)
Countertop Weight Limit	154 Pounds (70 kg)
Shelf Weight Limit	33 Pounds (15 kg) per shelf
Special Features	Adjustable Shelves, Removable Shelf, Tip-Resistant Kit, Non-slip Foot Pads, Waterproof, Scratch Resistant
Assembly Required	Yes
Installation Type	Freestanding
Recommended Uses	Shoe Storage, Keys, Mail, General Storage



Image 4.1: Product dimensions for planning placement.

5. ASSEMBLY INSTRUCTIONS

The MOASIS MFEW-134 shoe rack is designed for straightforward assembly. Clear instructions and pre-labeled parts are included in the package to guide you through the process.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to

prevent scratches. Verify all parts against the included parts list.

2. **Follow Step-by-Step Guide:** Refer to the detailed assembly manual provided in your package. Each step is illustrated and clearly described.
3. **Secure Connections:** Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the engineered wood.
4. **Install Drawer and Doors:** Assemble the drawer and attach the doors according to the manual. Ensure magnetic closures align properly.
5. **Insert Shelves:** Place the adjustable shelves into your desired positions.

For visual guidance, refer to the included assembly manual for detailed diagrams and instructions.



Image 5.1: The shoe rack with doors open, illustrating the internal structure and shelf placement options.

6. SETUP

Proper setup ensures the stability and longevity of your shoe rack.

1. **Choose Location:** Select a suitable location in your entryway, mudroom, hallway, or living room. Ensure the surface is level and stable.

2. **Install Non-slip Foot Pads:** Attach the non-slip foot pads to the bottom of the cabinet legs to protect your flooring and provide additional stability.
3. **Secure with Tip-Resistant Kit:** Using the provided tip-resistant kit, securely fasten the shoe rack to a wall. Follow the instructions in the assembly manual for correct installation. This step is crucial for safety.

MODERN AESTHETICS

Suitable for both small and large spaces



Living Room



Entryways



Storeroom



Image 6.1: Examples of the shoe cabinet's placement in different home environments.

7. OPERATING INSTRUCTIONS

The MOASIS MFEW-134 shoe rack is designed for convenient daily use.

- **Using the Drawer:** The top drawer is ideal for storing small items such as keys, mail, gloves, or other entryway essentials. Pull the drawer handle to open and push to close.
- **Accessing Shoe Compartments:** The two front doors open outwards, providing full access to the five storage levels. Magnetic closures keep the doors securely shut when not in use.
- **Adjusting Shelves:** The four internal shelves are adjustable and removable. To adjust a shelf, carefully lift it and reposition the shelf pegs into the desired height slots. This allows you to customize the storage space for different types of footwear, including taller boots.



Image 7.1: Illustration of the adjustable shelf feature, demonstrating how to customize storage space for various shoe sizes.

AMPLE STORAGE SPACE

This 5-tier shoe cabinet can store 20 pairs of shoes at least

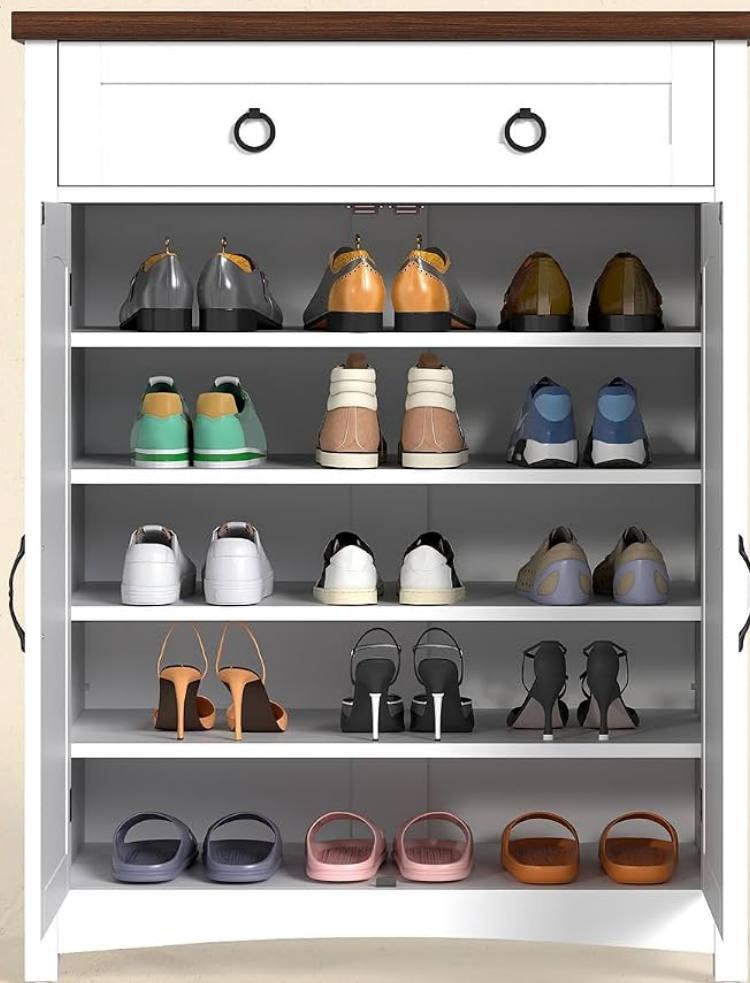


Image 7.2: The shoe cabinet's ample storage space, including the top drawer and adjustable shelves.

8. MAINTENANCE

To keep your MOASIS shoe rack in optimal condition, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.

- **Spills:** The engineered wood construction offers waterproof ease. In case of spills, wipe them immediately with a dry cloth to prevent moisture damage.
- **Regular Checks:** Periodically check all fasteners and connections to ensure they remain tight. Retighten if necessary.
- **Tip-Resistant Kit:** Ensure the tip-resistant kit remains securely attached to both the cabinet and the wall.



Image 8.1: Demonstrating the ease of cleaning and the sturdy construction of the cabinet.

9. TROUBLESHOOTING

If you encounter any issues with your MOASIS shoe rack, refer to the following common solutions:

- **Cabinet Wobbles:**
 - Ensure the cabinet is placed on a level surface.
 - Check that all assembly screws are fully tightened.
 - Verify that the tip-resistant kit is correctly installed and secured to the wall.
 - Adjust the non-slip foot pads if they are uneven.
- **Doors Do Not Close Properly:**
 - Check for any obstructions preventing the doors from closing.
 - Ensure the magnetic closures are aligned and securely attached.
 - Verify that the door hinges are properly installed and tightened.
- **Drawer Sticks or Is Difficult to Open/Close:**
 - Ensure the drawer slides are correctly installed and free of debris.
 - Check that the drawer is not overloaded.
- **Scratches on Floor:**
 - Ensure the non-slip foot pads are properly installed on all legs.

10. WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your MOASIS MFEW-134 5-Tier Shoe Rack with Doors, please contact MOASIS customer support. Refer to your purchase documentation or the MOASIS official website for contact information.

Please have your model number (MFEW-134) and purchase details ready when contacting support to ensure efficient service.

© 2025 MOASIS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question