

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Brother](#) /

> [Brother Work Smart 1360 Wireless Color Inkjet All-in-One Printer with Automatic Duplex Printing and 1.8" Color Display | Includes Refresh Subscription Trial\(1\) \(MFC-J1360DW\) \(Uses LC501 Series Inks\) Current Model: MFCJ1360DW New](#)

Brother MFCJ1360DW

Brother Work Smart 1360 Wireless Color Inkjet All-in-One Printer User Manual

Model: MFCJ1360DW

[Overview](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. PRODUCT OVERVIEW

The Brother Work Smart 1360 Wireless Color Inkjet All-in-One Printer, model MFCJ1360DW, is designed for home and home office environments, offering reliable printing, copying, and scanning functionalities. This compact device features automatic duplex (2-sided) printing, a 20-page single-sided Automatic Document Feeder (ADF), and flatbed scanning capabilities.

It supports various connectivity options including wireless, Wi-Fi Direct, AirPrint®, and Mopria®, with Cloud connectivity accessible via its 1.8-inch color display. The printer delivers vibrant color and sharp black prints at speeds up to 16 pages per minute (ppm) in black and 9 ppm in color. The integrated Page Gauge feature helps monitor ink levels, ensuring timely replacement.

Key Features:

- **All-in-One Functionality:** Print, copy, and scan from a single compact device.
- **Cloud App Connectivity:** Direct printing and scanning to popular cloud services like Google Drive, Dropbox, Box, and OneDrive via the 1.8-inch color display.
- **Efficient Printing:** Features automatic duplex (2-sided) printing, a 20-sheet single-sided Automatic Document Feeder (ADF), and a 150-sheet paper tray.
- **Fast Print Speeds:** Up to 16 ppm for black and 9 ppm for color documents.
- **Multiple Connection Options:** Supports wireless network and USB connectivity.
- **Brother Mobile Connect App:** Facilitates easy setup, printing, copying, scanning, and device management from mobile devices, including ink usage monitoring with Page Gauge.



Figure 1.1: Front view of the Brother Work Smart 1360 Wireless Color Inkjet All-in-One Printer. This image displays the printer's compact design, control panel, and paper output tray.

2. INITIAL SETUP

This section guides you through the initial setup process for your Brother MFCJ1360DW printer. For the quickest setup, it is recommended to use the Brother Mobile Connect app.

2.1 Unpacking and Contents Verification

Carefully unpack all components from the printer box. Ensure all items listed below are present:

- Brother MFC-J1360DW Printer Unit
- Starter Black Ink Cartridge
- Starter Cyan Ink Cartridge
- Starter Magenta Ink Cartridge
- Starter Yellow Ink Cartridge
- AC Power Cord
- Quick Setup Guide
- Product Safety Guide
- Reference Guide
- Warranty Card

MFC-J1360DW

In The Box



WORK SMART
Wireless Color Inkjet
All-in-One Printer

Quick Setup Guide
Product Safety Guide
Reference Guide
Warranty Card



4 Starter Ink
Cartridges
Cyan, Magenta,
Yellow, & Black



Figure 2.1: Illustration of the items included in the Brother MFC-J1360DW printer box, including the printer, ink cartridges, and documentation.

2.2 Power Connection and Initial Power On

1. Place the printer on a stable, level surface near a power outlet.
2. Connect the AC power cord to the printer's power input, then plug the other end into a wall outlet.
3. Press the power button to turn on the printer. Follow any on-screen prompts on the 1.8-inch color display.

2.3 Ink Cartridge Installation

Install the included starter ink cartridges into their respective slots. Refer to the Quick Setup Guide for detailed instructions on opening the ink cartridge cover and inserting cartridges correctly.

2.4 Network Setup (Wireless)

The Brother MFCJ1360DW supports wireless connectivity. You can set up the wireless connection directly from the printer's control panel or by using the Brother Mobile Connect app.

- **Using the Control Panel:** Navigate to the network settings on the 1.8-inch color display, select your Wi-Fi network, and enter the password.

- **Using Brother Mobile Connect App:** Download the Brother Mobile Connect app from your device's app store. The app provides guided steps for connecting your printer to your wireless network.

MFC-J1360DW

At a Glance

Best for Home and Home Office

PRINT • COPY • SCAN

Reliable, Easy-to-Use Color Inkjet

WORK SMART

WORKS WITH
**BROTHER MOBILE
CONNECT APP[‡]**



Figure 2.2: The Brother MFC-J1360DW printer alongside a smartphone displaying the Brother Mobile Connect app interface, highlighting its role in easy setup and management.

3. OPERATING INSTRUCTIONS

This section covers the basic operations of your Brother MFCJ1360DW printer, including printing, copying, and scanning.

3.1 Loading Paper

The printer features a 150-sheet paper tray. Ensure paper is loaded correctly to prevent jams and ensure proper feeding.

1. Pull out the paper tray completely.
2. Adjust the paper guides to fit the size of the paper you are loading.
3. Load the paper print-side down. Do not overfill the tray.

4. Gently push the paper tray back into the printer until it clicks into place.

3.2 Printing Documents

You can print from a computer, mobile device, or directly from cloud services.

- **From a Computer:** Install the printer drivers from the Brother support website or the included CD (if applicable). Select the Brother MFCJ1360DW as your printer in your application's print dialog. Adjust settings for color, duplex printing, and paper type as needed.
- **From a Mobile Device:** Use the Brother Mobile Connect app for direct printing. The printer also supports AirPrint® for Apple devices and Mopria® for Android devices.
- **Cloud Printing:** Access cloud services (Google Drive, Dropbox, etc.) directly from the printer's 1.8-inch color display to print documents stored online.



Figure 3.1: The Brother MFC-J1360DW printer actively printing a document, showcasing its paper output tray and control panel.

3.3 Copying Documents

The printer can copy documents using either the flatbed scanner or the Automatic Document Feeder (ADF).

- **Using the Flatbed:** Place a single document face down on the scanner glass. Close the scanner lid.
- **Using the ADF:** Load up to 20 pages face up into the Automatic Document Feeder.

From the printer's control panel, select "Copy." Adjust settings such as number of copies, color/mono, and quality, then press "Start."

3.4 Scanning Documents

Documents can be scanned to a computer, mobile device, or cloud service.

- **To Computer:** Use Brother's scanning software on your computer or initiate a scan from the printer's control panel, selecting your computer as the destination.
- **To Mobile Device:** Use the Brother Mobile Connect app to scan documents directly to your smartphone or tablet.
- **To Cloud Service:** Select "Scan to Cloud" from the printer's display and choose your desired cloud service.

MFC-J1360DW

Features



1.8" Color Display
and button navigation eases setup
and enables Cloud connectivity[‡]

Flexible Connectivity
dual-band wireless[‡]
and USB interfaces

Fast Print Speeds
up to 16ppm black and
9ppm color[‡], plus
automatic duplex printing

Versatile Paper Handling
150-sheet paper tray and
20-page Single-sided
Automatic Document Feeder[‡]

[‡]Scroll down to learn more.

Figure 3.2: A diagram illustrating key features of the Brother MFC-J1360DW, including its 1.8-inch color display, flexible connectivity, fast print speeds, and versatile paper handling.

Reliable All-in-One Printing Solution with Flexible Features

- Easy setup and management with the Brother Mobile Connect App[†]
- 1.8" color display
- Print, copy, and scan in one compact machine fit for smaller spaces
- Auto Document Feeder (ADF) to copy & scan single-sided multi-page documents up to 8.5"x14"
- Produces high-quality prints with sharp tones and vibrant colors



[†]Scroll down to learn more

Figure 3.3: A close-up view of the Brother Mobile Connect App interface on a smartphone, demonstrating its capabilities for printer setup, document printing, and ink level monitoring.

4. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Brother MFCJ1360DW printer.

4.1 Replacing Ink Cartridges

When an ink cartridge is low or empty, the printer's display or the Brother Mobile Connect app will notify you. Always use Brother Genuine LC501 Series Inks for best results and to maintain your warranty.

1. Open the ink cartridge cover.
2. Press the release lever for the cartridge you wish to replace and remove it.
3. Unpack the new Brother Genuine ink cartridge and insert it firmly into the correct slot until it clicks into place.
4. Close the ink cartridge cover. The printer will automatically detect the new cartridge.

The Page Gauge feature in the Brother Mobile Connect app allows you to monitor your ink usage and helps ensure you don't run out unexpectedly. Consider the Refresh subscription service for automatic ink delivery.

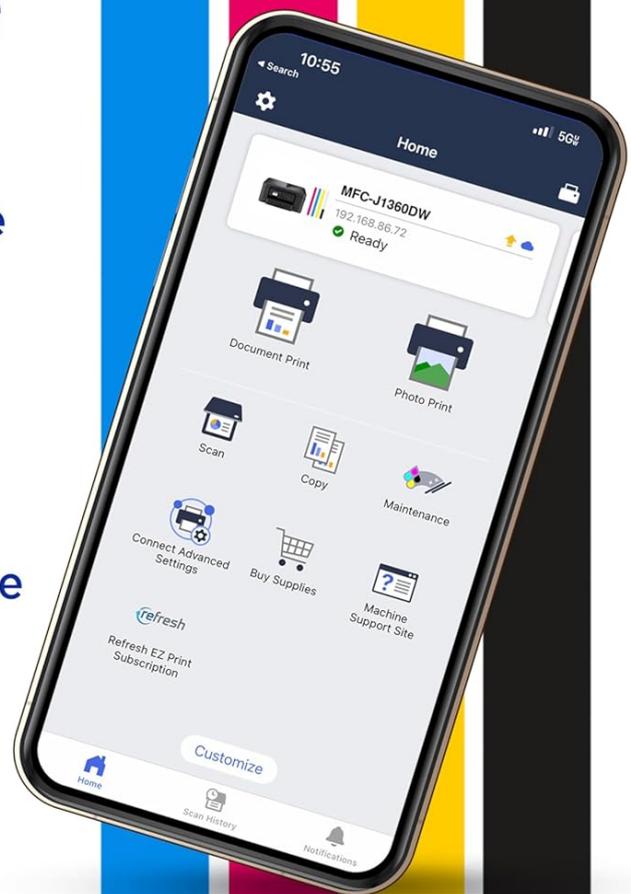
MFC-J1360DW

Mobile Connect

Use the Brother Mobile Connect App for easy printer set up!

Connect your printer with the app and get:

- Personalized savings on ink
- Free 6-month extended printer limited warranty[‡]
- Print from virtually anywhere
- Monitor ink levels and purchase when you run low



[‡]Scroll down to learn more

Figure 4.1: Image displaying Brother Genuine LC501 Series Ink cartridges, emphasizing the importance of using authentic supplies for optimal printer performance.

4.2 Cleaning the Printer

Periodically clean the exterior of the printer with a soft, lint-free cloth. For internal cleaning, such as print head cleaning or roller cleaning, refer to the printer's on-screen menu or the detailed user guide available on the Brother support website.

5. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your Brother MFCJ1360DW printer. For more comprehensive troubleshooting, visit the official Brother support website.

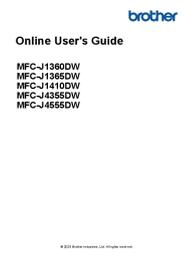
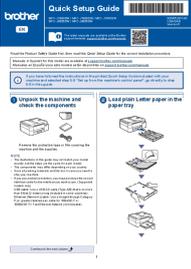
5.1 Common Issues and Solutions

Problem	Possible Cause	Solution
Printer is offline or not connecting.	Network issue, incorrect Wi-Fi settings, or USB cable disconnected.	<p>Check Wi-Fi connection on printer and router.</p> <p>Verify Wi-Fi password.</p> <p>Ensure USB cable is securely connected (if using USB).</p> <p>Restart printer and computer/router.</p>
Poor print quality (streaks, faded colors).	Low ink, clogged print head, or incorrect paper type.	<p>Check ink levels and replace low cartridges.</p> <p>Perform a print head cleaning from the printer's maintenance menu.</p> <p>Ensure correct paper type is selected in print settings.</p>
Paper jams.	Improper paper loading, damaged paper, or foreign objects.	<p>Remove all jammed paper carefully, following printer's on-screen instructions.</p> <p>Ensure paper is loaded correctly and not overfilled.</p> <p>Use only recommended paper types.</p>

If the issue persists, consult the comprehensive user manual or contact Brother customer support.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	MFCJ1360DW
Product Dimensions	13.5"D x 15.4"W x 7.2"H
Item Weight	16.8 pounds
Printing Technology	Inkjet
Printer Output	Color
Max Print Speed (Monochrome)	16 ppm
Max Print Speed (Color)	9 ppm
Maximum Color Print Resolution	Windows: Up to 1,200 x 6,000 dpi; Mac: 1,200 x 3,600 dpi
Maximum Black and White Print Resolution	Windows: Up to 1,200 x 6,000 dpi; Mac: 1,200 x 3,600 dpi
Duplex Printing	Automatic
Scanner Type	Flatbed, Sheetfed
Max Input Sheet Capacity	150 sheets
Automatic Document Feeder (ADF)	20-sheet single-sided

	<p>Brother MFC-J1355DW Series Quick Setup Guide</p> <p>Step-by-step instructions for setting up your Brother MFC-J1355DW series printer, including unpacking, loading paper, connecting, installing ink, and software setup.</p>
	<p>Brother MFC-J1360DW Series Online User's Guide</p> <p>Explore the Brother MFC-J1360DW, MFC-J1365DW, MFC-J1410DW, MFC-J4355DW, and MFC-J4555DW series with this comprehensive online user's guide. Learn about setup, printing, scanning, faxing, maintenance, and troubleshooting for your Brother multifunction printer.</p>
	<p>Brother MFC-J1360DW Series Quick Setup Guide - Installation and Setup</p> <p>Comprehensive quick setup guide for Brother MFC-J1360DW, MFC-J1365DW, MFC-J1410DW, MFC-J4355DW, and MFC-J4555DW printers. Learn how to unpack, connect, install ink, and set up your printer.</p>
	<p>Brother MFC-J4510DW & MFC-J4710DW Basic User's Guide</p> <p>This Basic User's Guide provides essential information for setting up and operating the Brother MFC-J4510DW and MFC-J4710DW A3 color inkjet multifunction printers, covering basic functions, connectivity (LAN, Wi-Fi), maintenance, and troubleshooting.</p>