

OGERY F11

OGERY F11 Camping Fan User Manual

Model: F11 | Brand: OGERY

1. INTRODUCTION

Thank you for choosing the OGERY F11 Camping Fan. This portable and versatile fan is designed to provide powerful airflow and illumination for various outdoor and indoor activities. With its long-lasting battery, fast charging capabilities, and multiple features, it is an essential companion for camping, travel, and everyday use.

1.1 Package Contents

- OGERY F11 Camping Fan (1 unit)
- Remote Control (1 unit)
- USB Charging Cable (1 unit)
- User Manual (this document)

1.2 Key Features

- **Upgraded Stronger Wind:** Delivers wind speeds up to 5.3m/s with Turbocharging and PWM Control for higher wind pressure and lower noise.
- **Longer Battery Endurance:** Equipped with a 20000mAh battery, providing 12 to 138 hours of operation (fan/lighting dependent).
- **Fast Charging:** Supports 20W fast charging, reaching 100% in approximately 4.5 hours.
- **3-Level Eye-Protective LED Lantern:** Offers soft, comfortable illumination with three brightness settings.
- **Multi-Functional Design:** Features 30°/60°/90°/120° automatic oscillation, 270° manual rotation, remote control, folding handle, and a 360° rotatable hook.
- **Power Bank Functionality:** Dual outputs for charging other devices simultaneously.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using the OGERY F11 Camping Fan. Failure to follow

these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fan in water or other liquids.
- Keep out of reach of children and pets.
- Do not insert fingers or any objects into the fan grille when it is operating.
- Use only the provided charging cable or a compatible 20W (or higher) adapter/power bank for charging.
- Do not attempt to disassemble, repair, or modify the fan. Contact qualified service personnel for assistance.
- Avoid exposing the fan to extreme temperatures, direct sunlight, or high humidity.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- Turn off and unplug the fan before cleaning or when not in use for extended periods.

3. PRODUCT OVERVIEW

3.1 Components



Figure 3.1: OGERY F11 Camping Fan showing the main unit and remote control.

The OGERY F11 Camping Fan consists of a main fan unit with an integrated LED light and a sturdy base that houses the battery and control panel. It also includes a detachable remote control for convenient operation.

3.2 Control Panel

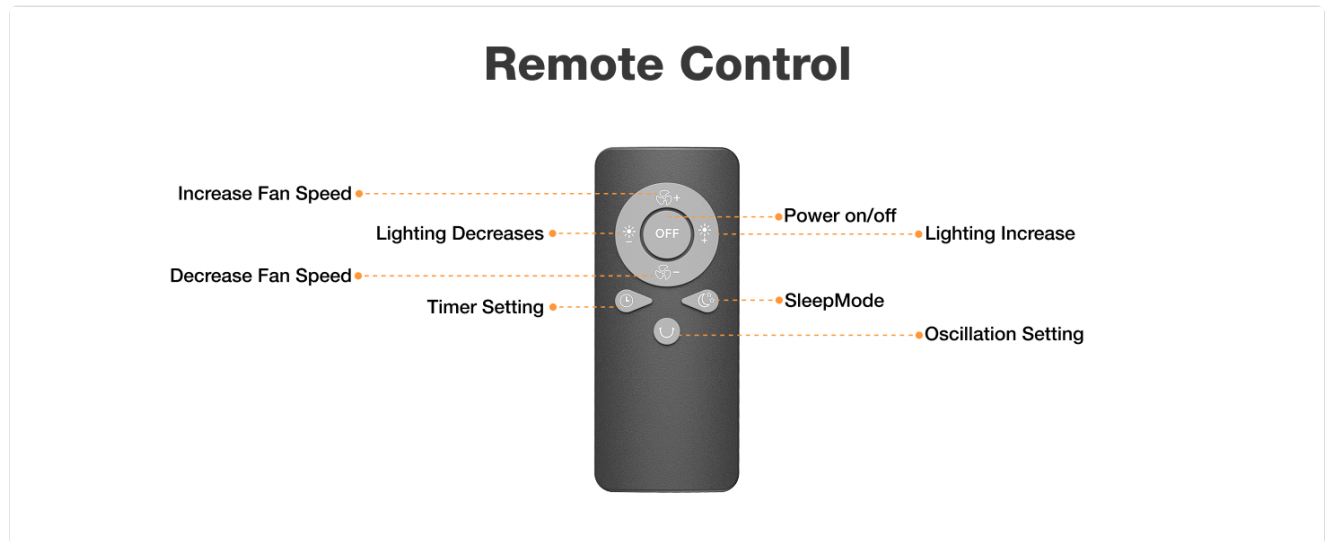


Figure 3.2: Detailed view of the fan's control panel, indicating various buttons and indicators.

The control panel on the fan's base features a power indicator, fan speed indicator, rocking head indicator, and timer indicator. Buttons include Sleep, Lighting, Fan Speed Control Knob (OFF to MAX), Oscillation, and Timer.

3.3 Remote Control



Figure 3.3: The remote control for the OGERY F11 fan, showing buttons for power, fan speed, lighting, timer, and oscillation settings.

The remote control allows for convenient operation of all fan functions from a distance. It includes buttons for Power on/off, Increase/Decrease Fan Speed, Lighting Increase/Decrease, Timer Setting, Sleep Mode, and Oscillation Setting.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the OGERY F11 Camping Fan. Connect the provided USB charging cable to the fan's input port and a compatible power source (e.g., >18W adapter or power bank). The battery indicator lights on the control panel will show charging progress. A full charge takes approximately 4.5 hours.

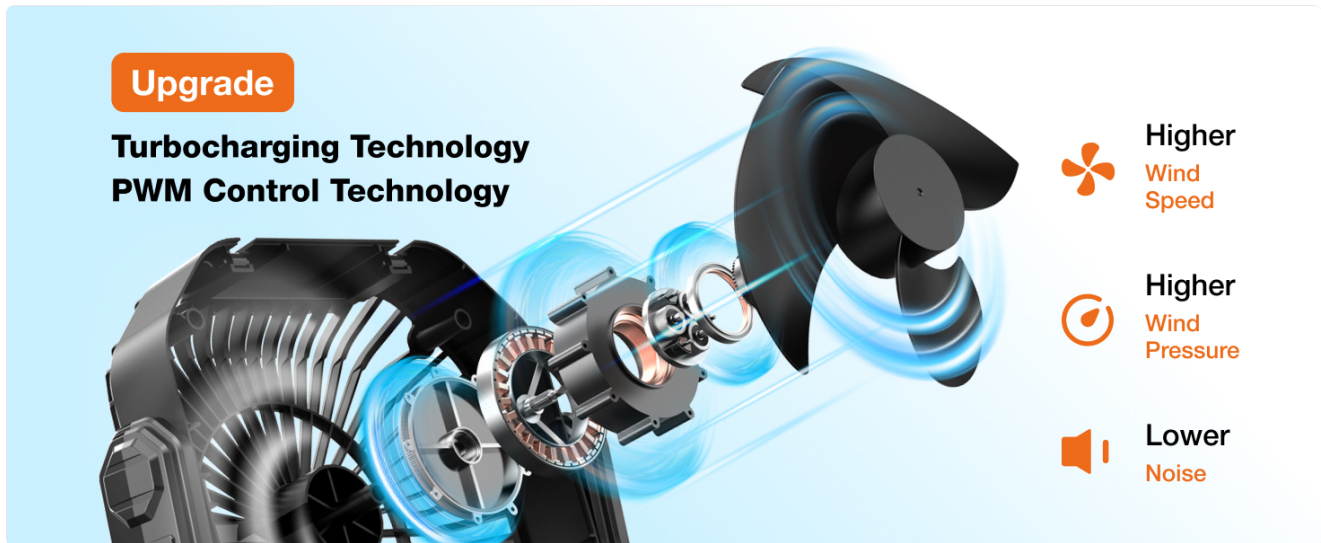


Figure 4.1: The fan's fast charging capability, demonstrating connection to an external power source.

4.2 Placement Options

The OGERY F11 fan offers versatile placement options:

- **Tabletop/Ground:** Place the fan on any stable, flat surface.
- **Hanging:** Utilize the integrated 360° rotatable hook on the top handle to hang the fan inside a tent, from a branch, or other suitable points.
- **Tripod Mount:** The fan base may include a standard tripod screw hole for mounting on compatible tripods (tripod not included).

18W Fast Charging

Upgrade Fast Charging

OGERY 
4.5_H

VS

Others
9_H



Figure 4.2: The fan positioned on a table, suitable for various outdoor activities.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To turn the fan **ON**, rotate the Fan Speed Control Knob from "OFF" towards "MAX" on the control panel, or press the Power button on the remote control. To turn the fan **OFF**, rotate the knob to "OFF" or press the Power button on the remote again.

5.2 Fan Speed Adjustment

The OGERY F11 features stepless speed regulation. Rotate the Fan Speed Control Knob on the control panel to precisely adjust the airflow from minimum to maximum. Alternatively, use the "Increase Fan Speed" and "Decrease Fan Speed" buttons on the remote control.



Figure 5.2: Adjusting fan speed using the control knob on the base unit.

5.3 Oscillation Control

Press the "Oscillation" button on the control panel or remote to activate automatic oscillation. The fan supports 30°, 60°, 90°, and 120° oscillation angles. Press the button repeatedly to cycle through the available angles or turn oscillation off. The fan head can also be manually rotated 270° vertically to direct airflow.



Figure 5.3: The fan's omnidirectional airflow capabilities, including automatic oscillation and manual tilt.

5.4 LED Lantern Operation

Press the "Lighting" button on the control panel or remote to turn on the LED lantern. Press repeatedly to cycle through the three brightness levels (Low, Medium, Strong). The ring light design is eye-protective. Press a fourth time to turn the light off.

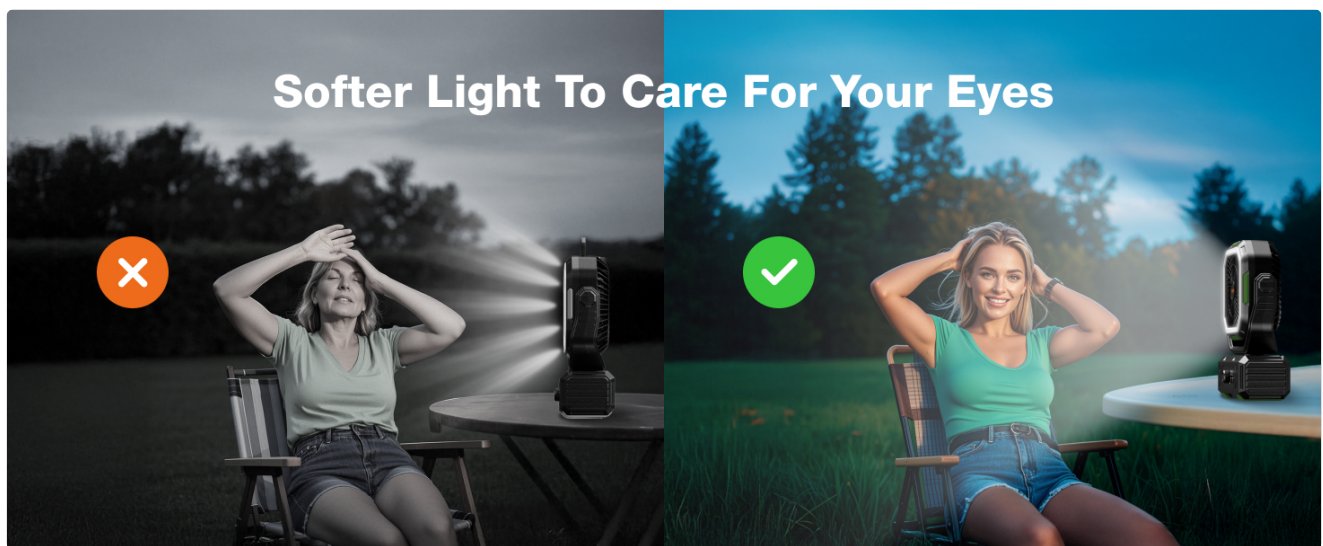


Figure 5.4: The fan's integrated LED lantern with three adjustable brightness levels, providing illumination for various settings.

5.5 Timer Function

Press the "Timer" button on the control panel or remote to set an automatic shut-off timer. Available settings are 1 hour, 2 hours, 4 hours, and 8 hours. The corresponding indicator light will illuminate. The fan will automatically turn off after the selected time period.

5.6 Power Bank Functionality

The OGERY F11 fan can also serve as a power bank to charge other electronic devices. Locate the dual output ports (USB and Type-C) on the side of the fan's base. Connect your device using an appropriate charging cable. The fan supports 22.5W super fast charging for connected devices.



Figure 5.6: The fan's power bank feature, showing it charging multiple devices simultaneously.

5.7 Sleep Mode

Press the "Sleep" button on the control panel or remote to activate Sleep Mode. In this mode, the fan operates at its lowest, quietest setting (less than 23dB), and all indicator lights on the control panel will turn off to ensure an undisturbed sleep environment.



Figure 5.7: The fan's quiet operation in Sleep Mode, ideal for use during rest.

5.8 Official Product Video

Your browser does not support the video tag.

Video 5.8: An official product video from OGERY-Outdoors showcasing the features and benefits of the OGERY F11 Camping Fan.

6. MAINTENANCE

6.1 Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.
- For dust accumulation on the fan blades or grille, use a soft brush or a vacuum cleaner with a brush attachment. Do not use abrasive cleaners or solvents.
- Do not spray water directly onto the fan.

6.2 Storage

When storing the fan for an extended period, ensure it is fully charged and then turn it off. Store it in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to recharge the fan every 3-6 months to maintain battery health.

7. TROUBLESHOOTING

If you encounter any issues with your OGERY F11 Camping Fan, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Power switch is off. Remote control battery is low.	Charge the fan fully. Ensure the control knob is turned from "OFF". Replace remote control batteries (CR5 included).
Weak airflow.	Fan speed set too low. Obstruction in front/back of fan.	Increase fan speed using the control knob or remote. Clear any obstructions around the fan.
LED light not working.	Light is off or set to lowest brightness. Battery is very low.	Press the Lighting button to cycle through brightness levels. Charge the fan.
Remote control not responding.	Remote battery depleted. Obstruction between remote and fan.	Replace the remote control batteries. Ensure clear line of sight to the fan's receiver.

If the problem persists after trying these solutions, please contact OGERY customer support.

8. SPECIFICATIONS






Feature	Detail
Brand	OGERY
Model Name	F11
Product Dimensions	4.3"D x 9.5"W x 15"H
Item Weight	3.91 pounds
Power Source	Battery Powered
Battery Capacity	20000mAh
Charging Time	Approx. 4.5 hours (with >18W adapter)
Max Wind Speed	Up to 5.3m/s
Noise Level	Ultra quiet, ≤ 23dB (in Sleep Mode)
Oscillation	30°/60°/90°/120° Automatic, 270° Manual Tilt
Control Method	Push Button, Remote, Touch
UPC	716597693999


9. WARRANTY AND SUPPORT

The OGERY F11 Camping Fan comes with a standard manufacturer's warranty. Please refer to the product packaging or the official OGERY website for specific warranty terms and conditions.

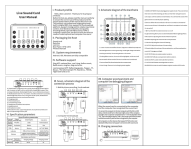For product support, technical assistance, or warranty claims, please contact OGERY customer service through the official [OGERY Store on Amazon](#) or via the contact information provided on the product packaging.

Related Documents - F11

 <p>CPE-2025F11YHXY F11英文说明书(国图尺寸 105X145 四折页)</p>	<p>F11 Live Sound Card User Manual: Features, Setup, and Specifications</p> <p>Comprehensive user manual for the F11 Live Sound Card by Shenzhen Furuijie Electronic Technology Co., Ltd., detailing its features, connection methods, software compatibility, and FCC compliance for live streaming and audio production.</p>
 <p>Parker Service Manual Series F11</p>	<p>Parker Series F11 Hydraulic Pump/Motor Service Manual</p> <p>Comprehensive service manual for the Parker Series F11 bent axis, fixed displacement heavy-duty hydraulic pump and motor series. Covers specifications, design, operational checks, assembly, torque, parts, and valve plates.</p>
 <p>OBD Multi-Function LCD F11 User Manual</p>	<p>OBD Multi-Function LCD F11 User Manual: Installation, Settings, and Features</p> <p>Comprehensive user manual for the OBD Multi-Function LCD F11. Learn about installation, instrument components, normal use, display interfaces, product settings, alarms, and performance testing for your vehicle.</p>
 <p>F11 Multi-Function Wireless Speaker</p>	<p>F11 Multi-Function Wireless Speaker User Manual</p> <p>User manual for the F11 Multi-Function Wireless Speaker by Lesoi, detailing functions, Bluetooth pairing, TWS mode, charging, and indicator lights.</p>
 <p>Ruko User Manual v2.0</p> <p>F11</p> <p>CONTACT US FOR MORE INFORMATION 📞 0086-755-23001000 🌐 www.rukodrone.com</p>	<p>Ruko F11 Drone User Manual v2.0: Flight Guide, Safety, and Features</p> <p>Comprehensive user manual for the Ruko F11 drone, version 2.0. Discover features like 4K video, intelligent flight modes, and safe operation. Includes setup, flight, battery, and troubleshooting guides for users aged 14+.</p>

	<p>Ruko F11 Drone: Quick Start Guide and Operation Manual</p> <p>Comprehensive quick start guide for the Ruko F11 drone, covering setup, operation, app connection, calibration, and troubleshooting. Learn how to fly your Ruko F11 safely and effectively.</p>
---	--