

## SONGMICS ULTB741W01

# SONGMICS Dual-Compartment Trash Can User Manual

Model: ULTB741W01 | Brand: SONGMICS

[Introduction](#)

[Safety](#)

[Contents](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

## 1. INTRODUCTION

Thank you for choosing the SONGMICS Dual-Compartment Trash Can. This manual provides essential information for the safe and efficient use of your new trash can. Please read it thoroughly before initial use and retain it for future reference.



Figure 1: SONGMICS Dual-Compartment Trash Can (Matte White)

## 2. SAFETY INSTRUCTIONS

---

- Keep the product away from children and pets to prevent accidents.
- Do not overload the inner buckets beyond their capacity.
- Avoid placing hot ashes or flammable materials directly into the trash can.
- Do not stand or sit on the lid or pedals.
- Ensure the trash can is placed on a stable, level surface.
- Clean the product regularly to maintain hygiene and prevent odors.

## 3. PACKAGE CONTENTS

---

Please check the package to ensure all items are present and undamaged:

- 1 x SONGMICS Dual-Compartment Trash Can (Matte White)
- 2 x Removable Inner Buckets
- 15 x Liner Bags (Code H)

## 4. SETUP

---

### 4.1 Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective films or packaging materials from the trash can.
3. Place the trash can in your desired location, ensuring it is on a flat and stable surface.

### 4.2 Inserting Inner Buckets

1. Lift the main lid of the trash can.
2. Place each removable inner bucket into its respective compartment.



Figure 2: Inner buckets are easily removable for cleaning and bag changes.

### 4.3 Installing Liner Bags

1. Place a liner bag into an inner bucket.
2. Utilize the bag holes/slots on the inner bucket to secure the liner bag in position, preventing slippage.



Figure 3: Bag holes keep liners securely in place.

## 5. OPERATING INSTRUCTIONS

---

## 5.1 Opening the Lid with Pedal

- To open a compartment, gently step on the corresponding foot pedal. The lid will open smoothly.
- Release the pedal to allow the lid to close softly and silently.



Figure 4: The soft-close mechanism ensures quiet operation (below 30 dB).

## 5.2 Keeping the Lid Open (Stay-Open Feature)

- Step on the pedal to open the lid.
- While the lid is open, manually lift it further to a 90° angle until it reaches a catch point and stays open.
- To close, gently push the lid down from the 90° position. It will then engage the soft-close mechanism.

# Stays Open

Keep the lid open by manually lifting it to 90°



Figure 5: Manually lift the lid to 90° to activate the stay-open function.

## 5.3 Waste Sorting

This dual-compartment trash can is designed for efficient waste sorting. Use one compartment for general trash and the other for recyclables.

## 2 x 8 Gal. (2 x 30 L) Double Bin

- 2 inner buckets for sorting waste
- 2 lids with carbon filters to absorb odors



Figure 6: Clearly marked compartments for easy waste separation.

## 6. MAINTENANCE

### 6.1 Cleaning the Exterior

- Wipe the stainless steel exterior with a soft, damp cloth and a mild detergent.
- Dry thoroughly with a clean, soft cloth to prevent water spots.
- The fingerprint-resistant finish helps keep the surface clean.

# Quality Stainless Steel

Strong, sturdy, and durable



Figure 7: The stainless steel is designed for easy cleaning and resists fingerprints.

## 6.2 Cleaning Inner Buckets

- Remove the inner buckets from the trash can.
- Wash them with warm, soapy water.
- Rinse thoroughly and allow them to dry completely before placing them back into the trash can.

## 6.3 Liner Bag Replacement

- This trash can is compatible with SONGMICS 8-gallon trash bags (Code H). Standard kitchen bags may also be used.
- Replace liner bags as needed to maintain hygiene.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid does not open when pedal is pressed.	Mechanism obstruction or damage.	Check for any debris or objects blocking the pedal mechanism. If damaged, contact customer support.

Problem	Possible Cause	Solution
Lid does not close softly.	Soft-close mechanism issue or obstruction.	Ensure no items are preventing the lid from closing fully. Check the soft-close mechanism for any visible damage.
Unpleasant odors.	Full trash bags, unsealed lid, or dirty inner buckets.	Empty trash bags regularly. Ensure the lid is fully closed. Clean inner buckets thoroughly.
Liner bags slip down.	Incorrect bag size or not secured properly.	Use SONGMICS 8-gallon bags (Code H) or ensure bags are properly secured using the internal bag holes.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	ULTB741W01
Capacity	2 x 8 Gallon (2 x 30 L)
Color	Matte White
Material	Steel, PP Plastic
Product Dimensions (L x W x H)	18.7" x 14.8" x 26.3" (47.6 x 37.7 x 66.9 cm)
Height with Lid Open	39" (99.1 cm)
Item Weight	16.2 pounds
Special Features	Soft-Close Lid, Foot Pedal Operation, Dual Removable Inner Buckets, Fingerprint-Resistant, Silent, Spacious
Compatible Liner Bags	SONGMICS 8-gallon (Code H)

Compatible with SONGMICS  
8 Gal. (30 L) Bin Bags (Code H)

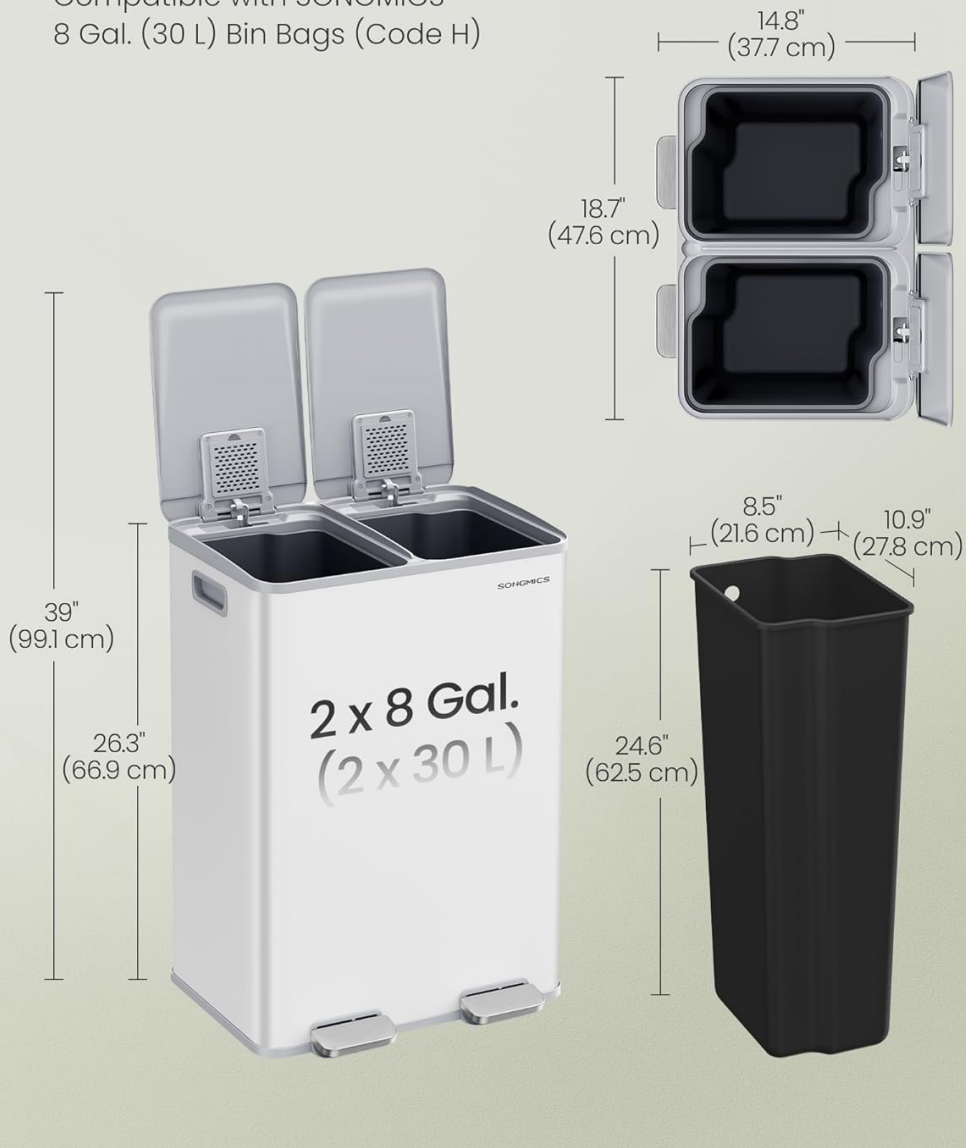


Figure 8: Product dimensions for planning placement.

## 9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, product support, or to report any issues, please refer to the official SONGMICS website or contact their customer service directly. Please have your model number (ULTB741W01) and purchase information ready when contacting support.