

[Manuals.plus](#) /

› [Foxtop](#) /

› Foxtop 14 Inch Silent Quartz Wall Clock Instruction Manual

Foxtop 14 Inch Wall Clock

Foxtop 14 Inch Silent Quartz Wall Clock Instruction Manual

Model: 14 Inch Wall Clock (ASIN: B0FGCZ9364)

1. PRODUCT OVERVIEW

The Foxtop 14 Inch Silent Quartz Wall Clock is designed for accurate and quiet timekeeping. Its modern, round analog display features large, easy-to-read numbers and a non-ticking sweep movement, making it suitable for various indoor environments such as bedrooms, classrooms, offices, living rooms, and kitchens.

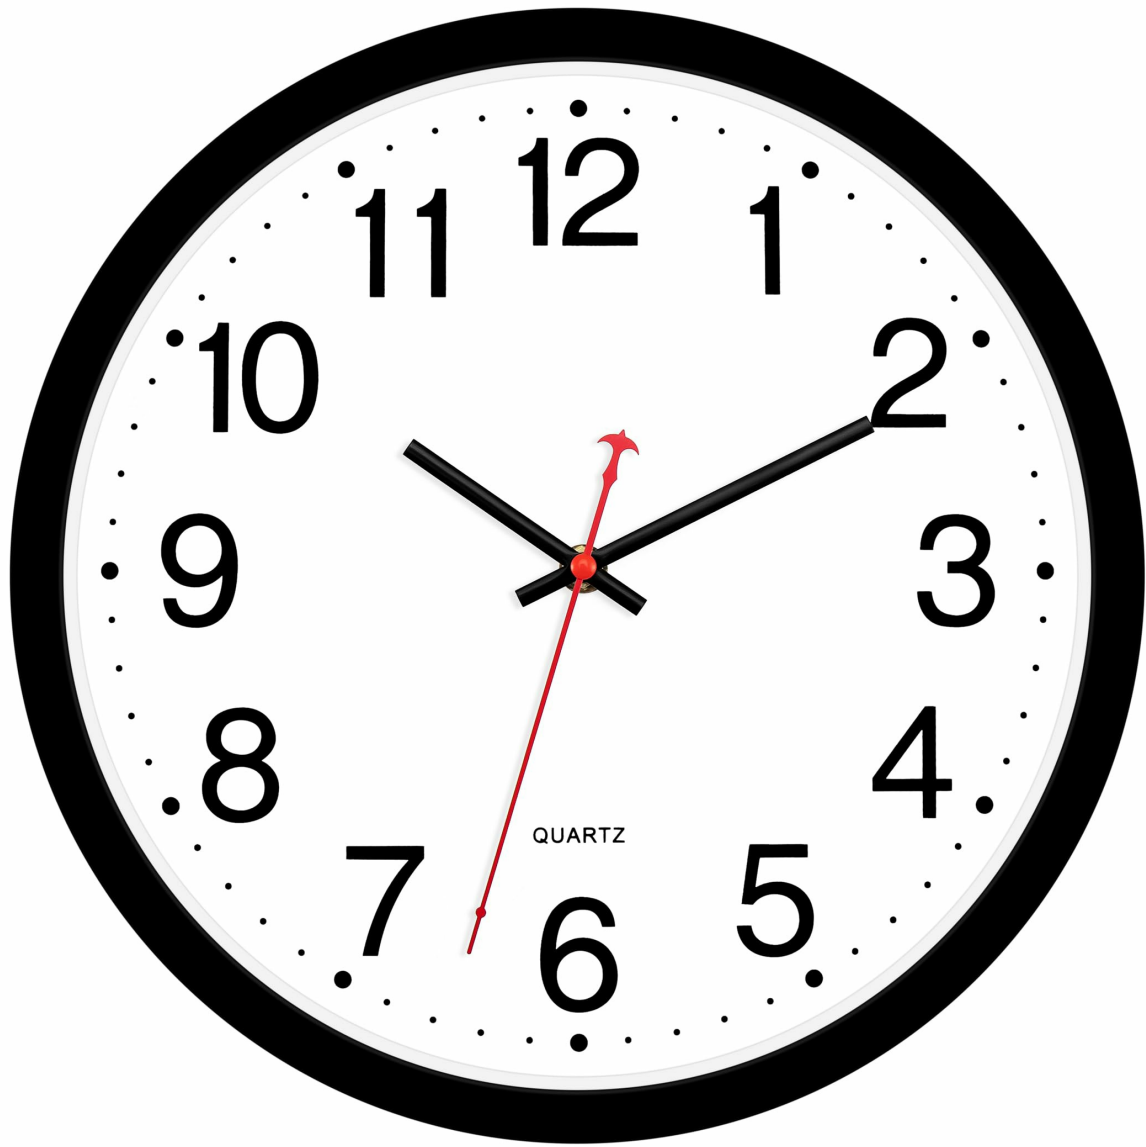


Figure 1: Front view of the Foxtop 14 Inch Silent Quartz Wall Clock.

Key Features:

- **Silent Non-Ticking Movement:** Ensures a quiet environment.
- **Accurate Quartz Movement:** Provides precise timekeeping.
- **Battery Operated:** Requires 1 AA battery (not included).
- **Durable Construction:** Solid plastic back base, unlike cardboard, for enhanced moisture resistance.
- **Easy to Read:** Large black numbers and a clear glass cover.

2. SETUP INSTRUCTIONS

2.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA alkaline battery, ensuring the correct polarity (+/-).
3. Close the battery compartment cover securely.

Note: For optimal performance and extended battery life (over 2 years), use high-performance AA alkaline batteries (1.5V). Battery life may vary based on battery capacity, environmental conditions, and usage.

More than 2 years battery life

Recommended: **AA** Alkaline Batteries (Amazon Basics)

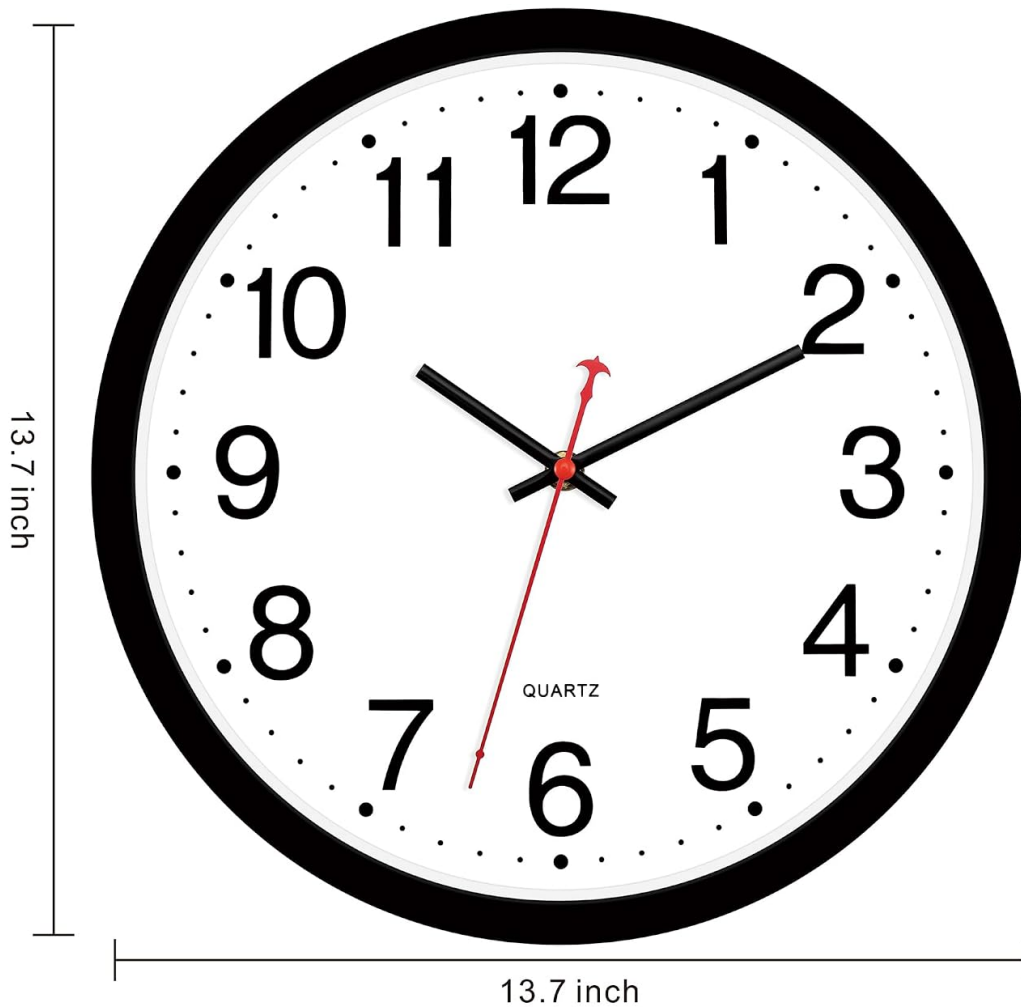


Figure 2: Clock dimensions and battery compartment location.

2.2 Time Setting

After installing the battery, the clock will automatically begin to set the time. The quartz movement is designed for precision. If manual adjustment is needed, use the small adjustment wheel located on the back of the clock mechanism to set the correct time.



Figure 3: Close-up of the clock face showing the hands and 'QUARTZ' marking.

2.3 Mounting the Clock

The clock is designed for easy wall mounting. It features a hook and a wide slot on the back for secure installation.

1. Choose a suitable location on a wall.
2. Install a nail or screw into the wall at the desired height. Ensure the nail or screw is strong enough to support the clock's weight (approximately 1.97 pounds).
3. Align the wide slot on the back of the clock with the installed nail or screw.
4. Carefully hang the clock, ensuring it is stable and level.



Figure 4: Side view of the clock, illustrating its profile for mounting.

3. OPERATION

Once the battery is installed and the time is set, the Foxtop wall clock operates continuously, providing accurate time without any ticking sound. The silent sweep movement ensures a peaceful environment.



Figure 5: Features of the upgraded movement, including silent operation and extended battery life.

4. MAINTENANCE

4.1 Cleaning

- To clean the clock, gently wipe the surface with a soft, dry cloth.
- Avoid using abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or the clock mechanism.
- The front glass cover helps keep dust away from the dial; clean it as needed for clear visibility.

4.2 Battery Replacement

When the clock starts to lose time or stops, it is an indication that the battery needs to be replaced. Follow the battery installation steps in Section 2.1 to replace the AA battery.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock not running or stops intermittently	Dead or low battery; improperly installed battery.	Replace with a new AA alkaline battery, ensuring correct polarity.
Time is inaccurate	Low battery; hands are obstructed.	Replace the battery. Check if the clock hands are bent or touching each other or the glass cover. Gently adjust if necessary.
Loud ticking sound	Not applicable.	This clock features a silent, non-ticking sweep movement. If you hear a ticking sound, please contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Foxtop
Model	14 Inch Wall Clock
ASIN	B0FGCZ9364
Color	Black
Display Type	Analog
Style	Modern
Special Feature	Silent Clock
Product Dimensions	14"W x 14"H
Power Source	Battery Powered (1 AA battery required, not included)
Room Type	Bedroom, Classroom, Home Office, Kitchen, Study Room
Shape	Round
Indoor/Outdoor Usage	Indoor
Material	Plastic
Frame Material	Plastic
Item Weight	1.97 pounds
Date First Available	July 2, 2025

7. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. Please refer to the product packaging or contact the retailer/manufacturer directly for warranty details.

For further assistance or support, please contact Foxtop customer service through their official channels or the retailer where the product was purchased.