

[Manuals.plus](#) /

> [WLIVE](#) /

> WLIVE Dresser with 4 Drawers and Modern TV Stand for 65 Inch TV - Instruction Manual

WLIVE Dresser and TV Stand Combo B0FGD338KK

WLIVE Dresser with 4 Drawers and Modern TV Stand for 65 Inch TV - Instruction Manual

Model: Dresser and TV Stand Combo B0FGD338KK

Brand: WLIVE

1. INTRODUCTION

Thank you for choosing the WLIVE Dresser with 4 Drawers and Modern TV Stand. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your new furniture. Please read this manual thoroughly before beginning assembly and retain it for future reference.



Image 1.1: The WLIVE Dresser with 4 Drawers and Modern TV Stand for 65 Inch TV, shown together in a room setting.

2. SAFETY INFORMATION

To ensure safe use of this product, please observe the following precautions:

- Always assemble the product on a soft, clean surface to prevent scratches.

- Ensure all parts are securely fastened before use. Periodically check and retighten fasteners as needed.
- Do not exceed the stated weight capacities for the dresser drawers or the TV stand top.
- For the dresser, always use the included anti-tip kit to secure the unit to a wall. This prevents accidental tipping and potential injury.
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.
- Assembly should be performed by adults.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact WLIVE customer support.

3.1. Dresser Components (Typical)

- Steel frame parts
- Wood top panel
- Fabric drawers (4 units)
- Adjustable feet
- Anti-tip kit
- Assembly hardware (screws, wrench, etc.)

3.2. TV Stand Components (Typical)

- Main wood panels (top, bottom, side, back)
- Metal legs
- Cabinet doors (2 units)
- Door hinges and handles
- Assembly hardware (screws, dowels, cam locks, etc.)

Tools Required (Not Included): Phillips head screwdriver, Hammer (optional for dowels).

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

4.1. Dresser Assembly

1. **Unpack and Identify Parts:** Lay out all dresser components on a clean, soft surface. Refer to the parts list to ensure everything is present.
2. **Assemble the Steel Frame:** Connect the vertical and horizontal steel frame bars using the provided screws. Ensure all connections are tight and stable.
3. **Attach the Wood Top:** Secure the wood top panel to the top of the steel frame using the designated screws.
4. **Install Adjustable Feet:** Screw the adjustable feet into the bottom of the steel frame. Adjust them to level the dresser on uneven floors.
5. **Insert Fabric Drawers:** Unfold each fabric drawer and insert the bottom panel. Place the assembled drawers into the designated slots in the steel frame.

6. **Install Anti-Tip Kit:** Attach the anti-tip bracket to the back of the dresser and secure it to a wall stud using the provided hardware. This step is crucial for safety.



Image 4.1: Diagram illustrating the dimensions and weight capacity of the WLIVE 4-drawer dresser.





Image 4.2: Close-up view of the dresser drawers, showing the fabric construction and handles.

4.2. TV Stand Assembly

1. **Unpack and Identify Parts:** Lay out all TV stand components on a clean, soft surface.

2. **Assemble the Main Frame:** Connect the side panels to the bottom panel using dowels and cam locks/screws as indicated in the specific instructions provided with the product.
3. **Install Back Panel:** Slide or screw the back panel into place, ensuring it aligns with the grooves or pre-drilled holes.
4. **Attach the Top Panel:** Secure the top panel to the assembled frame.
5. **Install Metal Legs:** Attach the metal legs to the bottom of the TV stand using the provided screws. Ensure they are firmly tightened.
6. **Assemble and Attach Doors:** Assemble the cabinet doors by attaching hinges and handles. Then, mount the doors to the TV stand frame. Adjust hinges for proper alignment if necessary.



Image 4.3: Diagram illustrating the dimensions and total board capacity of the WLIVE TV stand.



Image 4.4: Close-up showing the metal handle and the metal structure for stability of the TV stand.

5. OPERATING INSTRUCTIONS

5.1. Dresser Usage

- The fabric drawers are designed for storing clothes, blankets, accessories, and other soft goods.
- Avoid placing excessively heavy or sharp objects in the drawers to prevent damage to the fabric.
- The wood top provides a stable surface for lamps, books, or decorative items. Do not place hot items directly on the surface without protection.

SPACIOUS STORAGE



4 Large Drawers

Toy Diapers Snacks Grocery



6 - 8



10 - 12

Image 5.1: The dresser showcasing its spacious storage capacity with items placed inside the drawers.

5.2. TV Stand Usage

- Place your television centrally on the top surface of the TV stand. Ensure the TV base fits securely within the dimensions of the stand.
- Utilize the open shelf for media devices such as cable boxes, gaming consoles, or soundbars.
- The enclosed cabinets can store DVDs, remote controls, or other media accessories, keeping your living space tidy.
- Route cables through any provided cable management holes to maintain a neat appearance and prevent tripping hazards.



Image 5.2: The TV stand with a television placed on top and media devices in the open shelf.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Fabric Drawers:** For fabric drawers, spot clean with a mild detergent and water. Allow to air dry completely. Do not machine wash.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the wood and fabric components.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary.
- **Placement:** Avoid placing the furniture in direct sunlight or near heat sources, as this can cause fading or warping.

7. TROUBLESHOOTING

- **Wobbly Furniture:** Ensure all screws are tightened. For the dresser, adjust the leveling feet. For the TV stand, check leg attachments.
- **Drawers Not Sliding Smoothly:** Check for obstructions in the drawer slots. Ensure the fabric drawers are fully unfolded and their bottom panels are correctly inserted.
- **Misaligned Doors (TV Stand):** Adjust the hinges on the cabinet doors to achieve proper alignment.
- **Missing Parts:** If any parts are missing upon unboxing, do not proceed with assembly. Contact WLIVE customer support immediately.

8. SPECIFICATIONS

Feature	Dresser	TV Stand
Overall Dimensions (L x W x H)	15.7" x 11.8" x 38.7"	57.9" x 14.6" x 17.7"
Drawer Dimensions (L x W x H)	15" x 11.8" x 8.3" (approx.)	N/A
Weight Capacity (Per Drawer)	5.5 lbs	N/A
Weight Capacity (Dresser Top)	66 lbs	N/A
Weight Capacity (TV Stand Top)	N/A	110 lbs
Material	Steel frame, Wood top, Fabric drawers	Wood panels, Metal legs
TV Size Compatibility	N/A	Up to 65 inches

9. WARRANTY AND SUPPORT

WLIVE products are manufactured with quality and care. This product comes with a limited warranty against manufacturing defects. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, missing parts, or warranty claims, please contact WLIVE customer support through the retailer's platform or the official WLIVE website. Please have your purchase information and product model number (B0FGD338KK) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FGD338KK>

More documents and user manuals: <https://manuals.plus/>