



[Manuals.plus](#) /

› [Emasme](#) /

› Emasme 8-10 Gun Safe for Rifles and Pistols - Instruction Manual

Emasme Emasme 8-10 Gun Safe

Emasme 8-10 Gun Safe for Rifles and Pistols - Instruction Manual

Model: Emasme 8-10 Gun Safe

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Emasme 8-10 Gun Safe. Please read all instructions carefully before installation and use to ensure proper function and safety. Keep this manual for future reference.



Figure 1: Emasme 8-10 Gun Safe

Important Safety Information

- Always store firearms unloaded and locked.
- Keep keys and access codes in a secure location, away from the safe and out of reach of children.
- Ensure the safe is properly mounted to a wall or floor to prevent tipping.
- Do not store flammable materials or hazardous chemicals inside the safe.
- Regularly check the safe's locking mechanism and overall condition.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Rifle Safe Cabinet
- 2 x Emergency Keys
- 1 x Emergency Charging Cable
- 1 x Assembly Manual (this document)

- 4 x Expansion Bolts (for mounting)
- 1 x Screw Kit (includes various screws for assembly)
- Adjustable Gun Racks (3 pieces)
- Removable Partitions
- Pistol Pouches
- Ammo Bags



Figure 2: Included Components

ASSEMBLY INSTRUCTIONS

The Emasme gun safe requires assembly. Follow these steps carefully. It is recommended to have a second person assist during assembly.

Step 1: Prepare the Base

Unpack all components and identify the bottom panel (C), left side panel (A), and right side panel (B). Place the bottom panel on a soft, flat surface to prevent scratches.

Product Details



Figure 3: Initial Assembly of Side Panels

Step 2: Attach Side Panels

Align the grooves of the left side panel (A) with the corresponding slots on the bottom panel (C). Gently slide them together. Repeat for the right side panel (B). Secure with screws from the screw kit.

Step 3: Install Back Panel and Top Panel

Slide the back panel (D) into the grooves of the assembled side panels. Then, place the top panel (G) onto the structure, ensuring all edges align. Secure with screws.

Step 4: Attach Door Frame and Door

Carefully attach the door frame (E) to the front of the safe. Then, align the door (O) hinges with the frame and insert the hinge pins (P). Ensure the door opens and closes smoothly.

Step 5: Install Interior Components

Install the adjustable gun racks (M), removable partitions, pistol pouches, and ammo bags as desired for your storage needs. The gun racks can be repositioned to accommodate different firearm lengths.



Figure 4: Interior Features and Customization

INSTALLATION AND MOUNTING

For maximum security, it is highly recommended to mount your Emasme gun safe to a wall or floor using the provided expansion bolts (Q).

Mounting Steps:

1. Choose a suitable location for the safe, ensuring it is level and stable.
2. Mark the positions for the pre-drilled holes on the back or bottom of the safe onto the wall or floor.
3. Drill pilot holes into the wall or floor at the marked positions.
4. Align the safe with the drilled holes and insert the expansion bolts (Q).
5. Tighten the bolts securely to firmly anchor the safe.



Figure 5: Gun Safe Installed in a Home Environment

OPERATING INSTRUCTIONS

First-Time Opening

1. Locate the silver cover on the digital panel. Slide it to reveal the emergency key slot.
2. Insert one of the emergency keys into the slot and turn it counter-clockwise.
3. While the key is turned, rotate the round panel clockwise to open the safe door.

The Gun Safe Requires Assembly

Effortless Assembly with
Every Step: Just Follow the Manual!



Figure 6: Unlocking Methods

Your browser does not support the video tag.

Video 1: Emasme Gun Safe Operation and Unlocking

Setting Your Password

1. With the safe door open, locate the red "SETTING BUTTON" on the inside of the door. Press it. The left and right lights on the digital panel will flash alternately.
2. On the digital panel, enter your desired 3-8 digit password. Press "#" to confirm. After a drop sound, re-enter the same password followed by "#" to confirm. A long beep indicates successful password setting.

Mute Function

To activate or deactivate the mute function, press and hold the number key "1" for more than three seconds. The left light on the panel will illuminate when mute mode is active. A long beep will confirm the change.

Alarm System

- **Incorrect Password Alarm:** If three incorrect password attempts are made, the safe will trigger a 70dB alarm for 60 seconds.

- **Anti-Theft Alarm:** Press and hold the number key "9" for more than three seconds to activate the anti-theft alarm. A long beep will confirm activation. Violent hits or shaking of the safe will trigger this alarm.



Figure 7: Alarm System and Mute Mode

MAINTENANCE

- Keep the safe clean by wiping it with a soft, dry cloth. Avoid abrasive cleaners.
- Regularly check the battery level of the digital lock. Replace batteries as needed to ensure continuous operation.
- Ensure the locking bolts move freely. Do not lubricate the locking mechanism unless specifically instructed by the manufacturer.
- Store emergency keys separately from the safe.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with digital code.	Incorrect password entered; low battery.	Re-enter the correct password. If unsuccessful, use the emergency key. Replace batteries if low.
Digital panel is unresponsive.	Dead batteries.	Use the emergency charging cable to provide temporary power, then open with the password and replace batteries immediately. Alternatively, use the emergency key.
Alarm sounds unexpectedly.	Incorrect password attempts; anti-theft alarm triggered by impact.	Enter the correct password to silence the alarm. Avoid impacts to the safe.
Door is stiff or difficult to close.	Obstruction in the door frame; safe not level.	Check for any obstructions. Ensure the safe is installed on a level surface.

SPECIFICATIONS

- **Brand:** Emasme
- **Model:** 8-10 Gun Safe
- **Product Dimensions:** 14.96"D x 17.71"W x 51.96"H

- **Item Weight:** 38.5 Pounds
- **Material:** Alloy Steel
- **Color:** Black
- **Lock Type:** Electronic Combination Lock
- **Special Features:** Dual Alarm System, Silent Mode, LED Lighting, Adjustable Gun Racks, Removable Partitions, Pistol Pouches, Ammo Bags
- **Mounting Type:** Floor Mount / Wall Mount (hardware included)
- **Capacity:** Designed for 8-10 rifles and 4 handguns



Figure 8: Product Dimensions

WARRANTY AND SUPPORT

Emasme provides comprehensive customer support for your gun safe. For any installation questions, operational issues, or warranty claims, please contact our 24/7 customer support team. Refer to the product packaging or the official Emasme website for specific contact details.

Online guidance and installation videos are also available to assist you.

