

## SMOTURE VAC01

# VC70 Vacuum Cleaner Replacement Electric Floor Brush Head User Manual

Model: VAC01 | Brand: SMOTURE

## 1. PRODUCT OVERVIEW

This manual provides essential information for the proper installation, operation, and maintenance of your SMOTURE VC70 Vacuum Cleaner Replacement Electric Floor Brush Head.

This replacement electric floor brush head is specifically designed for the SMOTURE VC70 vacuum cleaner model. It is crucial to confirm your vacuum cleaner model before purchase and installation, as this brush head is not compatible with other models.

### Key Features:

- Designed exclusively for SMOTURE VC70 vacuum cleaners.
- Electric brush head for effective floor cleaning.
- Does not include a roller brush.

## 2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions before installing or using the brush head. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always disconnect the vacuum cleaner from the power source before installing, removing, or cleaning the brush head.
- Ensure the brush head is securely attached before operating the vacuum cleaner.
- Do not immerse the electric brush head in water or other liquids.
- Keep hands, hair, and loose clothing away from moving parts during operation.
- This product is intended for household use only.

## 3. PRODUCT COMPONENTS



Image: The SMOTURE VC70 Replacement Electric Floor Brush Head. This image displays the complete brush head assembly, featuring the main housing, the connection point for the vacuum cleaner wand, and the front opening where the roller brush would typically be housed (note: this model does not include a roller brush). The design is sleek and dark-colored, indicating a robust build for floor cleaning.

The package contains one (1) SMOTURE VC70 Vacuum Cleaner Replacement Electric Floor Brush Head. No other accessories or parts are included.

#### 4. SETUP AND INSTALLATION

1. **Verify Compatibility:** Before installation, ensure your vacuum cleaner is the SMOTURE VC70 model. This brush head is exclusively designed for this model.
2. **Power Off:** Disconnect your SMOTURE VC70 vacuum cleaner from its power source and ensure it is turned off.
3. **Remove Old Head (if applicable):** If you are replacing an existing brush head, press the release button (if present) on your vacuum cleaner's wand and gently pull the old brush head off.
4. **Attach New Head:** Align the connection point of the new electric floor brush head with the end of your vacuum cleaner's wand. Push firmly until you hear a click, indicating it is securely locked in place.
5. **Check Connection:** Gently tug on the brush head to ensure it is firmly attached and does not wobble.

## 5. OPERATING INSTRUCTIONS

---

Once the electric floor brush head is securely installed on your SMOTURE VC70 vacuum cleaner, you can operate it as follows:

1. **Power On:** Reconnect your vacuum cleaner to the power source and turn it on.
2. **Begin Cleaning:** The electric brush head will activate automatically when the vacuum cleaner is turned on, providing enhanced cleaning performance on various floor types.
3. **Maneuver:** Guide the vacuum cleaner across the floor surfaces you wish to clean. The brush head's design allows for effective dirt and debris collection.

*Note: This brush head does not contain a roller brush. Its design is optimized for specific cleaning needs where a roller brush is not required or desired.*

## 6. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your electric floor brush head.

- **Cleaning the Brush Head:** Periodically inspect the brush head for any accumulated debris, hair, or lint. Use a soft, dry cloth to wipe down the exterior. Do not use harsh chemicals or abrasive cleaners.
- **Checking Airflow:** Ensure the air passages within the brush head are clear and free from obstructions to maintain proper suction.
- **Storage:** When not in use, store the vacuum cleaner with the brush head attached in a clean, dry place, away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Brush head not working.	Not properly connected to vacuum cleaner.	Ensure the brush head is securely attached to the vacuum cleaner wand until it clicks into place.
Reduced suction at brush head.	Obstruction in air passages.	Disconnect from power, inspect and clear any blockages in the brush head's air pathways.
Brush head does not fit.	Incorrect vacuum cleaner model.	This brush head is only compatible with the SMOTURE VC70. Verify your vacuum cleaner model.

## 8. SPECIFICATIONS

---

- **Model:** VAC01
- **Compatibility:** SMOTURE VC70 Vacuum Cleaner ONLY
- **Type:** Electric Floor Brush Head (Without Roller Brush)
- **Manufacturer:** SMOTURE
- **Item Weight:** 1.41 pounds
- **Package Dimensions:** 13.11 x 11.65 x 3.43 inches
- **Batteries Required:** No

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your SMOTURE VC70 Vacuum Cleaner Replacement Electric Floor Brush Head, please refer to the original vacuum cleaner's warranty documentation or contact SMOTURE customer service directly.

Please have your product model number (VAC01) and purchase details ready when contacting support.

**SMOTURE Customer Service:** Please visit the official SMOTURE website or refer to the contact information provided with your original vacuum cleaner purchase.