

YASHE XQB60-2010A

YASHE XQB60-2010A 17.6Lbs Portable Washing Machine User Manual

Model: XQB60-2010A

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your YASHE XQB60-2010A Portable Washing Machine. Please read this manual thoroughly before using the appliance and retain it for future reference.

The YASHE XQB60-2010A is a full-automatic portable compact washer designed for convenience in various living spaces such as apartments, homes, RVs, and dormitories. It features a 17.6Lbs capacity, 10 washing programs, 8 water levels, and an LED display.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.

- Ensure the appliance is placed on a flat, stable surface to prevent instability and excessive movement.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the washing machine for any damage during transit. This washing machine requires no assembly for seamless operation.

3.2 Placement

Place the washing machine on a flat, stable surface. It is recommended to let the machine sit on a flat surface for approximately 24 hours before initial use. The compact design (20" W x 20" D x 34" H) makes it suitable for limited spaces in apartments, dorms, RVs, and camping sites.



Image: The YASHE portable washing machine, dark grey in color, standing next to a laundry basket filled with clothes, illustrating its compact size and readiness for use.

3.3 Water Connection

Connect the inlet hose to a water source. The machine includes an inlet pipe and an adapter for connection. Ensure the 'straight' pipe end connects to the faucet or adapter. Remember to insert the extra O-ring into the 'straight' pipe end when using the adapter to prevent leaks.

HOW TO INSTALL



Our Inlet Hose



O Ring



Adapter



"Straight" pipe end connect to the faucet or adapter



Don't forget to put this Extra O ring into the "Straight" Pipe end, when using adapter.

Image: A visual guide demonstrating the connection of the inlet hose, including the O-ring and adapter, to a water faucet.

3.4 Drain Hose

The washing machine features a built-in drain pump and an extended drain hose for smooth water drainage from both high and low positions.



01

Powerful Rinse for Quick Clean

Butterfly Rotation Reduce Tangling

Lifting Flot Reduce Wear

Image: A close-up view highlighting the machine's features such as the transparent integrated cover, extended drain hose, inlet hose with adapter, reinforced adjustable feet, two side handle design, and protective bottom cover.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine is equipped with a push-button control console and an LED display that shows the required time and program status.



Image: A detailed view of the control panel, showing buttons for water level, program selection, start/pause, power, and the LED display for time and child lock indicator.

4.2 Loading Laundry

The machine has a 17.6Lbs capacity. For optimal washing performance, do not overload the machine. As a guide, it can accommodate approximately 18 T-shirts, 10 pairs of pants, 15 shirts, or 2 sets of sheets.

17.6LBS

Large Capacity



18 T-shirts



10 Pants



15 Shirts



2 Set of sheets




Image: An infographic showing the washing machine's dimensions (20" W x 20" D x 34" H) and its 17.6Lbs capacity, with icons representing the number of T-shirts, pants, shirts, and sheet sets it can hold.

4.3 Adding Detergent and Selecting Water Level

Add appropriate detergent based on the load size and soil level. The machine offers 8 water levels, allowing for precise water usage. Refer to the detergent manufacturer's recommendations for dosage.

8-LEVEL WATER CONTROL

Low soak & high rinse, more even and full laundry!

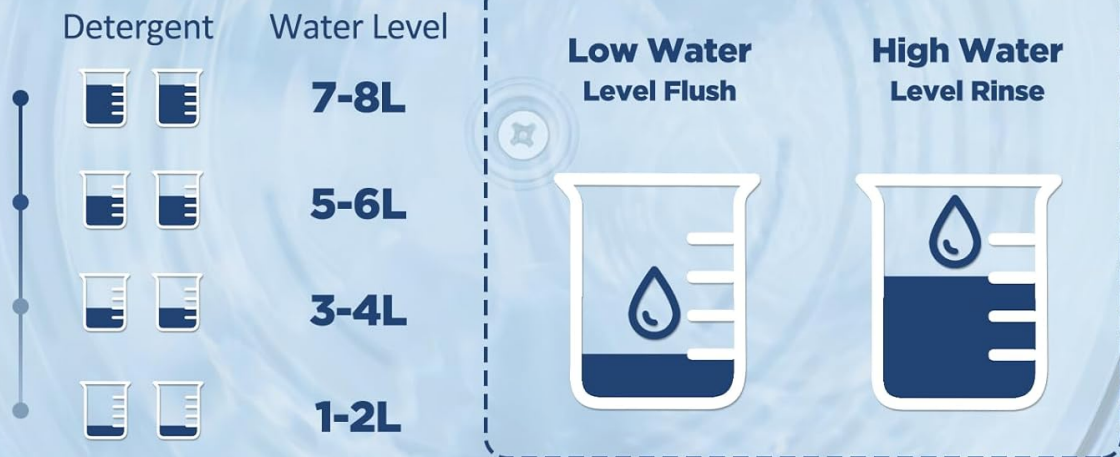

**The spin drying effect of the same clothes
95% moisture content drop**



Image: A chart detailing the 8 water levels (1-2L to 7-8L) and suggested detergent amounts, along with a visual comparison of low water level flush and high water level rinse.

4.4 Selecting a Program

The washing machine features 10 washing programs to cater to various laundry needs:

- **Standard:** For daily laundry.
- **Soft:** For delicate items.
- **Quick:** For lightly soiled items or small loads.
- **Heavy:** For heavily soiled or bulky items.
- **Soak:** For pre-soaking heavily soiled items.
- **Wash Only:** Performs only the wash cycle.
- **Spin Only:** Performs only the spin cycle.
- **Tub Clean:** For cleaning the washing machine tub.
- **Tub Air Dry:** For drying the inside of the tub.
- **Water Recycle:** For specific water-saving applications.

YASHE PORTABLE WASHING MACHINE WIDE APPLICATION



Image: A graphic displaying the 10 washing programs (Standard, Wash only, Soft, Spin only, Quick wash, Tub clean, Heavy duty, Tub air dry, Soak wash, Wash recycle) with their respective icons and estimated durations.

4.5 Special Features

- **Delay Start:** The machine offers a delay start option, allowing you to set the wash cycle to begin at a later time, up to 24 hours.
- **Child Lock:** For family safety, the machine is equipped with a child lock function to prevent accidental operation.
- **Auto Unbalance Detection (AUD):** To prevent instability, the washer automatically redistributes the load by adjusting water levels. If an imbalance persists, the machine will alert the user to avoid leaks or excessive movement.
- **360° Tumbling Wash Technology:** This technology, combined with an impeller that forms a butterfly water flow, provides a deep clean while reducing wear and tear on clothes.

CLEAN AND CARE FOR CLOTH

The impeller forms a butterfly water flow, lifting the clothes for washing and reducing wear and tear. It is like washing by hand, rubbing and kneading



Image: An illustration of the washing machine's impeller creating a butterfly water flow, designed to lift clothes for washing and reduce wear and tear, mimicking hand washing.



Powerful Rinse for Quick Clean

02

Butterfly Rotation Reduce Tangling

Lifting Flot Reduce Wear

Image: A graphic illustrating the child lock protection feature and the 24-hour delay start function, emphasizing safety and convenience.

5. MAINTENANCE

5.1 Cleaning the Tub

Regularly use the 'Tub Clean' program to maintain the cleanliness and hygiene of the washing machine's inner tub. The stainless steel inner tub is designed to resist rust and corrosion.



Image: A composite image illustrating the machine's self-cleaning capability, 360-degree washing action, blue light cleaning feature, and the lint collection box for easy maintenance.

5.2 Lint Filter

The washing machine is equipped with a lint filter. Regularly clean the lint filter to ensure optimal washing performance and prevent lint buildup on clothes.

5.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the reinforced PP washer body.

6. TROUBLESHOOTING

- **Machine not starting:** Ensure the power cord is securely plugged in and the power button has been pressed. Check if the lid is properly closed.
- **Excessive vibration or noise:** Verify that the machine is placed on a flat, stable surface. The Auto Unbalance Detection (AUD) system will attempt to redistribute the load. If the issue persists, manually redistribute the laundry inside the tub. The shock-absorbing base and anti-vibration design help provide stability.
- **Water not draining:** Check if the drain hose is properly positioned and not kinked or blocked. Ensure the built-in drain pump is functioning correctly.
- **Water leakage:** Ensure all hose connections (inlet and drain) are secure and free from damage. Check the O-ring installation for the inlet hose.
- **Error codes on LED display:** Refer to the specific error code in the included manual for detailed troubleshooting steps.


7. SPECIFICATIONS






| Feature | Specification |
|---------------------|--|
| Brand | YASHE |
| Model Number | XQB60-2010A |
| Capacity | 17.6 Pounds |
| Product Dimensions | 20"D x 20"W x 34"H |
| Installation Type | Freestanding |
| Control Console | Push Button |
| Access Location | Top Load |
| Voltage | 110 Volts (AC) |
| Material Type | Plastic, Stainless Steel |
| Color | Dark Grey |
| Special Features | Adjustable Leveling Legs, Hard Water Wash Programme, Time Remaining Display, Vibration Reduction |
| Included Components | 1*Portable Washing Machine, 1*Adapter, 1* Inlet pipe, 1*Manual |

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official YASHE website. Keep your purchase receipt as proof of purchase for any warranty claims.

Related Documents - XQB60-2010A

| | |
|---|--|
|  | <p>Mictemaw Fully Automatic Washing Machine Manual - Installation, Operation, and Troubleshooting</p> <p>Comprehensive user manual for Mictemaw Fully Automatic Washing Machines (Models XQB60-818-B, XQB60-818-R, XQB50-118-A). Covers installation, safety precautions, operation, maintenance, and troubleshooting.</p> |
|---|--|
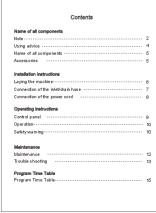
| | |
|--|---|
|  | <p>Krib Bling Automatic Washing Machine Instruction Manual</p> <p>Instruction manual for the Krib Bling Automatic Washing Machine, models XQB60-201B and XQB70-618B. Includes safety warnings, installation guides, usage instructions, troubleshooting, and parts information.</p> |
|  | <p>Automatic Washing Machine Instruction Manual</p> <p>Instruction manual for the XQB60-2010 Automatic Washing Machine, covering installation, usage, safety precautions, and troubleshooting.</p> |
|  | <p>KRIB BLING Automatic Washing Machine Instruction Manual (XQB60-201B, XQB70-618B)</p> <p>This instruction manual provides detailed information on the installation, operation, safety, and troubleshooting of the KRIB BLING Automatic Washing Machine, models XQB60-201B and XQB70-618B.</p> |
|  | <p>KRIB BLING Automatic Washing Machine Instruction Manual</p> <p>Comprehensive instruction manual for the KRIB BLING Automatic Washing Machine, covering installation, usage, troubleshooting, and safety precautions for models XQB60-201B and XQB70-618B.</p> |
|  | <p>XQB60-1699J Washing Machine Instruction Manual</p> <p>Comprehensive user manual for the XQB60-1699J washing machine, detailing installation, operation, safety precautions, maintenance procedures, troubleshooting guide, and program times.</p> |