

[Manuals.plus](#) /

> [Snrigw](#) /

> Snrigw RC833A FMB1 Replacement Voice Remote Control User Manual

Snrigw RC833A FMB1

Snrigw RC833A FMB1 Replacement Voice Remote Control User Manual

For TCL Smart TVs & Streaming Devices

1. INTRODUCTION

This manual provides instructions for the Snrigw RC833A FMB1 Replacement Voice Remote Control. It is designed to be compatible with specific TCL Smart TVs and streaming devices, offering seamless control and voice functionality. Please read this manual thoroughly to ensure proper use and to maximize your experience with the remote control.

2. PRODUCT OVERVIEW

The Snrigw RC833A FMB1 is a replacement remote control engineered for compatibility with TCL devices that utilize the RC833A FMB1 voice remote. It features an ergonomic design for comfortable handling and responsive buttons for efficient navigation. The remote supports voice commands, power control, volume adjustment, and quick access to popular streaming services.





Image 2.1: Front and back view of the Snrigw RC833A FMB1 Replacement Voice Remote Control, showcasing its button layout and textured rear grip.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are not included and must be purchased

separately.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Requires Two AAA batteries

Not included by default. Additional purchase required.



Durable ABS Plastic



Recycled Material Option



Image 3.1: Illustration demonstrating the requirement for two AAA batteries, which are not included with the remote control.

3.2 Initial Use and Pairing

This replacement remote control is designed for instant plug-and-play functionality. No complex programming or manual pairing steps are typically required. Once batteries are installed, the remote should automatically connect with your compatible TCL Smart TV or streaming device.

- After inserting batteries, point the remote control towards your TCL TV.

- Press any button (e.g., Power, Volume Up) to test functionality.
- If the remote does not respond, ensure batteries are correctly inserted and fully charged.

Use Directly

Control Your TV without Programming



Image 3.2: Visual representation of the remote control's direct usability without requiring programming, highlighting its ease of setup.

4. OPERATING INSTRUCTIONS

4.1 Button Functions

The remote control features a standard layout with clearly labeled buttons for intuitive operation. Key functions include:

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (Up/Down/Left/Right/OK):** For menu navigation and selection.
- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.

- **Home Button:** Returns to the main smart TV interface.
- **Back Button:** Returns to the previous screen or menu.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services (e.g., Netflix, Prime Video, YouTube, Disney+).

Sensitive Buttons

Durable Material

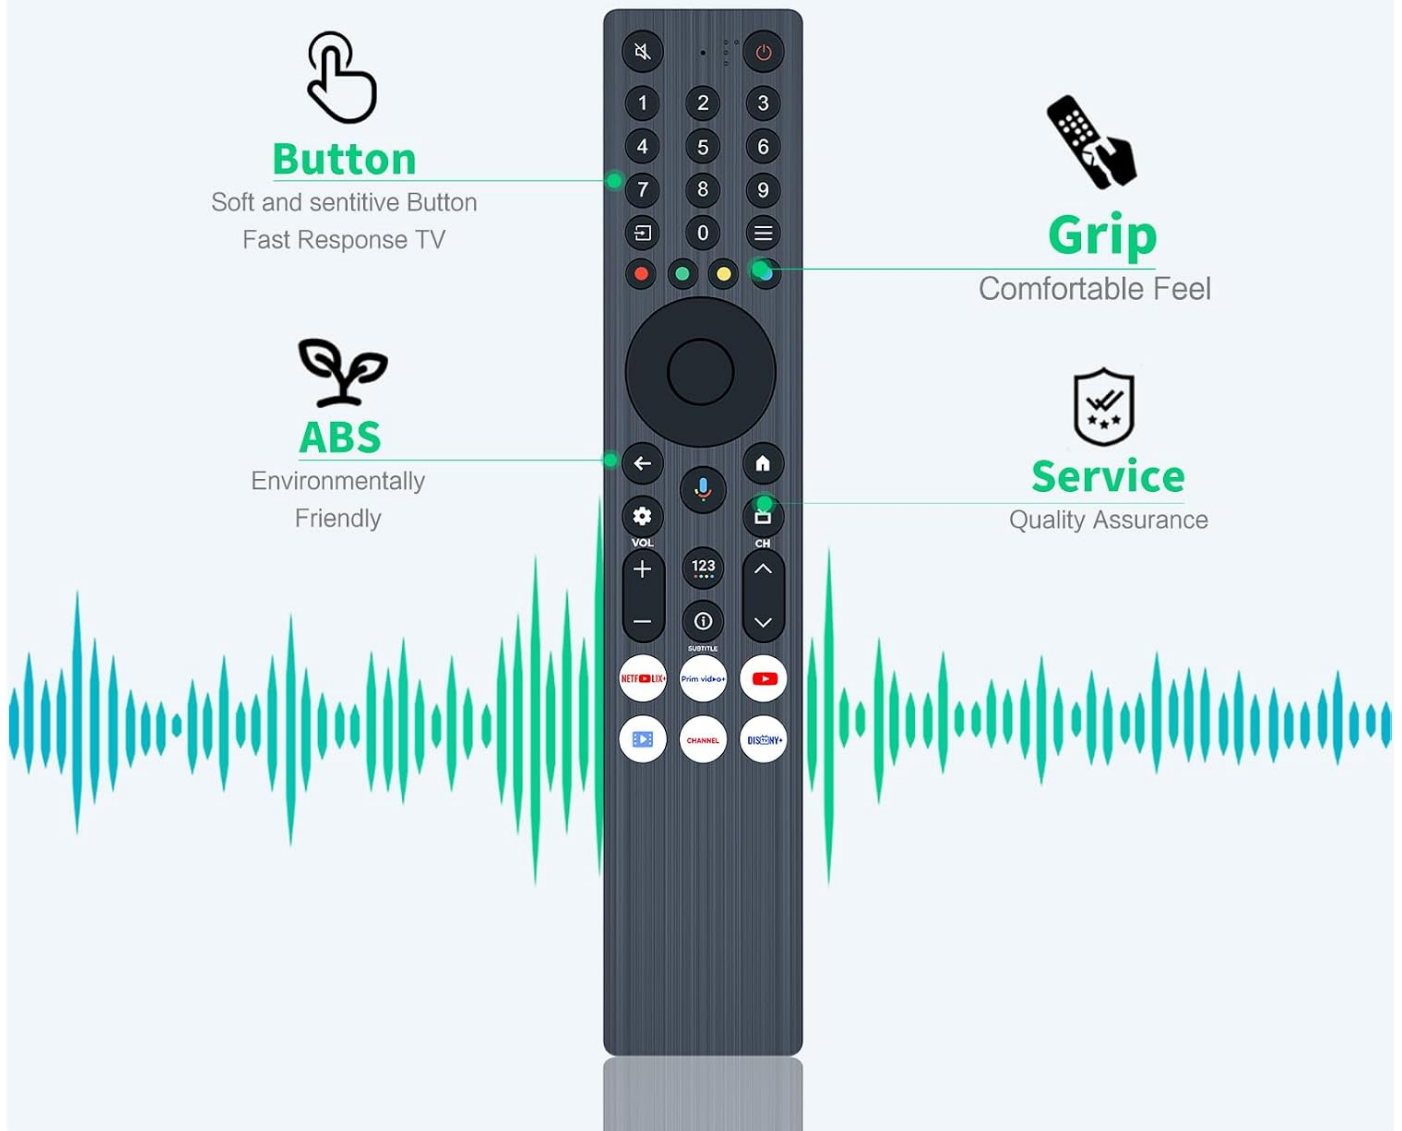


Image 4.1: Detailed view of the remote control's buttons, emphasizing their sensitivity and the ergonomic grip for comfortable use.

4.2 Voice Control

The remote control supports voice commands for enhanced interaction with your TV. To use voice control:

1. Press the dedicated **Voice Button** (often indicated by a microphone icon).
2. Speak clearly into the microphone located on the remote control.
3. You can use voice commands for tasks such as searching for content, launching apps, or controlling playback.

4.3 Signal Stability and Range

The remote control is designed to provide stable signal transmission over a considerable distance and wide angle, ensuring reliable operation from various positions within your viewing area.

- **Operating Distance:** Effective up to approximately 26 feet (8 meters).
- **Operating Angle:** Supports multi-angle control up to 120 degrees.



Image 4.2: Diagram illustrating the remote control's signal stability, demonstrating its effective range of up to 26 feet and a wide 120-degree operating angle.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old or depleted batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.

- Confirm the remote control is within the effective operating range (up to 26 feet).

- **Voice control not working:**

- Check if the voice button is being pressed correctly.
- Ensure your TV's settings for voice control are enabled.
- Speak clearly and directly into the remote's microphone.

- **Buttons are sticky or unresponsive:**

- Clean the remote control as described in the Maintenance section.
- If the issue persists, the remote may require replacement.

6. SPECIFICATIONS

Feature	Detail
Model	RC833A FMB1
Compatibility	TCL Smart TVs & Streaming Devices (RC833A FMB1 compatible)
Power Source	2 x AAA Batteries (not included)
Connectivity	Infrared (IR) and Bluetooth (for voice function)
Operating Distance	Up to 26 feet (8 meters)
Operating Angle	Up to 120 degrees
Material	Durable ABS Plastic
Color	Black
Item Weight	2.56 ounces
Package Dimensions	8.66 x 1.69 x 0.63 inches

7. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades or if it stops responding. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

8. WARRANTY AND SUPPORT

For any queries or assistance regarding your Snrigw RC833A FMB1 Replacement Voice Remote Control, please contact the seller or manufacturer directly. Your satisfaction is important, and support is available to address any concerns you may have.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question