

## Dell 5400

# Dell Latitude 5400 Laptop User Manual

Model: 5400 | Brand: Dell

## 1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Dell Latitude 5400 Laptop.

Designed for professionals, this renewed device offers a Full High Definition (FHD) touchscreen, an Intel Core i5-8365U 8th Gen Processor, 32GB of RAM, and a spacious 1TB Solid State Drive (SSD), running on Windows 11 Pro. Please read this manual thoroughly to ensure optimal performance and longevity of your laptop.



Figure 1: Dell Latitude 5400 Laptop with touchscreen functionality demonstrated.

## 2. SETUP

### 2.1. Unboxing and Initial Power On

1. Carefully remove the laptop and included charger from its packaging.
2. Connect the charger to the laptop's power port and a wall outlet.
3. Open the laptop lid and press the power button, typically located on the top-right of the keyboard or side.

### 2.2. Windows 11 Pro Configuration

Follow the on-screen prompts to complete the initial setup of Windows 11 Pro. This includes selecting your region, language, connecting to a Wi-Fi network, and creating a user account.

### 2.3. Connecting Peripherals

Utilize the available ports to connect external devices such as a mouse, keyboard, external monitor, or USB drives. Refer to Section 4 for a detailed overview of available ports.

## 3. OPERATING YOUR DELL LATITUDE 5400

### 3.1. Basic Navigation

- **Touchpad:** Use the integrated touchpad for cursor control. Tap to click, use two fingers to scroll, and pinch to zoom.
- **Keyboard:** The full-size keyboard provides comfortable typing. Utilize function keys (Fn) for quick access to system settings like volume and brightness.
- **Touchscreen:** Interact directly with the display using touch gestures. Tap to select, swipe to scroll, and pinch to zoom.



Figure 2: Top-down view of the Dell Latitude 5400 keyboard and touchpad.

### 3.2. Windows 11 Pro Features

Explore the advanced features of Windows 11 Pro for enhanced productivity and security. This includes Snap Layouts for multitasking, Microsoft Teams integration, and robust security protocols.

## 4. PORTS AND INTEGRATED FEATURES

Your Dell Latitude 5400 is equipped with a variety of ports and integrated features to support your workflow.

### 4.1. Available Ports

- **USB Type-C:** Versatile port for data transfer, video output, and charging.
- **HDMI:** Connect to external displays, projectors, or TVs for presentations or extended workspace.
- **USB-A:** Standard USB ports for connecting various peripherals like external drives, mice, and keyboards.
- **Headphone/Microphone Combo Jack:** For audio input and output.
- **SD Card Reader:** For transferring data from memory cards.
- **Ethernet Port:** For wired network connectivity.



Figure 3: Left side ports including USB Type-C, HDMI, and USB-A.



Figure 4: Right side ports including USB-A, SD card reader, and headphone jack.

#### 4.2. Integrated Webcam

The integrated webcam is ideal for video conferencing and online meetings, providing clear video quality.

### 5. MAINTENANCE

#### 5.1. Cleaning

- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner to clean the display.
- For the keyboard and chassis, use a soft cloth or compressed air to remove dust and debris.

#### 5.2. Battery Care

To maximize battery life, avoid extreme temperatures and fully discharging the battery frequently. The average battery life is approximately 6 hours, depending on usage.

#### 5.3. Software Updates

Regularly check for and install Windows updates to ensure your system has the latest security patches and performance improvements.

### 6. TROUBLESHOOTING

#### 6.1. Common Issues

- **No Power:** Ensure the charger is securely connected to both the laptop and a working power outlet.
- **Display Issues:** If the screen is blank, try connecting an external monitor to check if the issue is with the laptop's display.
- **Connectivity Problems:** For Wi-Fi or Ethernet issues, restart your router and the laptop. Check network settings in

Windows.

## 6.2. Restarting Your Laptop

A simple restart can often resolve minor software glitches. To restart, click the Start button, then Power, and select Restart.

## 7. SPECIFICATIONS

Feature	Specification
Standing screen display size	14 Inches
Screen Resolution	1920 x 1080 pixels
Max Screen Resolution	1920x1080 Pixels
Processor	1.1 GHz core_i5_8365u
RAM	DDR4
Hard Drive	1 TB SSD
Graphics Coprocessor	Intel UHD Graphics
Chipset Brand	Intel
Card Description	Integrated
Wireless Type	802.11ac, 802.11b/g, 802.11n
Average Battery Life (in hours)	6 Hours
Brand	Dell
Series	Latitude
Item model number	5400
Operating System	Windows 11 Pro
Item Weight	3.2 pounds
Product Dimensions	12.7 x 0.83 x 8.5 inches
Color	Black
Processor Brand	Intel
Number of Processors	4
Computer Memory Type	DDR4 SDRAM
Hard Disk Size	1 TB
CPU Model	Core i5-8365U
Ram Memory Installed Size	32 GB
Special Feature	Anti Glare Coating, HD Audio, Lightweight

## **8. WARRANTY AND SUPPORT**

---

As an Amazon Renewed product, your Dell Latitude 5400 Laptop is backed by the Amazon Renewed Guarantee. This provides a refund or replacement within 90 days of receipt if the product does not work as expected. For further support or to inquire about extended protection plans, please refer to the Amazon Renewed program details or contact Amazon customer service.