

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Tamagotchi](#) /
- › [Tamagotchi Original - Angel Cake Digital Pet Instruction Manual](#)

## Tamagotchi 46165

# Tamagotchi Original - Angel Cake Digital Pet Instruction Manual

## INTRODUCTION

---

Welcome to the world of Tamagotchi! This instruction manual will guide you through the features and care requirements for your Tamagotchi Original - Angel Cake digital pet. Your device features Angel programming, starting with an Obaketchi Angel character. The care you provide will influence its growth into one of five adult Tamagotchi Angel characters, with additional secret characters to discover.

The Tamagotchi Original - Angel Cake is a handheld digital pet that requires nurturing. You will be responsible for feeding it, managing its environment, playing with it, and ensuring its well-being. This device is designed for users aged 8 and above.



*Image: The Tamagotchi Original - Angel Cake device, featuring a pastel-colored shell with angel wings and cherry motifs, attached to a silver ball chain.*

## WHAT'S IN THE BOX

---

- Tamagotchi Original - Angel Cake Electronic Pet

## SETUP

---

### Battery Installation

Your Tamagotchi device comes with one CR2032 battery pre-installed. If replacement is needed, locate the screw on the back of the device. Carefully remove the screw, open the battery compartment, and replace the CR2032 battery. Ensure correct polarity before closing the compartment and re-securing the screw.

### Initial Activation

Upon first use or after battery replacement, your Tamagotchi will activate. You will typically see an egg on the screen, which will soon hatch into your Obaketchi Angel character.

## OPERATING YOUR TAMAGOTCHI

The Tamagotchi device features three buttons for interaction. These buttons allow you to navigate menus and perform actions to care for your digital pet.



Image: The back of the Tamagotchi packaging, illustrating the device's functions with icons for Health Meter, Feed, Game, Sick/Care, Attention, Discipline, Bathroom, and Lights. Three buttons (A, B, C) are labeled for Select, Confirm, and Cancel.

## Basic Controls

- **Button A (Select):** Navigates through menu options.
- **Button B (Confirm):** Selects the highlighted option.
- **Button C (Cancel):** Returns to the previous screen or cancels an action.

## Caring for Your Pet

- **Feed:** Provide meals and snacks to keep your Tamagotchi full and happy.
- **Lights:** Turn lights on or off to help your Tamagotchi sleep or wake up.
- **Play:** Engage in mini-games to keep your pet entertained and improve its happiness.
- **Medicine:** Administer medicine if your Tamagotchi becomes sick.
- **Bathroom:** Clean up after your Tamagotchi uses the bathroom to maintain hygiene.

- **Health Meter:** Regularly check your pet's health status, including hunger, happiness, and discipline levels.
- **Praise/Discipline:** Praise your Tamagotchi for good behavior or discipline it when necessary to guide its development.
- **Attention:** Respond to your Tamagotchi's calls for attention promptly.

## Tapping Feature

A unique tapping feature is included. Tap the shell of the device to bring your Angel Tamagotchi character back from a stroll. This feature can also be used to scare off a bat that attempts to steal candy from your pet.



*Image: An illustration depicting the tapping feature, showing a hand tapping the Tamagotchi device to deter a bat from stealing candy.*

## CHARACTER EVOLUTION

Your Tamagotchi begins as an Obaketchi Angel (ghost character). The way you nurture and care for your character will determine its evolution. There are 5 distinct adult Tamagotchi Angel characters you can raise, in addition to secret characters that may appear based on your care.



*Image: An illustration showcasing different Tamagotchi Angel characters, demonstrating the variety of forms your digital pet can evolve into.*

## MINI-GAMES

---

To keep your Tamagotchi Angel character happy, you can play the 'Shooting Star' mini-game. Access this game through the device's menu and follow the on-screen instructions to play.

## MAINTENANCE

---

### Cleaning

To clean your Tamagotchi device, use a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as these may damage the device's casing or screen.

### Battery Replacement

When the battery runs low, the screen display may become dim or the device may stop responding. Refer to the 'Setup' section for instructions on how to replace the CR2032 battery.

## TROUBLESHOOTING

---

- **Pet is unresponsive or 'dies':** Ensure the battery is fresh and correctly installed. Consistent care, including feeding, cleaning, and playing, is crucial for your pet's survival. If the device becomes unresponsive, try removing and reinserting the battery to perform a soft reset.
- **Sound issues:** If the sound is not working, check the device's settings to ensure it has not been muted. Some models allow muting by pressing specific buttons simultaneously.
- **Screen is dim or blank:** This often indicates a low battery. Replace the CR2032 battery as described in the 'Setup' section.

## SPECIFICATIONS

---

- **Model Number:** 46165
- **Product Dimensions:** 2.13"L x 1.75"W x 0.75"H
- **Item Weight:** 2.82 ounces (0.08 Kilograms)
- **Power Source:** Battery Powered
- **Battery Type:** 1 x CR2032 (included)
- **Age Range:** 8+ years
- **Display Type:** LCD
- **Material:** Acrylonitrile Butadiene Styrene, Metal, Polycarbonate, Silicone
- **Manufacturer:** Bandai Namco Toys & Collectibles America
- **UPC:** 045557461652

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage or product support, please refer to the documentation included with your purchase or contact Bandai Namco Toys & Collectibles America directly. Keep your proof of purchase for any warranty claims.