

Manuals.plus /

› Sisism /

› Sisism A10 Pro Wireless Earbuds User Manual

Sisism A10 Pro

Sisism A10 Pro Wireless Earbuds User Manual

Model: A10 Pro

1. INTRODUCTION

Thank you for choosing the Sisism A10 Pro Wireless Earbuds. This manual provides essential information for the proper setup, operation, and maintenance of your earbuds. Please read it thoroughly before use to ensure optimal performance and longevity of the product.



Image: The Sisism A10 Pro Wireless Earbuds in their charging case, highlighting key features such as Bluetooth 5.3, LED power display, ultra-lightweight design, 38-hour extended playtime, Hi-Res lossless audio, and ergonomic comfort-fit design.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Sisism A10 Pro Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- Multiple Sizes of Ear Tips (S, M, L)
- User Manual



Image: A flat lay of the Sisism A10 Pro package contents, including the earbuds, charging case, USB-C cable, various ear tip sizes, and the user manual.

3. SETUP

3.1 Charging the Earbuds and Case

1. **Initial Charge:** Before first use, fully charge the charging case and earbuds.
2. **Charging Case:** Connect the provided USB-C cable to the charging port on the case and to a USB power adapter (not included). The LED digital display on the case will show the battery percentage.
3. **Charging Earbuds:** Place the earbuds into the charging case. Ensure they are correctly seated; the earbuds will automatically begin charging. The LED indicators on the earbuds (if present) or the case display will show charging status.

A full charge provides approximately 50 hours of total playback time with the charging case, with 8 hours from the earbuds on a single charge and 1.5 hours for fast charging the case.

Extra-Long Battery Life of 50 Hrs

8 Hrs | 50 Hrs

1.5 Hrs
Fast Charging



Image: The Sisism A10 Pro Earbuds in their charging case, illustrating the extended battery life of 50 hours and 1.5 hours fast charging capability.

3.2 Pairing with a Device

1. **Power On:** Open the charging case. The earbuds will automatically power on and enter pairing mode. The indicator light on one earbud will flash, indicating it is ready to pair.
2. **Enable Bluetooth:** On your device (smartphone, tablet, laptop), enable Bluetooth.
3. **Select Device:** Search for "Sisism A10 Pro" in the list of available Bluetooth devices and select it to connect.
4. **Confirmation:** Once connected, you will hear an audible confirmation, and the indicator lights on the earbuds will turn off or flash slowly.
5. **Automatic Reconnection:** After initial pairing, the earbuds will automatically connect to the last paired device when removed from the case, provided Bluetooth is enabled on the device.

3.3 Wearing the Earbuds

For optimal sound quality and comfort, choose the ear tips that best fit your ears. Gently insert the earbuds into your ear canal and rotate them slightly until they feel secure and comfortable.

Ergonomic Design

Choose the right ear tips for better sound isolation and more bass

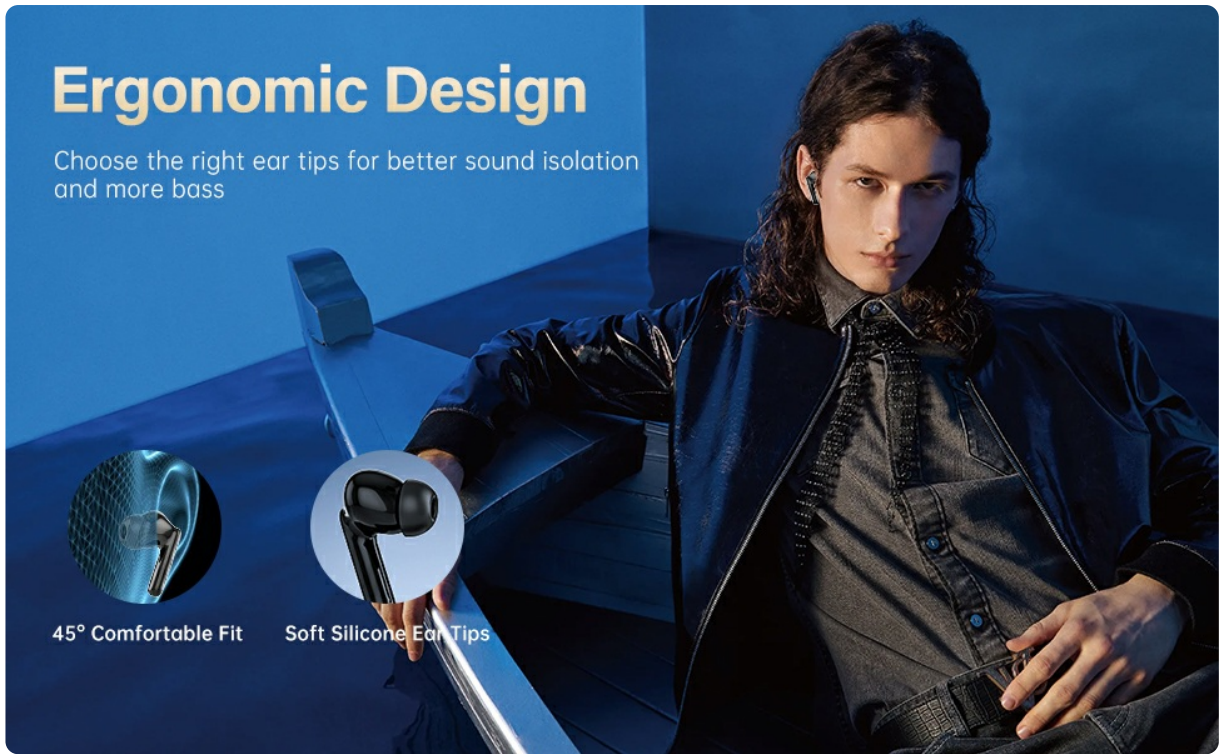


Image: A close-up showing the ergonomic design of the Sisism A10 Pro Earbuds, emphasizing the 45-degree comfortable fit and soft silicone ear tips for better sound isolation and bass.

4. OPERATING INSTRUCTIONS

The Sisism A10 Pro Earbuds feature touch controls for various functions:

Function	Action
Power On	Open charging case or long press touch panel for 3 seconds.
Power Off	Place earbuds back into charging case or long press touch panel for 5 seconds.
Play/Pause Music	Single tap on either earbud.
Next Track	Double tap on the <i>right</i> earbud.
Previous Track	Double tap on the <i>left</i> earbud.
Answer/End Call	Single tap on either earbud during an incoming call.
Reject Call	Long press on either earbud for 2 seconds during an incoming call.
Activate Voice Assistant	Triple tap on either earbud.
Volume Up	Long press on the <i>right</i> earbud.
Volume Down	Long press on the <i>left</i> earbud.

Note: Touch sensitivity may vary. Ensure your fingers are clean and dry for optimal control response.

5. MAINTENANCE

5.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Use a cotton swab to gently clean the charging contacts on both the earbuds and the case to ensure proper charging.
- Avoid using abrasive materials, alcohol, or chemical cleaners.

5.2 Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

5.3 Water Resistance (IPX7)

The Sisism A10 Pro Earbuds are rated IPX7 waterproof, meaning they can withstand immersion in water up to 1 meter for 30 minutes. This makes them suitable for workouts and daily use where they might be exposed to sweat or light rain.

- Do not intentionally submerge the charging case, as it is not waterproof.
- Ensure earbuds are completely dry before placing them back into the charging case to prevent damage to the charging contacts.
- IPX7 rating does not imply resistance to strong water jets or prolonged submersion.



Image: The Sisism A10 Pro Earbuds and charging case with water splashing around them, illustrating their rainproof and daily use design with IPX7 water resistance.

6. TROUBLESHOOTING

If you encounter any issues with your Sisism A10 Pro Earbuds, refer to the following common solutions:

- **Earbuds not pairing with device:**
 - Ensure earbuds are charged and out of the charging case.

- Turn off and on Bluetooth on your device.
 - Forget/delete "Sisism A10 Pro" from your device's Bluetooth list and try pairing again.
 - Restart your device.
- **Only one earbud working:**
 - Ensure both earbuds are charged.
 - Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid and take them out again. This often re-syncs them.
 - Perform a factory reset (refer to specific instructions if available, otherwise try forgetting device and re-pairing).
- **Earbuds not charging:**
 - Ensure the charging case is charged.
 - Check that the earbuds are correctly seated in the charging case and the charging contacts are clean.
 - Try a different USB-C cable and power adapter.
- **Poor sound quality or connection drops:**
 - Ensure there are no obstructions between the earbuds and your device.
 - Move closer to your device to reduce interference.
 - Try different ear tips for a better seal in your ear canal.
 - Restart your device and re-pair the earbuds.

7. SPECIFICATIONS

Feature	Detail
Model Name	A10 Pro
Brand	Sisism
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Ear Placement	In Ear
Noise Control	Environmental Noise Cancellation (ENC)
Water Resistance Level	IPX7 (Earbuds only)
Battery Life (Earbuds)	Up to 8 hours (single charge)
Total Playback Time	Up to 50 hours (with charging case)
Control Method	Touch
Audio Driver Type	Dynamic Driver
Frequency Range	20Hz - 20,000Hz
Item Weight	0.09 Kilograms



Image: A diagram illustrating the Bluetooth 5.3 chip, highlighting improvements such as 50% reduced delay, 65% increased connection signal, and 100% increased transmission speed.

8. WARRANTY AND SUPPORT

Sisism products are designed for reliability and performance. For information regarding warranty coverage, please refer to the warranty card included in your product packaging or visit the official Sisism website.

If you require technical assistance, troubleshooting beyond this manual, or have questions about your Sisism A10 Pro Wireless Earbuds, please contact our customer support team through the following channels:

- **Email:** Refer to the contact information provided in your product documentation.
- **Website:** Visit the official Sisism support page for FAQs and further assistance.

Please have your product model number (A10 Pro) and purchase details ready when contacting support.