

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lisowod](#) /
- › [Lisowod L03Pro Portable Smart Projector User Manual](#)

Lisowod L03Pro

Lisowod L03Pro Portable Smart Projector User Manual

Model: L03Pro

1. INTRODUCTION

Thank you for purchasing the Lisowod L03Pro Portable Smart Projector. This manual provides essential information for setting up, operating, and maintaining your projector. Please read it thoroughly before use to ensure optimal performance and longevity of the device. Keep this manual for future reference.



Image 1.1: The Lisowod L03Pro Portable Smart Projector, a compact device designed for home theater use, featuring a lens on the front and a speaker grille below.

2. SAFETY INFORMATION

- Do not look directly into the projector lens when the lamp is on.
- Ensure proper ventilation around the projector to prevent overheating.
- Use only the power adapter supplied with the projector.
- Keep the projector away from water, moisture, and flammable materials.
- Do not attempt to disassemble or modify the projector. Refer all servicing to qualified personnel.
- Clean the lens only with a soft, lint-free cloth specifically designed for optical surfaces.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Lisowod L03Pro Portable Smart Projector
- Remote Control
- Power Adapter
- HDMI Cable
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Lisowod L03Pro projector.

Front Panel

- **Projection Lens:** Emits the image onto the screen or wall.
- **Auto-Focus Sensor:** Automatically adjusts image clarity.
- **Speaker Grille:** Integrated audio output.

Rear Panel

- **Power Port:** Connects to the power adapter.
- **HDMI Port:** Connects to external devices like laptops, gaming consoles, or streaming sticks.
- **USB Port:** For connecting USB drives or other compatible devices.
- **Audio Out (3.5mm Jack):** For connecting external speakers or headphones.

Top Panel

- **Power Button:** Turns the projector on/off.
- **Navigation Buttons:** For menu navigation (if applicable, or primarily via remote).

5. SETUP

5.1 Placement

Place the projector on a stable, flat surface. Ensure there is adequate space around the projector for ventilation. The distance from the projection surface (wall or screen) will determine the image size. Adjust the distance until the desired image size is achieved.

5.2 Power Connection

1. Connect the power adapter to the projector's power port.
2. Plug the power adapter into a power outlet.

5.3 Initial Power On

Press the Power button on the projector or the remote control to turn on the device. The projector will boot up and display the main interface.

5.4 Focus and Keystone Correction

The Lisowod L03Pro features automatic focus and keystone correction. Upon startup or movement, the projector will automatically adjust the image for clarity and correct trapezoidal distortion. If manual adjustment is needed, navigate to the "Settings" menu using the remote control and select "Focus" or "Keystone Correction" options.

6. OPERATING INSTRUCTIONS

6.1 Remote Control Navigation

Use the provided remote control to navigate the projector's interface. The remote typically includes power, directional, OK, back, home, volume, and input source buttons.

6.2 Connecting Devices

6.2.1 Wi-Fi Connection

1. Go to the "Settings" menu on the projector.
2. Select "Network" or "Wi-Fi Settings".
3. Turn on Wi-Fi and select your desired network from the list.
4. Enter the Wi-Fi password using the on-screen keyboard.
5. Confirm to connect.

6.2.2 Bluetooth Connection

1. Go to the "Settings" menu.
2. Select "Bluetooth Settings".
3. Turn on Bluetooth and search for available devices.
4. Select your Bluetooth speaker or headphones from the list to pair.

6.2.3 HDMI Connection

1. Connect one end of the HDMI cable to the HDMI port on the projector.
2. Connect the other end to the HDMI output port of your external device (e.g., laptop, game console).
3. On the projector, select the HDMI input source from the main menu or by pressing the "Input" button on the remote.

6.2.4 USB Playback

1. Insert a USB drive into the projector's USB port.
2. The projector should automatically detect the USB drive or prompt you to open its contents. If not, navigate to the "File Manager" or "Media Player" application.
3. Browse and select the desired media file (videos, photos, music) to play.

6.3 Smart Features and Streaming Apps

The L03Pro projector comes with integrated smart features, including access to various streaming applications. Ensure the projector is connected to Wi-Fi.

- From the home screen, navigate to the "Apps" section.
- Select your desired streaming app (e.g., Netflix, YouTube).

- Log in with your account credentials if prompted.

6.4 Audio and Picture Settings

Access the "Settings" menu to adjust audio and picture preferences.

- **Picture Settings:** Adjust brightness, contrast, color, aspect ratio, and projection mode (front, rear, ceiling).
- **Audio Settings:** Adjust volume, sound mode, and output device (internal speaker, Bluetooth, 3.5mm jack).

7. MAINTENANCE

7.1 Cleaning the Lens

Use a soft, lint-free cloth or a lens cleaning brush to gently wipe the projector lens. Avoid using abrasive cleaners or excessive force, as this can scratch the lens surface.

7.2 General Care

- Keep the projector in a clean, dust-free environment.
- When not in use, cover the lens with its cap to protect it from dust and scratches.
- Avoid exposing the projector to extreme temperatures or direct sunlight.
- Do not block the ventilation openings.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image displayed	Power cable not connected. Incorrect input source selected. External device not powered on or connected properly.	Check power connection. Select the correct input source (HDMI, USB). Ensure external device is on and cables are secure.
Blurred image	Out of focus. Projector not perpendicular to screen (keystone issue).	Allow auto-focus to adjust or manually adjust focus in settings. Allow auto-keystone to adjust or manually correct keystone in settings.
No sound	Volume too low or muted. Incorrect audio output selected. External device audio settings.	Increase volume or unmute. Check audio output settings (internal speaker, Bluetooth, 3.5mm). Adjust audio settings on the connected external device.
Wi-Fi connection issues	Incorrect password. Weak signal. Router issues.	Re-enter Wi-Fi password. Move projector closer to the router. Restart your Wi-Fi router.

9. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Lisowod
Model Number	L03Pro
Display Resolution	1920 x 1080 (Full HD)
Connectivity Technology	Wi-Fi, Bluetooth
Special Feature	Portable
Recommended Uses	Home Cinema
Item Weight	3.76 pounds
Product Dimensions	8.27 x 7.09 x 7.87 inches

10. WARRANTY AND SUPPORT

Lisowod is committed to providing quality products and customer satisfaction. The manufacturer offers lifetime technical support for the L03Pro projector. For any technical assistance, troubleshooting, or warranty inquiries, please contact Lisowod customer service through their official channels or the retailer where the product was purchased.

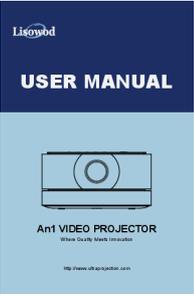
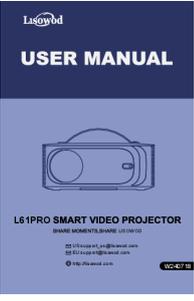
Please refer to your purchase documentation for specific warranty terms and conditions.



© 2025 Lisowod. All rights reserved.

Related Documents - L03Pro

	<p>Lisowod LP02 Portable LCD LED Projector Specifications</p> <p>Comprehensive details on the Lisowod LP02 portable LCD LED projector, including its HDTV 1080p resolution, 500 ANSI lumens, 10000:1 contrast, Android TV integration, Wi-Fi, Bluetooth 5.2, and 360° projection capabilities.</p>
	<p>Lisowod L03 Pro Smart Video Projector User Manual</p> <p>Comprehensive user manual for the Lisowod L03 Pro Smart Video Projector, covering troubleshooting, settings, connectivity, app usage, system updates, and FCC compliance. Learn how to set up and use your projector for optimal viewing experiences.</p>

	<p>Lisowod An1 Video Projector User Manual: Features, Setup, and Troubleshooting</p> <p>Comprehensive user manual for the Lisowod An1 Video Projector. Learn about setup, connections, settings, troubleshooting, and specifications for this portable HD projector.</p>
	<p>Lisowod L61PRO Smart Video Projector User Manual</p> <p>Comprehensive user manual for the Lisowod L61PRO Smart Video Projector, covering setup, troubleshooting, image settings, wireless connections, and system updates.</p>
	<p>Lisowod L02 Mini Video Projector User Manual - Setup, Features & Troubleshooting</p> <p>Comprehensive user manual for the Lisowod L02 Mini Video Projector. Find setup guides, troubleshooting tips, function overviews, and contact information for support. Learn about features, remote control, and connectivity.</p>
	<p>Lisowod L61PRO Smart Video Projector User Manual</p> <p>User manual for the Lisowod L61PRO Smart Video Projector, covering setup, troubleshooting, image settings, wireless connections, and system updates.</p>

USER MANUAL

L03 PRO SMART VIDEO PROJECTOR

SHARE MOMENTS, SHARE LISOWOD

<https://lisowod.com>



[Lisowod L03 Pro Smart Video Projector User Manual](#)

Comprehensive user manual for the Lisowod L03 Pro Smart Video Projector, covering troubleshooting, settings, connectivity, app usage, system updates, and FCC compliance. Learn how to set up and use your projector for optimal viewing experiences.

lang:en score:42 filesize: 1.16 M page_count: 20 document date: 2025-08-01