

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Maxax](#) /
- › [Maxax Nickel 12" Ceiling Light Instruction Manual](#)

Maxax 27007A-3NT-P

Maxax Nickel 12" Ceiling Light Instruction Manual

Model: 27007A-3NT-P | Brand: Maxax



INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Maxax Nickel 12" Ceiling Light. Please read this manual thoroughly before installation and retain it for future reference. This fixture features a nickel finish, hammered glass shades, and accommodates three E26 bulbs.



Image: Front view of the Maxax Nickel 12" Ceiling Light, showcasing its hammered glass and nickel finish.

SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.

- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electric Code (NEC).
- Consult a qualified electrician if you are unfamiliar with electrical wiring.
- Do not install this fixture in wet locations. It is designed for indoor use only.
- Use only E26 base bulbs, maximum 60 watts per bulb.
- Do not exceed the recommended wattage.
- Handle glass components with care to prevent breakage.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact customer support.

- 1 x Maxax Nickel 12" Ceiling Light Fixture
- 1 x Glass Lampshade
- 1 x Mounting Hardware Kit (screws, wire nuts, mounting bracket)
- 1 x Instruction Manual (this document)



Image: Components of the ceiling light, including the glass lampshade, metal frame, and E26 bulb bases.

SETUP (INSTALLATION)

1. **Turn Off Power:** Before starting, ensure the power to the circuit is turned off at the main fuse box or circuit breaker to prevent electrical shock.
2. **Prepare Mounting:** Attach the mounting bracket to the junction box in the ceiling using the provided screws. Ensure the bracket is securely fastened.
3. **Wire Connections:**
 - Connect the **black** wire from the fixture to the **black** (live) wire from the ceiling using a wire nut.
 - Connect the **white** wire from the fixture to the **white** (neutral) wire from the ceiling using a wire nut.
 - Connect the **ground** wire from the fixture to the **ground** wire from the ceiling (or to the green ground screw on the mounting bracket) using a wire nut.

Ensure all connections are tight and secure.

4. **Mount Fixture:** Carefully push the wired fixture up towards the ceiling, aligning the fixture's base with the mounting bracket. Secure the fixture to the mounting bracket using the provided screws.
5. **Install Bulbs:** Screw three E26 base bulbs (not included, max 60W each) into the sockets.
6. **Attach Glass Shade:** Carefully place the hammered glass lampshade onto the fixture and secure it according to the design (typically with small screws or a twist-lock mechanism, refer to visual cues on the product).

7. **Restore Power:** Once installation is complete and all components are secure, restore power at the fuse box or circuit breaker.



Image: Dimensional diagram of the ceiling light, indicating a 12-inch diameter and 5.7-inch height.

OPERATING INSTRUCTIONS

The Maxax Nickel 12" Ceiling Light is designed for simple operation.

- **Power On/Off:** Operate the light using a standard wall switch connected to the fixture's circuit.
- **Dimmable Functionality:** This fixture is dimmable. To utilize dimming capabilities, ensure you use dimmable E26 bulbs and a compatible dimmer switch (both sold separately).
- **Bulb Replacement:** To replace bulbs, first turn off power at the circuit breaker. Allow bulbs to cool, then carefully unscrew old bulbs and replace with new E26 bulbs (max 60W each).



Image: The ceiling light depicted in both off and illuminated states, showing the effect of the hammered glass when lit.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your light fixture.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or glass.
- **Glass Care:** The hammered glass shade can be gently wiped with a damp cloth and then dried with a soft, lint-free cloth.
- **Inspection:** Periodically check all connections and mounting hardware for tightness.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wire connections. Faulty bulb.	Check circuit breaker or fuse. Verify all wire connections are secure (power off first). Replace bulb with a known good one.
Light flickers.	Loose bulb. Incompatible dimmer switch or bulb. Loose wire connection.	Tighten bulb. Ensure dimmable bulbs are used with a compatible dimmer. Check wire connections (power off first).
Glass shade is loose.	Securing screws are loose.	Gently tighten the screws that hold the glass shade in place. Do not overtighten.

SPECIFICATIONS

Brand	Maxax
Model Name	27007A-3NT-P
Color	Nickel
Material	Glass, Metal
Product Dimensions	12"L x 12"W x 5.5"H
Light Fixture Form	Close to Ceiling
Number of Light Sources	3
Bulb Base	E26
Max Wattage per Bulb	60 Watts
Voltage	110 Volts
Installation Type	Flush Mount
Special Feature	Anti-Rust
Indoor/Outdoor Usage	Indoor
Specification Met	ETL

WARRANTY AND SUPPORT

This Maxax product comes with a **Limited Warranty**. Specific terms and conditions of the warranty are typically provided with your purchase documentation or can be obtained by contacting the manufacturer directly.

For technical assistance, missing parts, or warranty inquiries, please contact Maxax customer support through their official channels. Please have your model number (27007A-3NT-P) and purchase information ready when contacting support.



© 2025 Maxax. All rights reserved.