

[Manuals.plus](#) /

> [Gizoon](#) /

> Gizoon 71" H Pantry Cabinet with LED Lights - Instruction Manual

Gizoon B0FGJ9LTGL

Gizoon 71" H Pantry Cabinet with LED Lights - Instruction Manual

Model: B0FGJ9LTGL

INTRODUCTION

Thank you for choosing the Gizoon 71" H Pantry Cabinet. This versatile furniture piece is designed to enhance your kitchen, dining room, or living space with ample storage, integrated LED lighting, and a convenient charging station. This manual provides detailed instructions for assembly, operation, and maintenance to ensure safe and optimal use of your new cabinet.

SAFETY INFORMATION

- Always ensure the cabinet is properly secured to the wall using the provided anti-tip hardware. This is crucial to prevent tipping, especially when the cabinet is fully loaded or in households with children and pets.
- Do not overload shelves or drawers. Distribute weight evenly to maintain stability.
- Keep all electrical components (charging station, LED lights) away from water and moisture.
- Use only the specified power supply for the LED lights and charging station.
- During assembly, keep small parts away from children to prevent choking hazards.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x Pantry Cabinet (unassembled components)

- 1 x Hardware Pack (screws, dowels, connectors, anti-tip kit)
- 1 x Instruction Manual
- 1 x LED Light Kit
- 1 x Charging Station Unit (with power outlets, USB, Type-C ports)

SPECIFICATIONS

Feature	Detail
Brand	Gizoon
Model	B0FGJ9LTGL
Color	Tabletop-Grey
Material	Engineered Wood (MDF)
Product Dimensions (D x W x H)	13.6" x 31.5" x 70.9"
Item Weight	69.7 Pounds
Number of Drawers	1
Number of Shelves	3 (adjustable)
Number of Doors	4 (2 acrylic, 2 barn-style)
Additional Features	LED Lights (7 colors, 2 strobe states), Charging Station (2 AC outlets, 1 USB, 1 Type-C)
Installation Type	Freestanding with anti-tip hardware

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the numbered steps and diagrams in the included instruction manual carefully. All parts are labeled for easy identification. It is recommended to have two people for assembly.

Step 1: Unpack and Verify Components

Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Cross-reference each part with the provided parts list in your physical instruction manual to ensure everything is present.

Step 2: Assemble the Base Unit

Begin by assembling the lower cabinet section according to the diagrams. This typically involves attaching side panels to the bottom and back panels, ensuring all cam locks and dowels are securely fastened.



Image: Assembled Gizoon Pantry Cabinet in a home environment.

Step 3: Install Drawer and Lower Cabinet Doors

Assemble the drawer components and install them into the designated slot. Attach the barn-style doors to the lower cabinet using the provided hinges. Ensure doors open and close smoothly.



Image: Detail of the spacious drawer storage.

Step 4: Attach Upper Cabinet and Charging Station

Mount the upper cabinet section onto the base. Install the LED light strip and the charging station unit into the designated recess. Connect the power cables as instructed.



Image: Detail of the charging station.

Step 5: Install Upper Cabinet Doors and Shelves

Attach the acrylic doors to the upper cabinet using the provided hinges. Insert the adjustable shelves into the desired positions. The shelves can be moved to accommodate items of various heights.



Image: Overview of storage space and adjustable shelves.

Step 6: Secure Cabinet to Wall

Using the anti-tip hardware, securely fasten the cabinet to a wall stud. This step is essential for safety and stability.

OPERATING INSTRUCTIONS

LED Lights

The integrated LED lighting system features 7 different color modes and 2 frequency flashing styles. To operate, plug the LED light power adapter into a standard wall outlet. Use the control button or remote (if included) to cycle through colors and modes. Refer to the specific LED light kit instructions for detailed operation.



Image: LED lighting design and color options.

Charging Station

The cabinet includes a smart charging hub with 2 standard AC power outlets, 1 USB port, and 1 Type-C port. Plug the cabinet's main power cord into a wall outlet. You can then use the integrated outlets and ports to power small appliances or charge electronic devices. Ensure devices are compatible with the provided voltage and current.

Adjustable Shelves

The interior shelves are adjustable to accommodate items of various heights. To adjust a shelf, carefully remove any items, lift the shelf, and reposition the shelf pegs into the desired holes. Ensure all four pegs are securely inserted before placing items back on the shelf.

MAINTENANCE

- **Cleaning:** The product surface is designed to be easy to scrub. For general cleaning, wipe surfaces with a soft, damp cloth. For stubborn stains, use a mild, non-abrasive cleaner. Avoid harsh chemicals that may damage the finish.
- **Dusting:** Regularly dust all surfaces with a dry, soft cloth.
- **Hardware Check:** Periodically check all screws, bolts, and connections to ensure they remain tight. Retighten as necessary.
- **LED Lights:** If LED lights malfunction, check the power connection. If issues persist, contact customer support.



Drawer Storage

Easy to access items

Image: Easy-to-clean surface with rounded corners.

TROUBLESHOOTING

- **Wobbly Cabinet:** Ensure all assembly hardware is tightened. Verify the cabinet is placed on a level surface. If necessary, use shims under the legs. Confirm the anti-tip hardware is correctly installed and secured to the wall.

- **Doors Not Aligning:** Adjust the hinges on the doors. Most hinges allow for minor adjustments to align doors properly.
- **LED Lights Not Working:** Check if the power adapter is securely plugged into both the wall outlet and the LED strip. Ensure the wall outlet is functional. If the issue persists, the LED strip or adapter may need replacement.
- **Charging Station Not Working:** Verify the cabinet's main power cord is plugged into a live wall outlet. Test the outlets/ports with different devices. If no power, check the circuit breaker.
- **Missing Parts:** If you discover any missing parts during assembly, do not proceed. Contact customer support immediately for assistance.

WARRANTY AND SUPPORT

Gizoon products are designed for quality and durability. For any questions or concerns regarding your Gizoon 71" H Pantry Cabinet, please contact our customer support team. We are committed to providing answers within 24 hours.

Please retain your purchase receipt for warranty purposes. Specific warranty details may vary; refer to your purchase documentation or contact customer service for more information.

Contact Information:

Website: [Visit the Gizoon Store on Amazon](#)

Customer Service Email: (Refer to your product packaging or Gizoon store page for specific email)