

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gizoon](#) /
- › [Gizoon Retro 2 Flip Drawer Shoe Cabinet User Manual](#)

## Gizoon Retro 2 Flip Drawer

# Gizoon Retro 2 Flip Drawer Shoe Cabinet User Manual

Model: Retro 2 Flip Drawer (B0FGJGGDNJ)

## INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Gizoon Retro 2 Flip Drawer Shoe Cabinet. Please read these instructions carefully before assembly and use to ensure proper function and safety. This shoe cabinet is designed for organizing footwear in entryways, hallways, living rooms, or porches, offering a space-saving solution with a modern aesthetic.



Image: The Gizoon Retro 2 Flip Drawer Shoe Cabinet, showcasing its design and functionality in an entryway setting.

## SAFETY INFORMATION

**Important:** Always secure the cabinet to the wall using the provided anti-tipping device to prevent accidental tipping, especially in households with children or pets. Be cautious when placing the cabinet in narrow spaces to avoid potential pinch points. Always follow the assembly instructions carefully to ensure safe installation and use.



Image: Illustration demonstrating the proper installation of the anti-tipping device to secure the shoe cabinet to a wall.

## SETUP AND ASSEMBLY

The Gizoon Retro 2 Flip Drawer Shoe Cabinet requires assembly. The product includes a simple structure, numbered parts, and clear instructions to guide you through the process. It is recommended to have a clear workspace and follow the steps sequentially.

### Assembly Steps:

1. Unpack all components and verify against the parts list provided in the packaging.
2. Follow the numbered instructions for assembling the main frame of the cabinet.
3. Install the two flip drawers according to the diagrams. The middle divider of each flip-front drawer has 2 levels of adjustment, which can be selected and adjusted during assembly to accommodate different shoe sizes.
4. Attach the side hooks for umbrellas or other items.
5. Secure the anti-tipping device to the wall as instructed in the safety section.

# Product Dimension



Image: Detailed product dimension diagram, showing width, depth, and height measurements of the shoe cabinet and its internal compartments.

## OPERATING INSTRUCTIONS

Your Gizoon Shoe Cabinet is designed for efficient shoe storage and organization.

### Using the Flip Drawers:

- Each of the two flip drawers features two-tiered compartments. Gently pull the metal handle to open the drawer.
- Place shoes into the compartments. The adjustable middle divider allows for customization to fit various shoe types, including flats, sneakers, heels, and kids' shoes.
- Push the drawer back into place until it is securely closed.

### Additional Storage:

- The open-top shelf provides convenient storage for small items such as keys, wallets, or decorative pieces.
- The space beneath the cabinet is designed to accommodate slippers or other low-profile footwear, keeping them easily accessible.

accessible.

- Utilize the side hooks for hanging umbrellas, bags, or other accessories.



Image: The shoe cabinet with an open flip drawer, illustrating its two-tiered storage capacity for various shoe types like boots, high heels, leather shoes, and slippers.



Image: A detailed view highlighting the side hooks for hanging items, the metal handles on the flip drawers, the ample bottom space for slippers, and the protective fence on top.

## MAINTENANCE AND CARE

To maintain the appearance and longevity of your Gizoon Shoe Cabinet, follow these simple care instructions:

- **Cleaning:** The cabinet is made from MDF wood and engineered boards, making it easy to clean. Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Spills:** Promptly wipe up any spills to prevent moisture damage.
- **Placement:** Avoid placing the cabinet in direct sunlight or near heat sources to prevent warping or discoloration.
- **Safety:** Regularly check the anti-tipping device to ensure it remains securely fastened to the wall.



Image: Close-up views illustrating the easy-to-clean surface and the safety-rounded corners of the cabinet, designed for durability and user safety.

## TROUBLESHOOTING

If you encounter any issues during assembly or use, please review the assembly instructions to ensure all steps were followed correctly. For further assistance, refer to the "Support and Warranty" section.

- **Drawers not closing smoothly:** Check for any obstructions or ensure the internal dividers are correctly positioned.
- **Cabinet wobbles:** Verify that all screws are tightened and the cabinet is placed on a level surface. Ensure the anti-tipping device is properly installed.

## SPECIFICATIONS

Feature	Detail
Brand	Gizoon

Model	Retro 2 Flip Drawer
Color	Retro
Material	Wood (MDF wood and engineered boards)
Product Dimensions (D x W x H)	9.3"D x 23.6"W x 39.8"H
Item Weight	35.3 Pounds
Number of Drawers	2 (Flip Drawers)
Number of Compartments	4 (2 per flip drawer)
Additional Features	Adjustable internal dividers, Open-top shelf, Under-cabinet space, Side hooks, Anti-tipping device, Safety rounded corners
Installation Type	Freestanding, Wall-mounted (with anti-tip device)
Required Assembly	Yes

## PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video: An official product video from Gizoon Direct showcasing the features and functionality of the Shoe Cabinet with 2 Flip Drawers.

## SUPPORT AND WARRANTY

For any questions or concerns regarding your Gizoon Shoe Cabinet, please contact our customer support. We aim to provide answers within 24 hours.

While specific warranty details are not provided in this manual, please retain your proof of purchase for any potential warranty claims. For the most up-to-date warranty information, please refer to the product listing or contact Gizoon customer service directly.

**Contact:** Refer to your purchase platform or Gizoon's official website for customer service contact details.

