

Moulinex GI306010

Moulinex UltraCompact Comfort Grill GI306010 Instruction Manual

Model: GI306010 | Brand: Moulinex

1. INTRODUCTION

Welcome to the Moulinex UltraCompact Comfort Grill GI306010 instruction manual. This guide provides essential information for the safe and efficient use of your new indoor grill. Please read these instructions carefully before using the appliance and keep them for future reference. The UltraCompact Comfort Grill is designed for versatile indoor grilling, offering three cooking positions for searing, grilling, and barbecue-style cooking. Its adjustable plates and thermostat ensure optimal results for various foods, promoting healthy cooking without added oils or fats.

2. IMPORTANT SAFETY INSTRUCTIONS

- **Read all instructions:** Before using the appliance, read all instructions carefully.
- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the appliance, power cord, or plug in water or any other liquid.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- **Hot Surfaces:** Surfaces are liable to get hot during use. Do not touch hot surfaces. Use handles or knobs.
- **Placement:** Always place the appliance on a stable, heat-resistant surface, away from flammable materials. Ensure adequate ventilation around the appliance.
- **Power Cord:** Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- **Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.

- **Intended Use:** This appliance is intended for household use only. Do not use outdoors.
- **Repairs:** Any repairs should only be carried out by authorized service personnel.

3. PRODUCT OVERVIEW AND FEATURES

The Moulinex UltraCompact Comfort Grill GI306010 is designed for convenience and versatility in your kitchen.

- **Multifunctionality:** Enjoy grilling all year round with three cooking positions: grilling, barbecue, and searing, allowing for a variety of delicious dishes.
- **Adjustable Cooking:** The grill features adjustable plates to prevent crushing ingredients, ensuring perfect browning and even cooking.
- **Convenient Operation:** An indicator light signals when the grill is ready for use, and a 3-position thermostat adapts to all your cooking needs.
- **Easy Cleaning:** Non-stick plates and an XL drip tray are dishwasher safe, making cleanup effortless.
- **Space-Saving Design:** The electric grill can be stored vertically, saving valuable kitchen space.
- **Healthy Cooking:** The non-stick coating and XL drip tray collect excess juices, allowing for healthier cooking without added oil or fats.

MULTIFUNZIONE

CON 3 POSIZIONI DI COTTURA



Image 3.1: The Moulinex UltraCompact Comfort Grill demonstrating its multifunctionality with three cooking positions, preparing chicken, vegetables, and meat.

COTTURA REGOLABILE

PER UNA ROSOLATURA PERFETTA



Image 3.2: The grill with its top plate in an elevated position, illustrating the adjustable cooking feature for optimal browning of different food thicknesses.

PRATICO

CON INDICATORE LUMINOSO E TERMOSTATO



Image 3.3: A detailed view of the control panel, highlighting the indicator light and the 3-position thermostat for practical and precise temperature control.

4. SETUP

1. **Unpacking:** Carefully remove the grill and all accessories from the packaging. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Remove the cooking plates and drip tray (refer to "Maintenance and Cleaning" section) and wash them with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the grill on a flat, stable, and heat-resistant surface. Ensure there is sufficient space around the appliance for air circulation.
4. **Drip Tray Installation:** Ensure the drip tray is correctly inserted into its designated slot at the front of the grill to collect any excess fats or juices during cooking.
5. **Power Connection:** Unwind the power cord completely and plug the appliance into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1. Preheating the Grill

1. Close the grill plates.
2. Plug the appliance into a power outlet. The indicator light will illuminate, signaling that the grill is heating up.
3. Set the thermostat to the desired temperature (1, 2, or 3) based on your food type.
4. Allow the grill to preheat for approximately 5-10 minutes, or until the indicator light turns off, indicating it has reached the set temperature.

5.2. Cooking Positions

The UltraCompact Comfort Grill offers three versatile cooking positions:

- **Closed Position (Grilling/Searing):** Ideal for sandwiches, paninis, meat, fish, and vegetables that require direct contact with both plates for even cooking and searing.
- **Open Position (Barbecue):** Fully open the grill to use both plates as a large barbecue surface. Perfect for cooking larger quantities or different types of food simultaneously.
- **Adjustable Height Position:** The top plate can be locked at various heights above the bottom plate. This is suitable for delicate foods that should not be pressed, or for melting cheese.

5.3. Cooking Food

1. Once preheated, carefully place your food onto the bottom cooking plate.
2. Select the appropriate cooking position (closed, open, or adjustable height).
3. Monitor cooking progress. Cooking times will vary depending on the type and thickness of the food, as well as your desired doneness.
4. Use heat-resistant utensils to remove cooked food. Avoid using metal utensils that could scratch the non-stick coating.
5. After cooking, unplug the appliance and allow it to cool before cleaning.

CUCINA SALUTARE



Image 5.1: The grill in action, cooking chicken and steak, illustrating the healthy cooking benefits with excess juices collected in the drip tray.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Moulinex UltraCompact Comfort Grill.

1. **Unplug and Cool:** Always unplug the grill from the power outlet and allow it to cool completely before attempting any cleaning.
2. **Remove Drip Tray:** Carefully slide out the XL drip tray and empty any collected fats or juices.
3. **Remove Cooking Plates:** The cooking plates are removable. Follow the instructions in your appliance to detach them.
4. **Dishwasher Safe Parts:** The non-stick cooking plates and the drip tray are dishwasher safe. Place them in the dishwasher for easy cleaning. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge.
5. **Clean Exterior:** Wipe the exterior of the grill with a damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.

6. **Storage:** Ensure all parts are thoroughly dry before reassembling and storing the grill. The grill can be stored vertically to save space.



Image 6.1: The removable non-stick plates and drip tray positioned in a dishwasher, illustrating their dishwasher-safe feature for convenient cleaning.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not heat up.	Appliance not plugged in or power outlet is faulty.	Ensure the plug is securely inserted into a working power outlet. Check the circuit breaker.
Indicator light does not turn on.	Power issue or appliance malfunction.	Check power connection. If the problem persists, contact customer support.
Food is not cooking evenly.	Grill not preheated sufficiently or food thickness is uneven.	Allow the grill to fully preheat until the indicator light turns off. Ensure food is cut to a consistent thickness.
Excessive smoke during cooking.	Accumulated grease or food residue on plates, or too much fat in food.	Clean the cooking plates and drip tray thoroughly before use. Trim excess fat from food.

8. SPECIFICATIONS

- **Brand:** Moulinex
- **Model:** GI306010
- **Manufacturer:** MOULINEX
- **Country of Origin:** China
- **Item Weight:** 4.5 Kilograms
- **Volume/Unit Weight:** 1.0 Count
- **ASIN:** B0FGJNMP99



Image 8.1: The Moulinex UltraCompact Comfort Grill with its approximate dimensions: 38 cm (length), 37 cm (width), and 20 cm (height).

9. WARRANTY AND SUPPORT

Moulinex is committed to providing high-quality products. This appliance benefits from a **15-year reparability commitment**. Spare parts are available at low cost through our 6200 repair centers worldwide, ensuring quick repairs for many years. This commitment is part of our effort to protect the environment and reduce waste. For any questions, technical assistance, or to locate a service center, please visit the official Moulinex website or contact their customer support.