

[manuals.plus](#) /› [Roku](#) /› **Roku 65-Inch Select Series 4K UHD Smart TV (Model 65R4C5) Instruction Manual**

## Roku 65R4C5

# Roku 65-Inch Select Series 4K UHD Smart TV (Model 65R4C5) Instruction Manual

Brand: Roku | Model: 65R4C5

## INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Roku 65-Inch Select Series 4K UHD Smart TV. This television features 4K Ultra HD resolution with advanced HDR support, delivering deep contrast and rich color accuracy. The built-in Roku Smart OS offers instant access to thousands of channels and apps through a user-friendly interface and voice-enabled remote control. Connectivity options include 3 HDMI ports, 1 USB input, and Ethernet. The TV also supports Dolby Audio for clear sound performance.

## WHAT'S IN THE BOX

Carefully unpack your Roku TV and ensure all items are present. The package should contain:

- Roku Select Series 65-Inch 4K TV
- TV Stands and Screws
- Roku Enhanced Voice Remote with Batteries
- Quick Start Guide
- HDMI Cable
- Screen Cleaner with Microfiber Cloth

# Home sweet home screen

Jump right in with a home screen that easily gets you to what you want to watch fast.

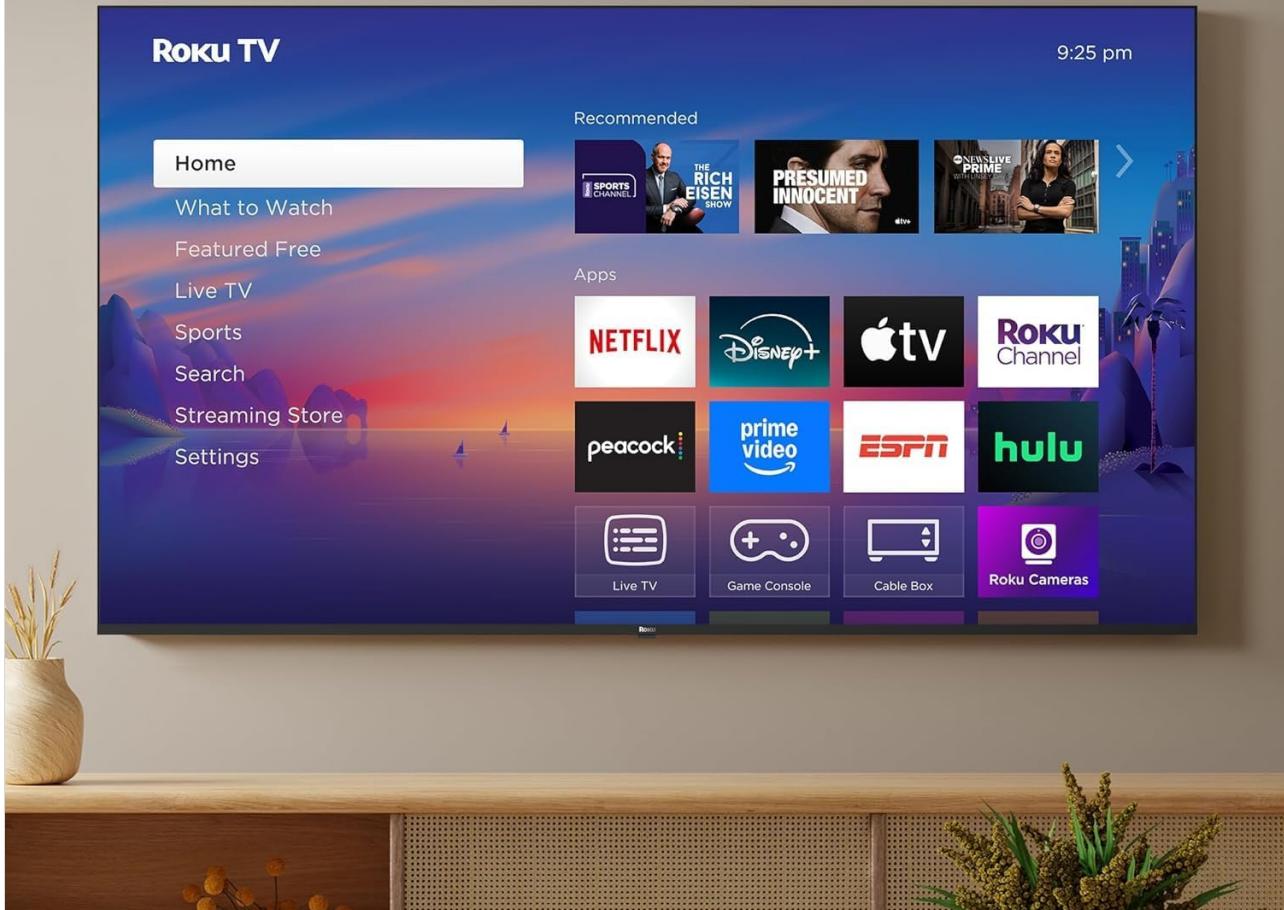


Figure 1: Contents of the Roku Select Series TV box (Note: Image shows 50-inch model contents, but the 65-inch model includes similar items).

## SETUP GUIDE

### 1. Attaching the TV Stands

1. Carefully place your TV face-down on a soft, clean surface to prevent damage.
2. Align the TV stands with the screw holes on the bottom of the TV.
3. Secure each stand using the provided screws. Ensure they are tightened firmly.

### 2. Connecting Power and Devices

1. Connect the power cord to the TV's power input and then to a wall outlet.
2. For external devices (e.g., cable box, gaming console, soundbar), use the appropriate HDMI ports. This TV features 3 HDMI ports.
3. For internet connectivity, connect an Ethernet cable to the TV's Ethernet port or use Wi-Fi during initial setup.

4. A USB input is available for media playback from compatible USB devices.



## What's in the box

- Roku Select Series 50" 4K TV
- Stands and screws
- Roku Enhanced Voice Remote with batteries
- Quick Start Guide

Figure 2: Roku 65-Inch Select Series 4K UHD Smart TV dimensions.

### 3. Initial Setup

1. Insert the included batteries into the Roku Voice Remote.
2. Turn on the TV using the power button on the remote.
3. Follow the on-screen instructions to select your language, connect to your Wi-Fi network, and activate your Roku account.
4. The guided setup will help you connect any external devices and configure basic settings.

### OPERATING INSTRUCTIONS

#### 1. Using the Roku Voice Remote

The Roku Voice Remote provides intuitive control over your TV. Key functions include:

- **Power Button:** Turns the TV on/off.
- **Volume Control:** Adjusts the TV's audio level.
- **Mute Button:** Mutes/unmutes the TV sound.
- **Voice Button:** Activates voice commands for search and control.
- **Instant Replay:** Jumps back a few seconds in video playback.
- **Live TV Guide:** Accesses the live TV channel guide.
- **Customizable Quick Launch Buttons:** Direct access to popular streaming apps.

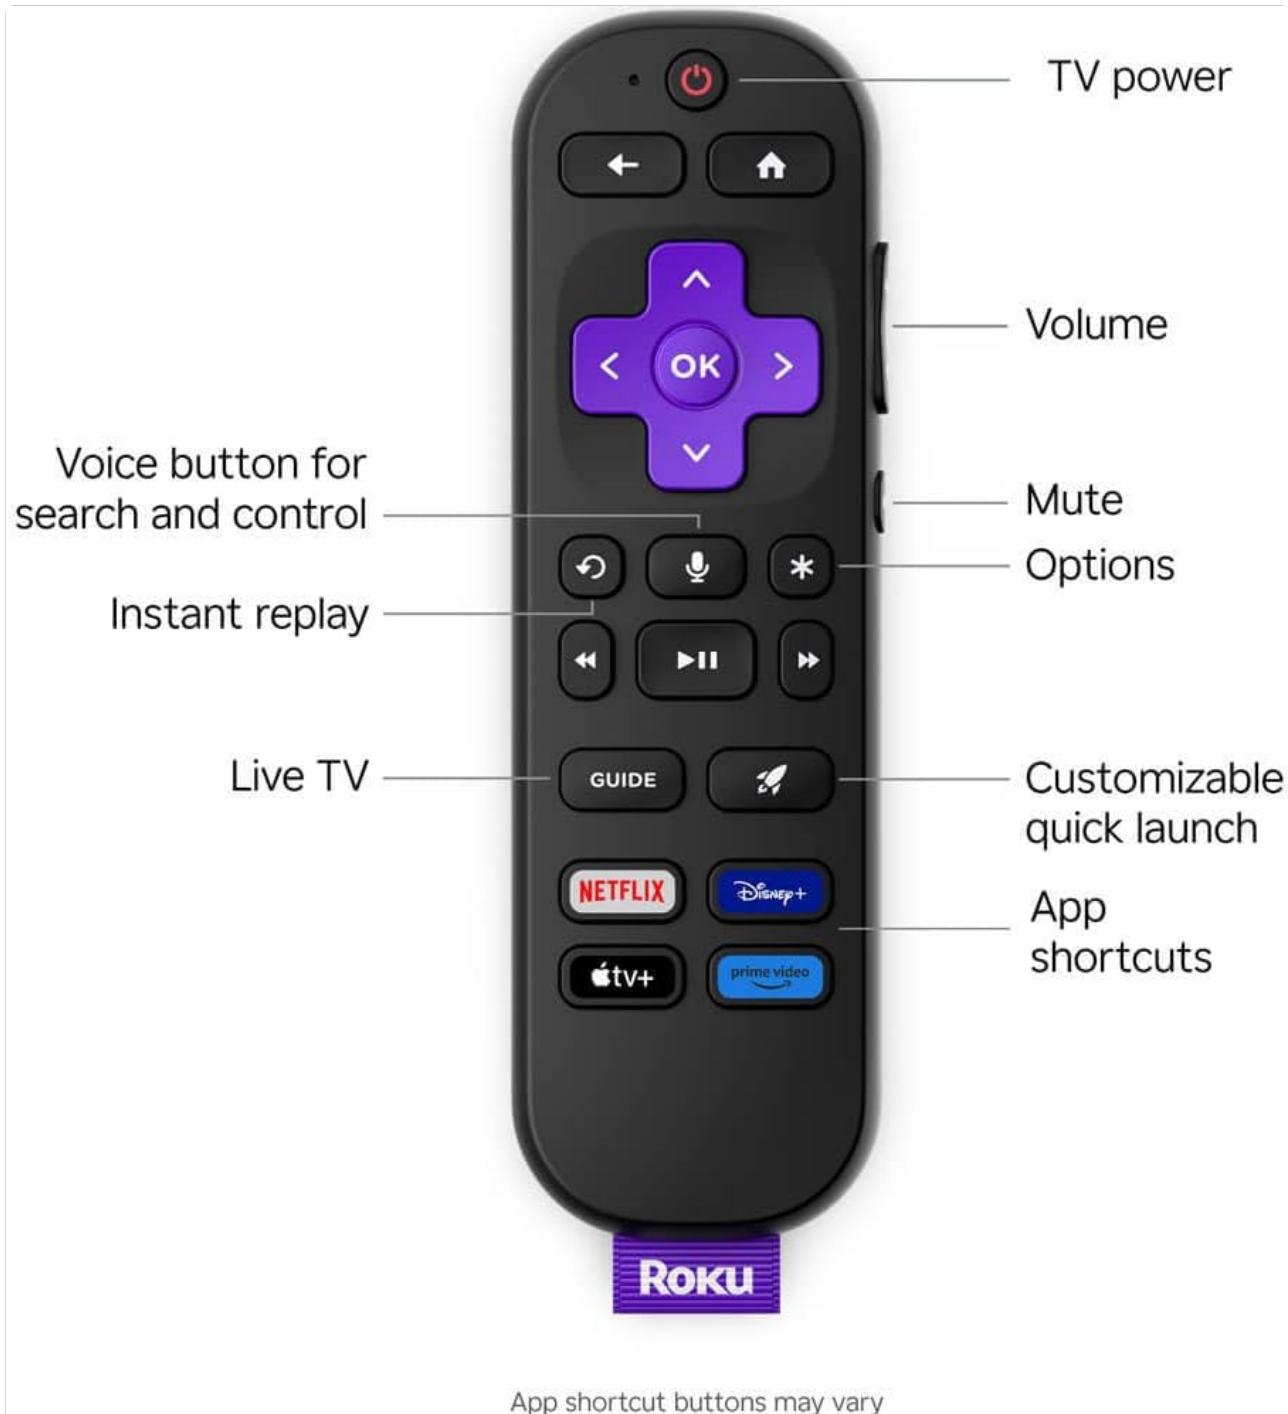


Figure 3: Roku TV Voice Remote layout.

## 2. Navigating the Roku Smart OS

The Roku Home Screen is your central hub for all content. Use the directional pad on your remote to:

- Browse installed streaming channels and apps.
- Access inputs for connected devices (HDMI, USB).

- Adjust TV settings (Picture, Sound, Network, etc.).
- Utilize the search function to find movies, shows, or apps across various platforms.

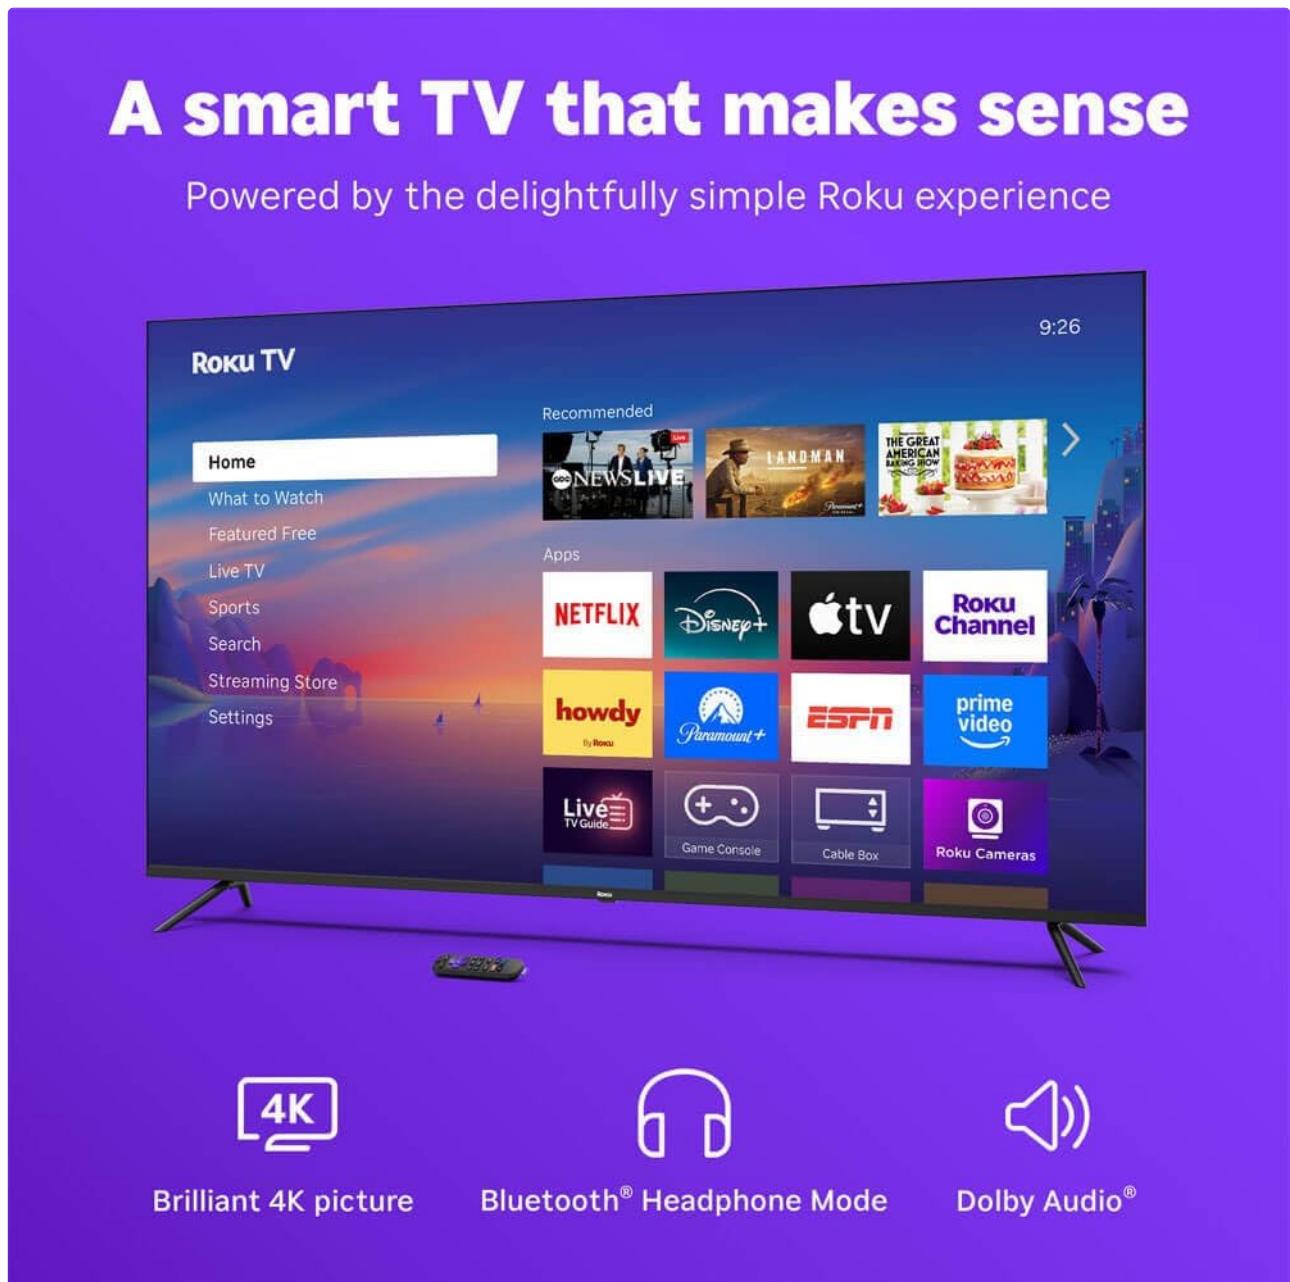


Figure 4: Roku TV Home Screen with key features highlighted.

### 3. Streaming Apps and Antenna TV

The Roku Smart OS provides access to a vast library of streaming apps. You can add new apps from the Roku Channel Store. For over-the-air broadcasts, connect a digital antenna to the TV's antenna input and perform a channel scan in the settings menu.

### PICTURE AND SOUND SETTINGS

Your Roku TV offers advanced picture and sound technologies for an immersive viewing experience:

- **4K Ultra HD:** Delivers stunning clarity and detail.
- **HDR (High Dynamic Range):** Enhances contrast and color accuracy for more vibrant images.

- **Dolby Audio:** Provides clear, rich, and immersive sound performance.

To adjust picture and sound settings, navigate to the **Settings** menu on the Roku Home Screen. Here you can customize options such as Picture Mode (e.g., Movie, Standard, Vivid), Backlight, Contrast, Brightness, and Sound Mode (e.g., Standard, Theater, Music).

## CONNECTIVITY

The Roku TV offers various connectivity options:

- **HDMI Ports (x3):** For connecting high-definition devices like gaming consoles, Blu-ray players, and soundbars.
- **USB Input (x1):** For playing media files from USB storage devices.
- **Ethernet Port:** For a stable wired internet connection.
- **Bluetooth Mode:** For connecting compatible Bluetooth headphones or speakers.
- **Wi-Fi:** Built-in wireless connectivity for internet access.
- **AirPlay/HomeKit:** Supports wireless content sharing and control from Apple devices.

## MAINTENANCE

To ensure the longevity and optimal performance of your Roku TV:

- **Cleaning the Screen:** Use the provided microfiber cloth or a soft, lint-free cloth. Dampen the cloth slightly with water or a screen cleaner (avoid harsh chemicals) and gently wipe the screen.
- **Cleaning the Cabinet:** Wipe the TV cabinet with a soft, dry cloth.
- **Ventilation:** Ensure the TV's ventilation openings are not blocked to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage.

## TROUBLESHOOTING

If you encounter issues with your Roku TV, try the following solutions:

- **No Power:** Check if the power cord is securely connected to the TV and the outlet. Try a different outlet.
- **No Picture/Sound:** Ensure the correct input source is selected. Check all cable connections.
- **Remote Not Responding:** Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV.
- **Network Connection Issues:** Restart your router and modem. Reconnect the TV to your Wi-Fi network in the settings menu. For wired connections, check the Ethernet cable.
- **Picture Quality Issues:** Adjust picture settings (brightness, contrast, sharpness) in the TV's settings menu. Ensure your content source is high-quality.
- **Sound Quality Issues:** Adjust sound settings in the TV's settings menu. Check external audio device connections if applicable.

## SPECIFICATIONS

<b>Brand</b>	Roku
<b>Model Number</b>	65R4C5
<b>Screen Size</b>	65 Inches
<b>Display Technology</b>	LED Smart
<b>Resolution</b>	4K Ultra HD
<b>Refresh Rate</b>	60 Hz
<b>Special Features</b>	Bezel-Less Design, Built-In Speaker, HDR, Dolby Audio, Voice Remote, Bluetooth Mode
<b>Connectivity Technology</b>	HDMI (x3), USB (x1), Ethernet, Wi-Fi, Bluetooth
<b>Supported Internet Services</b>	Netflix, Amazon Prime Video, Disney+, Hulu, YouTube, Apple TV, and others via Roku OS
<b>Item Weight</b>	46 Pounds

## WARRANTY AND SUPPORT

Your Roku 65-Inch Select Series 4K UHD Smart TV includes a 12-month CPS Protection Plan. For detailed warranty information, product support, or service requests, please refer to the documentation provided with your purchase or visit the official Roku support website.

For additional assistance, you may also visit the [Roku Store on Amazon](#).