

[manuals.plus](#) /

› [Beautiful](#) /

› [Beautiful 10-in-1 Digital Air Fry Toaster Oven User Manual](#)

Beautiful 19328

Beautiful 10-in-1 Digital Air Fry Toaster Oven

Model: 19328 | Brand: Beautiful

INTRODUCTION

Welcome to the user manual for your new Beautiful 10-in-1 Digital Air Fry Toaster Oven. This versatile appliance combines advanced infrared and convection technology to offer a wide range of cooking functions, including air frying, baking, broiling, toasting, reheating, and more. With its sleek design and powerful 1800W system, it is engineered for efficient and healthy cooking, making it an ideal addition to any modern kitchen.



The Beautiful 10-in-1 Digital Air Fry Toaster Oven, showcasing its elegant white icing finish and modern design.

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.


- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or pot holders when handling hot materials.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or anything that could burn or melt.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place cooking utensils or baking dishes on the glass door.
- Always use the crumb tray when operating the oven.

PRODUCT COMPONENTS AND WHAT'S INCLUDED

Your Beautiful Digital Air Fry Toaster Oven comes with essential accessories designed to enhance your cooking experience. Please ensure all components are present upon unpacking.

- **Air Fry Basket:** Ideal for achieving crispy results with less oil.
- **Bake Pan:** Suitable for baking, roasting, and collecting drips.
- **Wire Rack:** For toasting, baking, and supporting other cookware.
- **Crumb Tray:** Collects crumbs and food debris for easy cleaning.

Dishwasher Safe Accessories

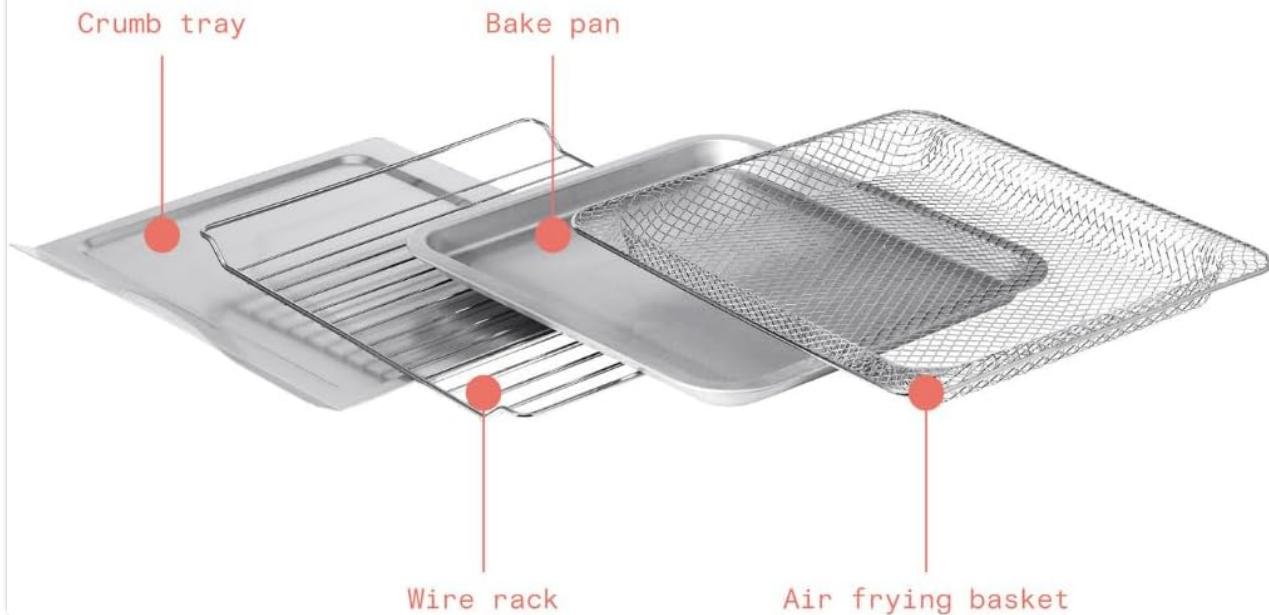

An exploded view illustrating the included dishwasher-safe accessories: crumb tray, wire rack, bake pan, and air frying basket.



The interior of the oven, demonstrating how the air fry basket, bake pan, and wire rack fit within the cooking chamber.

SETUP

- 1. Unpack:** Carefully remove the toaster oven and all accessories from the packaging. Remove any packing materials, stickers, or protective films.

- Initial Cleaning:** Before first use, wash the air fry basket, bake pan, wire rack, and crumb tray in warm, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the oven with a damp cloth.
- Placement:** Place the oven on a stable, level, heat-resistant surface. Ensure there is adequate space (at least 4-6 inches) on all sides and above the oven for proper ventilation. Do not place it directly against a wall or under cabinets.
- Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel and Display

The Beautiful Digital Air Fry Toaster Oven features a touch-activated display that illuminates only when in use, providing a sleek and modern appearance. The intuitive controls allow for easy selection of cooking functions, temperature, and time.



The touch-activated display, which illuminates only when needed, providing a clean and modern interface.

Cooking Functions

This appliance offers 10 preset cooking functions, leveraging its Quartz-Infrared Heating and Convection technology for optimal results and up to 80% faster preheating.



The 10 preset cooking functions available on the oven, including Toast, Bagel, Air Fry, Broil, Bake, Pizza, Reheat, Cookies, Slow Cook, and Dehydrate.

- **Toast:** For perfectly browned toast.
- **Bagel:** Toasts the cut side of bagels while gently warming the outside.
- **Air Fry:** Combines high heat and a 3-speed convection fan for crispy results with less oil.
- **Broil:** For grilling and browning food quickly.
- **Bake:** Standard baking function for various dishes.
- **Pizza:** Optimized setting for cooking pizzas up to 12 inches.
- **Reheat:** Gently warms leftovers without drying them out.
- **Cookies:** Ideal for baking batches of cookies.
- **Slow Cook:** For low and slow cooking, perfect for tender results.
- **Dehydrate:** For drying fruits, vegetables, and meats.

Using the Functions

1. **Select Function:** Press the "Start/Menu" button repeatedly to cycle through the available functions until

your desired function is selected.

2. **Adjust Temperature/Time:** Use the "+" and "-" buttons to adjust the temperature and cooking time as needed for your recipe. The "Temp/Time" button allows you to toggle between adjusting temperature and time.
3. **Start Cooking:** Once settings are confirmed, press "Start/Menu" to begin the cooking cycle.
4. **Convection Fan:** The oven features an adjustable 3-speed convection fan (Low, Medium, Turbo) for enhanced cooking performance, especially for air frying.



The Quartz-Infrared Heating system ensures up to 80% faster preheating and more consistent cooking results.

Capacity and Design

Despite its space-saving, low-profile design, this oven boasts a generous 15L capacity, making it ideal for family meals and entertaining. It can accommodate:

- A 12-inch pizza
- 9 slices of toast
- A 9x13-inch casserole dish



The compact yet powerful design allows it to fit a 12-inch pizza, 9 slices of toast, or a 9x13-inch casserole dish, serving 5-7 people.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your toaster oven. Always unplug the appliance and allow it to cool completely before cleaning.

- **Crumb Tray:** The removable crumb tray makes clean-up quick and easy. Slide it out from the bottom of the oven and discard accumulated crumbs. Wash the tray with warm, soapy water, rinse, and dry thoroughly.
- **Accessories:** The air fry basket, bake pan, and wire rack are dishwasher safe for convenient cleaning. For stubborn food residue, soak them in warm, soapy water before washing.
- **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For baked-on food, a non-abrasive cleaner designed for oven interiors may be used. Avoid abrasive pads or harsh chemicals.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Door:** Clean the glass door with a glass cleaner or a damp cloth.

TROUBLESHOOTING

If you encounter issues with your Beautiful Digital Air Fry Toaster Oven, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Food not cooking evenly.	Improper rack position; overcrowding; incorrect temperature/time.	Refer to recipe for recommended rack position. Avoid overcrowding the oven. Adjust temperature and time as needed. Ensure convection fan is operating if desired.
Smoke coming from oven.	Food residue on heating elements; excessive grease/oil.	Unplug and allow to cool. Clean the interior and accessories thoroughly. Reduce oil/grease when cooking.
Display not responding.	Temporary electrical glitch.	Unplug the oven from the wall outlet for a few minutes, then plug it back in.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Beautiful
Model Name	Toaster Oven
Item Model Number	19328
Color	White Icing
Product Dimensions	19.4"D x 8.81"W x 15.9"H
Capacity	15 Liters (Fits 12" Pizza, 9 Slices of Toast, 9x13" Casserole Dish)
Wattage	1800W
Special Feature	Digital Display, Quartz-Infrared Heating, 3-Speed Convection Fan
Material	Stainless Steel
Control Type	Touch Control
Door Style	Dropdown Door
Included Components	Air Fry Basket, Baking Pan, Crumb Tray, Wire Rack
Manufacturer	Generic Made By Gather
ASIN	B0FGLHSJNQ
Date First Available	July 3, 2025

Feature	Detail
---------	--------

WARRANTY AND SUPPORT


This Beautiful Digital Air Fry Toaster Oven is backed by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and limitations. For technical support, service, or to inquire about replacement parts, please visit the manufacturer's official website or contact their customer service department. Keep your purchase receipt and model number (19328) handy when contacting support.

For general inquiries or to explore other products, you may visit the [Beautiful Kitchen Appliances page on Amazon](#).

© 2025 Beautiful. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - 19328

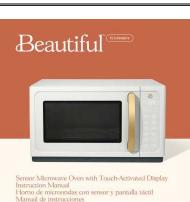 <p>Beautiful 9qt TriZone Air Fryer Instruction Manual Comprehensive instruction manual for the Beautiful 9qt TriZone Air Fryer with Touch-Activated Display. Includes setup, operation, safety guidelines, cooking charts, and maintenance tips for versatile kitchen use.</p>
 <p>Beautiful Sensor Microwave Oven Instruction Manual Comprehensive instruction manual for the Beautiful Sensor Microwave Oven with Touch-Activated Display, covering safety, operation, cleaning, and warranty information.</p>
 <p>Beautiful 6qt Digital Air Fryer with Touch-Activated Display - Instruction Manual Instruction manual for the Beautiful 6qt Digital Air Fryer (models 19018, 19028, 19033, 19038). Covers safety precautions, operation, cooking functions (Air Fry, Roast, Reheat, Dehydrate), cleaning, and warranty information.</p>
 <p>Beautiful 2-Slice Toaster with Touch-Activated Display: Instruction Manual This instruction manual provides detailed guidance for operating, maintaining, and ensuring the safe use of the Beautiful 2-Slice Toaster with Touch-Activated Display, including safety precautions, operating instructions, and warranty information.</p>
 <p>Beautiful 3qt Digital Air Fryer Instruction Manual & Guide Explore the Beautiful 3qt Digital Air Fryer with TurboCrisp™ Technology. This instruction manual provides essential safety guidelines, operating instructions, cooking charts, and maintenance tips for your kitchenware.</p>



[Beautiful Ceramic Non-Stick Cookware Instruction Manual](#)

Instruction manual for Beautiful Ceramic Non-Stick Cookware by Sensio Inc. dba Made by Gather™. Includes usage, cleaning, and warranty information.