

Avia Ama Electric Scooter

Avia Ama Electric Urban Scooter Instruction Manual

Model: Ama Electric Scooter

1. INTRODUCTION

Thank you for choosing the Avia Ama Electric Urban Scooter. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new electric scooter. Please read this manual thoroughly before using the product to ensure proper function and to prevent injury or damage.

The Avia Ama Electric Urban Scooter is designed for daily urban commuting, combining powerful performance with comfort and practicality. It features a sleek black design with blue accents, a bright blue LED front light for night visibility, and durable metal storage baskets.



Image 1: The Avia Ama Electric Urban Scooter, showcasing its sleek design, front basket, and comfortable seating arrangement.

2. SAFETY INFORMATION

Your safety is paramount. Always adhere to the following guidelines:

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when operating the scooter.
- Familiarize yourself with local traffic laws and regulations regarding electric scooters and always obey them.
- Do not operate the scooter under the influence of alcohol or drugs.
- Ensure all components, especially brakes and tires, are in good working condition before each ride.
- The scooter is equipped with a bright blue LED front light for enhanced visibility during low-light conditions and

side mirrors for rear visibility. Use them appropriately.

- Avoid riding in heavy rain, snow, or on icy surfaces.
- Do not exceed the maximum weight limit of 150 kg.
- This product is intended for adult use.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all the following items are present:

- Avia Ama Electric Urban Scooter
- Front Storage Basket
- Charger
- Side Mirrors (2)
- Comfortable Seat with Backrest
- User Manual (this document)

If any items are missing or damaged, please contact customer support immediately.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Avia Ama Electric Urban Scooter:

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Handlebar Installation:** Attach the handlebars to the steering column. Ensure they are securely fastened and aligned. The handlebars are adjustable for comfortable grip.
3. **Mirror Attachment:** Screw the side mirrors into their designated slots on the handlebars. Adjust them to provide clear rear visibility.
4. **Seat Assembly:** Install the comfortable seat and backrest onto the scooter frame. Ensure it is firmly secured.
5. **Front Basket Installation:** Attach the metal front storage basket to the front of the scooter. Verify it is stable and can hold items securely.
6. **Initial Charge:** Before first use, fully charge the scooter's battery using the provided charger. Refer to the 'Charging the Battery' section for details.



Image 2: Side view of the Avia Ama Electric Urban Scooter, highlighting the comfortable seat with backrest and the front storage basket.

5. OPERATING INSTRUCTIONS

5.1. Charging the Battery

- Locate the charging port on the scooter.
- Connect the charger to the scooter's charging port, then plug the charger into a standard electrical outlet.
- The charger indicator light will show the charging status (e.g., red for charging, green for fully charged).
- Do not overcharge the battery. Disconnect the charger once charging is complete.

5.2. Starting and Riding

- Ensure the scooter is fully charged.
- Turn on the scooter using the power button (location may vary, refer to visual guides if available).

- Mount the scooter, placing your feet comfortably on the footrest.
- Gently twist the throttle to accelerate. Start slowly to get accustomed to the scooter's power.
- Use the blue LED front light for visibility, especially at night or in low-light conditions.
- Utilize the side mirrors to check for traffic behind you.

5.3. Braking

The Avia Ama Electric Urban Scooter is equipped with a front disc brake and a rear drum brake for reliable stopping power.

- To brake, gently squeeze the brake levers on the handlebars.
- Apply both brakes simultaneously for optimal stopping performance and stability.
- Avoid sudden or harsh braking, especially at high speeds, to prevent loss of control.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Battery Care:** Always charge the battery in a well-ventilated area. Do not leave the battery completely discharged for extended periods. Store the scooter with a partially charged battery if not in use for a long time.
- **Tire Pressure:** Check tire pressure regularly. Maintain the recommended pressure (refer to tire sidewall for specifications) for optimal performance and safety.
- **Brake Inspection:** Periodically inspect the front disc and rear drum brakes for wear. Ensure brake levers operate smoothly and provide adequate stopping power. Adjust or replace brake components as needed.
- **Cleaning:** Clean the scooter with a damp cloth. Avoid using high-pressure water jets directly on electrical components.
- **Frame and Fasteners:** Regularly check the metal frame for any signs of damage or stress. Ensure all bolts and fasteners are tight. The sturdy frame is designed for durability, but regular checks are important.
- **Suspension:** The dual suspension system requires minimal maintenance, but ensure it moves freely and is not obstructed by dirt or debris.

7. TROUBLESHOOTING

If you encounter issues with your Avia Ama Electric Urban Scooter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scooter does not power on.	Battery is discharged or power button not pressed correctly.	Charge the battery fully. Ensure the power button is pressed firmly.
Reduced range or power.	Low battery charge, old battery, or riding conditions (e.g., uphill, heavy load).	Fully charge the battery. Consider battery replacement if it's old. Adjust riding style.
Brakes feel loose or ineffective.	Brake cables need adjustment or brake pads are worn.	Adjust brake cable tension. Inspect and replace worn brake pads.

Problem	Possible Cause	Solution
Unusual noises during operation.	Loose components, debris in wheels, or motor issue.	Check all fasteners. Inspect wheels for debris. If noise persists, contact support.

For issues not listed here or if solutions do not resolve the problem, please contact Avia customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	Ama Electric Scooter
Brand	Avia
Color	Black
Frame Material	Metal
Material Type	Plastic, Metal
Brake Type	Front Disc, Rear Drum
Suspension	Dual
Wheel Size	25.4 cm
Max Weight Limit	150 kg
Product Dimensions	14 x 26 x 110 cm
Item Weight	70 kg
Included Components	Electric scooter, Storage basket, Charger, Mirrors, Seat
Special Features	Front basket, Backrest, LED front light, Comfortable seat
Department	Adult Unisex
ASIN	B0FGLPVTFD
First Available Date	July 3, 2025

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact the retailer. If you require technical support, have questions about your scooter, or need to report a defect, please contact Avia customer service through their official channels or the seller from whom you purchased the product.

