

STRICH SEK-37

STRICH 37-Key Kids Mini Digital Piano Keyboard SEK-37 Instruction Manual

1. INTRODUCTION

Thank you for choosing the STRICH 37-Key Kids Mini Digital Piano Keyboard. This manual provides essential information for the safe and effective use of your new musical instrument. Please read it thoroughly before operation and retain it for future reference.



Figure 1.1: STRICH 37-Key Kids Mini Digital Piano Keyboard (Pink)

2. SAFETY INFORMATION

- Always supervise children during use.
- Keep the piano away from water and moisture.
- Do not expose to extreme temperatures or direct sunlight.
- Use only the provided power adapter or recommended batteries.
- Avoid dropping the instrument or subjecting it to strong impacts.
- Ensure proper ventilation around the unit.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- STRICH 37-Key Mini Digital Piano Keyboard
- Power Adapter (DC 6V)
- Kid's Piano Course Music Book
- Key Stickers for learning
- Instruction Manual

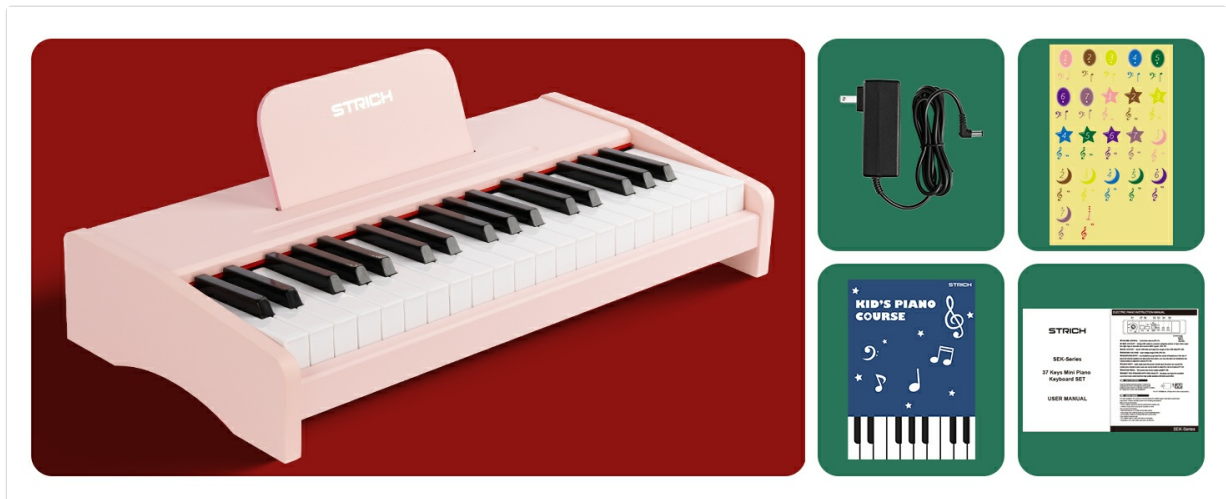


Figure 3.1: Included accessories with the STRICH piano.

4. SETUP

4.1 Powering the Piano

The piano can be powered by either the included DC 6V power adapter or 4 AA batteries (not included).

4.1.1 Battery Installation

1. Locate the battery compartment on the underside of the piano.
2. Use a screwdriver to open the battery compartment cover.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.

Enjoy the music anytime and anywhere

Insert 4 AA batteries, and joy is yours anytime, anywhere

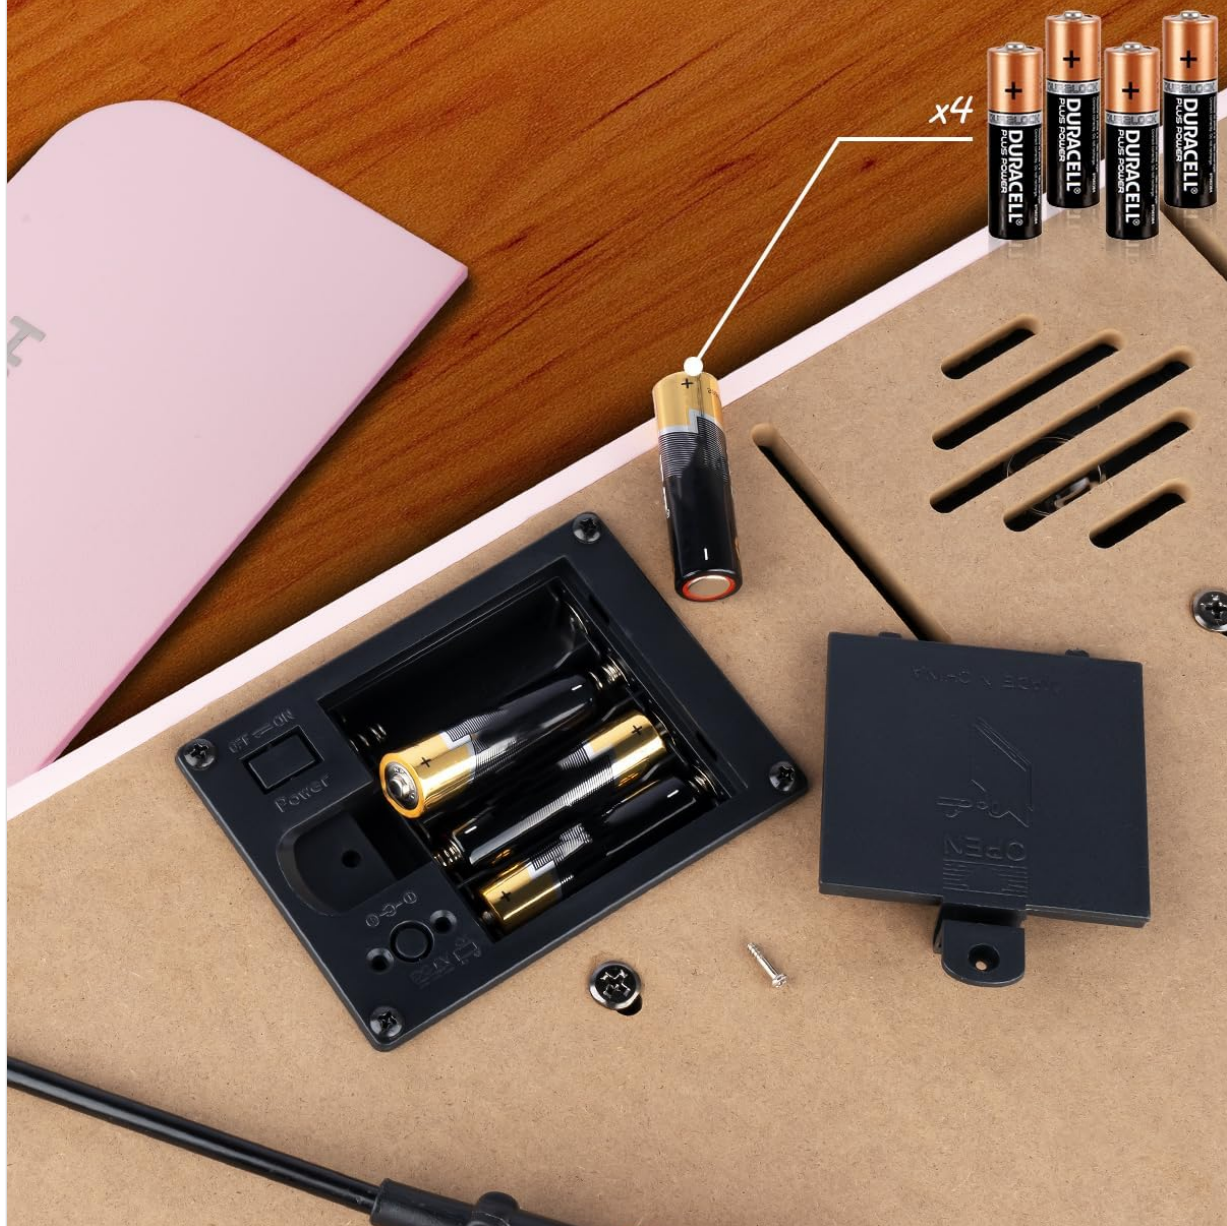


Figure 4.1: Battery compartment for 4 AA batteries.

4.1.2 Power Adapter Connection

Insert the DC 6V power adapter into the 'DC: 6V' port on the rear panel of the piano, then plug the adapter into a standard wall outlet.

4.2 Applying Key Stickers

The included key stickers are designed to assist with learning. Refer to the 'Kid's Piano Course' music book for guidance on proper placement.



Figure 4.2: Key stickers applied to the piano keys.

4.3 Music Stand Placement

The detachable music stand can be inserted into the slot on the top panel of the piano to hold your music book or tablet.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Volume Control

Locate the 'VOL' knob on the rear panel. Turn the knob clockwise to power on the piano and increase the volume. Turn it counter-clockwise to decrease the volume and power off the piano.

Volume Protection

The volume is gently reduced in a linear manner to protect children's hearing



Figure 5.1: Volume and power control knob.

5.2 Connecting External Devices

The rear panel features various ports for enhanced functionality:

- **MIDI Port:** Connect to MIDI-compatible devices for advanced musical applications.
- **USB Port:** Connect to a computer or other USB devices.
- **PHONE Port:** Plug in headphones for private practice.
- **INPUT Port:** Connect external audio sources (e.g., MP3 player) to play along.
- **SUSTAIN PEDAL Port:** Connect an optional sustain pedal for extended note duration.



Figure 5.2: Rear panel connections.

5.3 Wireless Connectivity

The piano supports wireless connection, allowing playback of songs and music from compatible mobile phones and tablets. Refer to your device's instructions for pairing with a Bluetooth audio device.

5.4 Learning with the Music Book and Stickers

The included 'Kid's Piano Course' music book provides simple tutorials and songs that correspond to the key stickers. Follow the color and shape codes to play basic melodies.



Figure 5.3: Learning to play using the music book and key stickers.

6. MAINTENANCE

- Clean the piano surface with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- If not in use for an extended period, remove the batteries to prevent leakage.
- Store the piano in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

- **No Sound:** Ensure the piano is powered on and the volume is turned up. Check battery installation or power adapter connection. Verify external devices (headphones, speakers) are correctly connected and powered.

- **Keys Not Responding:** Ensure the piano is powered on. If using batteries, check battery level.
- **Wireless Connection Issues:** Ensure the piano's wireless function is active and your external device's Bluetooth is enabled. Try re-pairing the devices.

8. SPECIFICATIONS

Feature	Specification
Model Number	SEK-37
Product Dimensions	21.65 x 11.02 x 3.54 inches
Item Weight	9.9 pounds
Keys	37
Power Source	DC 6V Adapter or 4 AA Batteries
Recommended Age	36 months - 8 years


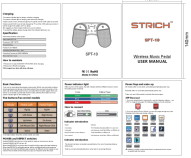




Removable Size



Figure 8.1: Product dimensions.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official STRICH website. Keep your proof of purchase for warranty claims.

	<p>STRICH SDP-120 Multi-function 88 Keys Electronic Keyboard User Manual</p> <p>This user manual provides comprehensive instructions for operating the STRICH SDP-120 multi-function 88 keys electronic keyboard. It covers Bluetooth connection, troubleshooting, function introduction, demo songs, rhythms, chords, recording, effect changes, dynamic control, split function, drum function, MP3 function, and detailed button descriptions.</p>
	<p>STRICH SPT-10 Wireless Music Pedal User Manual</p> <p>User manual for the STRICH SPT-10 Wireless Music Pedal, detailing charging, specifications, basic functions, connection, indicator lights, power management, and app downloads for sheet music page turning.</p>
	<p>STRICH SPT-20 Wireless Page Turner Pedal - User Manual & Specifications</p> <p>Comprehensive guide to the STRICH SPT-20 wireless page turner pedal. Learn about basic functions, connectivity, control modes, charging, specifications, and maintenance for hands-free music control.</p>
	<p>STRICH BT-N2C Wireless Music Pedal User Manual</p> <p>User manual for the STRICH BT-N2C Wireless Music Pedal, detailing its functions, specifications, charging, maintenance, and connectivity.</p>
	<p>STRICH SPT-20 Wireless Music Pedal User Manual - Page Turner Guide</p> <p>Comprehensive user manual for the STRICH SPT-20 wireless music pedal. Learn about basic functions, power management, control modes, connectivity, charging, specifications, and maintenance for this versatile page turner.</p>
	<p>STRICH 2x2 Professional High-Fidelity Audio Interface Operation Manual</p> <p>Comprehensive operation manual for the STRICH 2x2 professional high-fidelity audio interface. Covers setup, connections, PC/Mac configuration, troubleshooting, technical specifications, and packing list.</p>