

B0FGPTP1M4

Generic 12L Electric Air Fryer Instruction Manual

Model: B0FGPTP1M4

1. INTRODUCTION

Thank you for purchasing the Generic 12L Electric Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods with little to no oil. Please read this instruction manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.

- Do not block any ventilation openings.

3. PRODUCT OVERVIEW

Components

The Generic 12L Electric Air Fryer is designed for versatile cooking. Key components include the main unit with a digital touch control panel, a transparent oven door for monitoring cooking progress, and internal racks/trays for various food preparations.



Figure 1: Generic 12L Electric Air Fryer front view with digital display and transparent oven door.



Figure 2: Generic 12L Electric Air Fryer demonstrating multi-layer cooking with trays for simultaneous frying.



Figure 3: Generic 12L Electric Air Fryer's intelligent touch screen control panel being operated.



Figure 4: Generic 12L Electric Air Fryer with labeled dimensions (height, width, depth).

4. SETUP AND FIRST USE

- 1. Unpacking:** Carefully remove the air fryer and all packaging materials. Ensure all accessories are present.
- 2. Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 4 inches) around the appliance for proper ventilation. Do not place it near walls or other appliances.
- 3. Initial Cleaning:** Before first use, wipe the exterior of the air fryer with a damp cloth. Wash all removable parts (e.g., trays, racks) with warm, soapy water, rinse thoroughly, and dry completely.
- 4. First Run (Optional):** To eliminate any manufacturing odors, you may run the air fryer empty for about 10-15 minutes at 350°F (175°C). Ensure the area is well-ventilated during this process.

5. OPERATING INSTRUCTIONS

Control Panel Overview

The air fryer features an intelligent touch control panel. The display shows time, temperature, and selected cooking functions. Icons represent various pre-set cooking modes. Use the touch buttons to power on/off, select modes, adjust time/temperature, and start/pause cooking.

Basic Operation

1. **Power On:** Plug the air fryer into a grounded electrical outlet. The display will illuminate.
2. **Prepare Food:** Place your food on the appropriate rack or tray inside the air fryer. Do not overfill.
3. **Select Function:** Use the touch controls to select a pre-set cooking function or manually set the desired temperature and time.
4. **Adjust Settings:** If using manual mode, adjust the temperature (typically between 180°F - 400°F / 80°C - 200°C) and cooking time using the dedicated buttons.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle. The internal light may turn on, and the fan will start operating.
6. **Monitor Progress:** Utilize the transparent oven door to monitor your food without opening the appliance.
7. **Shake/Flip (Optional):** For even cooking, some recipes may require shaking or flipping food halfway through the cooking process. Use heat-resistant tongs or gloves.
8. **Finish Cooking:** The air fryer will beep when the cooking cycle is complete. Carefully remove the cooked food using heat-resistant utensils.
9. **Power Off:** Unplug the appliance from the wall outlet after use.

Pre-set Functions

The air fryer includes several pre-set functions for common foods, such as fries, chicken, fish, and more. Selecting a pre-set will automatically apply a recommended time and temperature. These can often be adjusted manually after selection if needed.

6. CARE AND MAINTENANCE

Cleaning

- **Always Unplug:** Before cleaning, ensure the air fryer is unplugged from the power outlet and has completely cooled down.
- **Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scourers, as they may damage the finish.
- **Interior:** Clean the interior with a soft, damp cloth and mild detergent. For stubborn food residue, a non-abrasive sponge can be used.
- **Removable Parts:** The cooking racks and trays should be washed in warm, soapy water. Rinse thoroughly and dry completely before reassembling or storing.
- **Dishwasher Safety:** Please note that the air fryer and its components are **not dishwasher safe**. Hand washing is recommended.

7. TROUBLESHOOTING

Issue	Possible Cause	Solution
Air fryer does not turn on	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly	Overfilling the basket; incorrect temperature/time; food not shaken/flipped.	Do not overfill. Ensure food is spread in a single layer. Adjust temperature and time as needed. Shake or flip food halfway through cooking.
White smoke coming from appliance	Grease residue from previous use; fatty foods cooking.	Clean the appliance thoroughly after each use. For fatty foods, place a small amount of water in the bottom tray to reduce smoke.
Appliance smells during first use	Manufacturing residue burning off.	This is normal for the first few uses. Ensure good ventilation. The smell will dissipate.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Generic
Model	B0FGPTP1M4
Capacity	12 Liters
Output Wattage	1350 Watts
Voltage	110 Volts
Control Method	Touch
Material	Stainless Steel
Color	Light Gray
Product Dimensions (D x W x H)	12.4" x 11.22" x 13.58"
Item Weight	15.7 Pounds
Special Feature	BBQ Grill Rack
Dishwasher Safe	No

9. WARRANTY AND SUPPORT

For any questions, concerns, or technical support regarding your Generic 12L Electric Air Fryer, please refer to the retailer's return policy or contact the manufacturer directly. Keep your purchase receipt as proof

of purchase for any warranty claims.