

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [XIXITPY](#) /

› XIXITPY 64GB Digital Voice Recorder Model Z6 User Manual

XIXITPY Z6

XIXITPY 64GB Digital Voice Recorder Model Z6 User Manual

Model: Z6 | Brand: XIXITPY

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your XIXITPY 64GB Digital Voice Recorder, Model Z6. Please read this manual thoroughly before using the device to ensure proper function and to maximize its capabilities. Keep this manual for future reference.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Use only the provided accessories (USB cable, headphones, refills) to prevent damage.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Digital Voice Recorder (1 unit)
- USB Cable (2 units)
- User Manual (1 unit)
- Screwdriver (1 unit)
- Black Replacement Refill (5 units)
- 3.5mm Headphones (1 unit)
- Headphones Controller (1 unit)



Image: Contents of the XIXITPY Digital Voice Recorder package.

4. PRODUCT OVERVIEW

The XIXITPY Z6 Digital Voice Recorder is designed for discreet and high-quality audio recording. It features a pen-style design, one-button operation, AI noise reduction, and voice activation.

4.1 Device Components

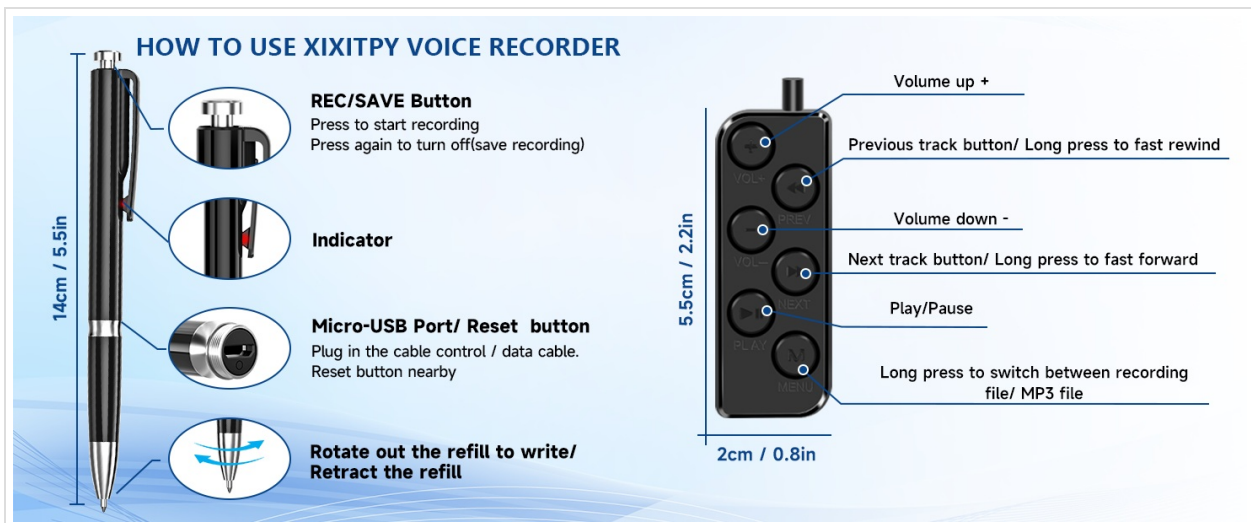


Image: Detailed diagram of the voice recorder pen and its wired controller with labeled buttons.

- **REC/SAVE Button:** Located at the top of the pen. Press to start recording, press again to save and stop recording.
- **Indicator Light:** Provides status feedback (e.g., recording, charging).
- **Micro-USB Port:** Used for charging and data transfer.
- **Reset Button:** Small button near the Micro-USB port for resetting the device.
- **Pen Refill:** Rotates out for writing, retracts when not in use.
- **Headphones Controller:** Separate unit with 3.5mm jack for headphones. Includes Volume Up/Down, Previous/Next Track, Play/Pause, and a button to switch between recording files and MP3 files.

5. SETUP AND BASIC OPERATION

5.1 Charging the Device

Before first use, fully charge the voice recorder. Connect the device to a computer or a USB power adapter using the provided Micro-USB cable. A full charge takes approximately 0.5 hours and provides up to 12 hours of continuous recording at 160kbps.

5.2 Power On/Off

The device powers on automatically when recording starts and powers off when recording is saved and stopped, or after a period of inactivity.

5.3 Setting the Time Stamp

The device automatically time-stamps each recording for easy organization. To ensure accurate time stamps, connect the device to a computer. The time will synchronize with your computer's system time. Refer to the detailed manual for specific software or file instructions if needed.

6. OPERATING INSTRUCTIONS

6.1 One-Touch Recording

1. To start recording, push the **REC/SAVE Button** at the top of the pen upwards. The indicator light will show that recording has begun.
2. To save the recording and stop, push the **REC/SAVE Button** downwards. The indicator light will confirm the save operation.



Image: One-button operation for recording and saving, and an illustration of the voice activation feature.

6.2 Voice Activated Recording (VOR)

The VOR mode allows the recorder to automatically start recording when sound above 40 dB is detected and pause when sound drops below 40 dB. This feature is off by default.

1. To enable/disable VOR mode, connect the device to a computer.
2. Access the device's settings file (usually named 'SETTINGS.TXT' or similar) in the root directory.
3. Locate the VOR setting and change its value to 'ON' or 'OFF' as desired. Save the file and safely eject the device.

6.3 Playback

There are three methods for playing back your recordings:

- **Local Direct Playback:** Connect the provided 3.5mm headphones to the device via the headphones controller. Use the buttons on the controller for play/pause, volume adjustment, and track navigation (long press for fast rewind/forward).
- **Android Phone (OTG):** Use an OTG adapter (not included) to connect the recorder to a compatible Android phone for playback. (Note: Not compatible with iPhone).
- **Windows/Mac OS Computer:** Connect the recorder to your computer using the Micro-USB cable. The device will appear as a removable drive. Navigate to the recording files (typically WAV or MP3 format) and play them using your computer's media player.



Image: Three methods for playing back recorded audio files.

6.4 File Transfer

To transfer recorded files to your computer:

1. Connect the voice recorder to your computer using the provided Micro-USB cable.
2. The device will be recognized as a removable storage device.
3. Open the device folder and locate your recording files.
4. Copy and paste the desired files to your computer.
5. Safely eject the device from your computer before disconnecting the cable.

Convenient Files Transfer

Connecting to your computer to manage recorded files



Image: Connecting the voice recorder to a computer for convenient file transfer.

6.5 Writing Function

The device functions as a standard writing pen. Rotate the bottom part of the pen to extend or retract the ink refill for writing.

7. MAINTENANCE

7.1 Refill Replacement

To replace the ink refill:

1. Unscrew the pen body to separate the two halves.

2. Carefully remove the old refill.
3. Insert a new replacement refill.
4. Screw the pen body back together securely.



Image: Illustration of the refill replacement method.

7.2 Cleaning and Storage

- Wipe the device with a soft, dry cloth. Do not use liquid cleaners or solvents.
- Store the device in a cool, dry place away from dust and direct sunlight.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong battery life.

8. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is charged. Connect to a power source and try again.
- **Cannot record:** Check if the memory is full. Transfer files to a computer to free up space.
- **Poor audio quality:** Ensure the microphone is not obstructed. Record in a quieter environment. Verify VOR settings if applicable.
- **Device unresponsive:** Use a small pin to press the reset button located near the Micro-USB port.
- **Cannot connect to computer:** Try a different USB port or cable. Ensure the cable is securely connected.

9. SPECIFICATIONS

Feature	Specification
Memory Storage Capacity	64 GB
Recording Capacity	Up to 4000 hours (at 32kbps)
Battery Life (Continuous Recording)	Up to 12 hours (at 160kbps)
Charging Time	Approximately 0.5 hours
Audio Quality	Up to 1536kbps

Feature	Specification
Noise Reduction	2159 AI Noise Cancellation Chip
Product Dimensions	4.33 x 5.73 x 5.73 inches
Item Weight	0.952 ounces (27 Grams)
Hardware Interface	Micro USB 2.0 Type B
Headphones Jack	3.5 millimeters
Recording Format	WAV
Compatible Devices	Personal Computer

10. WARRANTY AND SUPPORT

XIXITPY provides a **24-month free warranty** for this product. Additionally, **24-hour consulting service** is available for any questions or issues you may encounter.

For warranty claims, technical support, or general inquiries, please contact XIXITPY customer service through the retailer's platform or the official brand website.