

## GILES & POSNER EK6224GSBLVDE

# Giles & Posner Mini Stir Popcorn Maker Instruction Manual

Model: EK6224GSBLVDE

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Giles & Posner Mini Stir Popcorn Maker. Please read all instructions carefully before first use and retain this manual for future reference.

The Giles & Posner Mini Stir Popcorn Maker is designed to prepare delicious, healthy popcorn quickly and easily. Its motorized stirring function ensures even heating, and the non-stick plate simplifies cleaning. The 2-in-1 lid also serves as a serving bowl, minimizing mess.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

## PRODUCT COMPONENTS

Familiarize yourself with the parts of your popcorn maker:

- Main Unit with Non-Stick Heating Plate
- Motorized Stirring Rod
- Transparent 2-in-1 Lid/Serving Bowl
- Measuring Spoon



*Image 1: The Giles & Posner Mini Stir Popcorn Maker assembled, showing the main unit, transparent lid, and a measuring spoon. A separate popcorn box is also visible.*

## SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage if desired.
2. **Cleaning:** Before first use, wipe the non-stick heating plate with a damp cloth. Wash the transparent lid and measuring spoon in warm, soapy water, then rinse and dry thoroughly. Do not immerse the main unit in water.

3. **Placement:** Place the popcorn maker on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
4. **Assembly:** Ensure the motorized stirring rod is correctly positioned on the heating plate. Place the transparent lid securely on the main unit.

## OPERATING INSTRUCTIONS

---

Follow these steps to make popcorn:

1. **Prepare Ingredients:** Use high-quality popcorn kernels. The included measuring spoon is designed for optimal results. Do not overfill.
2. **Add Kernels:** Remove the transparent lid. Add the measured popcorn kernels to the non-stick heating plate.
3. **Add Oil (Optional):** For flavored popcorn, a small amount of cooking oil can be added to the kernels on the heating plate. For air-popped, healthy popcorn, no oil is needed.
4. **Secure Lid:** Place the transparent lid back onto the main unit, ensuring it is properly seated.
5. **Power On:** Plug the appliance into a suitable electrical outlet. The motorized stirring rod will begin to rotate, and the heating plate will start to warm up.
6. **Popping Process:** Popcorn will begin to pop within a few minutes. The stirring rod ensures even popping.
7. **Completion:** Once popping slows down significantly (typically 2-3 minutes after the first pop), switch off and unplug the appliance.
8. **Serve:** Carefully remove the transparent lid, which can be inverted and used as a serving bowl. Be cautious of hot steam.
9. **Enjoy:** Add your preferred seasonings or toppings.



Image 2: The product packaging, illustrating the key features of the Giles & Posner Mini Stir Popcorn Maker, including the motorized stirring and the lid that doubles as a serving bowl.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your popcorn maker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Heating Plate:** Wipe the non-stick heating plate with a soft, damp cloth. For stubborn residue, use a small amount of mild dish soap, then wipe clean with a damp cloth and dry thoroughly. Do not use abrasive cleaners or scourers.
3. **Clean Lid and Spoon:** The transparent lid and measuring spoon can be washed in warm, soapy water. Rinse well and dry completely. These parts are not dishwasher safe.
4. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other

liquid.

5. **Storage:** Store the appliance in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Popcorn not popping or only a few kernels pop.	Appliance not plugged in. Insufficient heat. Old or dry kernels. Too many kernels.	Ensure the appliance is securely plugged into a working outlet.  Allow the unit to preheat for a minute before adding kernels (if applicable, though this model heats immediately).  Use fresh, high-quality popcorn kernels.  Do not exceed the recommended amount of kernels (use the measuring spoon).
Popcorn tastes burnt.	Left on too long after popping. Too much oil (if used).	Unplug the appliance immediately once popping slows significantly.  Reduce the amount of oil used.
Stirring rod not rotating.	Appliance not powered on. Obstruction.	Ensure the appliance is plugged in and receiving power.  Check for any debris or kernels obstructing the stirring rod.

PRODUCT SPECIFICATIONS

- **Brand:** Giles & Posner
- **Model Number:** EK6224GSBLVDE
- **Color:** Blue
- **Dimensions (L x W x H):** 24.1 x 20.9 x 18.8 cm
- **Weight:** 1.03 Kilograms
- **Power:** 500 Watts
- **Material:** PP Plastic
- **Included Components:** 1 x Giles & Posner Mini Stir Popcorn Maker, 1 x Measuring Spoon



# giles & posner®

## Machine À Popcorn

PLAQUE 20 CM  
ANTIADHÉSIVE

SNACKS FAIBLES  
EN CALORIES

BRASSAGE  
MOTORISÉ

COUVERCLE  
BOL 2-EN-1

CHAUFFAGE  
UNIFORME



*Image 3: A visual representation of the Giles & Posner Mini Stir Popcorn Maker, highlighting its key features such as the 20cm non-stick plate, low-calorie snacks, motorized stirring, 2-in-1 bowl lid, and uniform heating.*

### WARRANTY INFORMATION






This Giles & Posner Mini Stir Popcorn Maker comes with a **2-year guarantee** from the date of purchase. Please retain your proof of purchase for any warranty claims. This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, neglect, accident, alteration, or commercial use.

### CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Giles & Posner customer support. Refer to the product packaging or the official Giles & Posner website for the most current contact information.

**Website:** [www.gilesandposner.com](http://www.gilesandposner.com) (Example link, actual link might vary)

**Related Documents - EK6224GSBLVDE**

	<p><a href="#">Giles &amp; Posner Mini-Me! Snack Maker EK4215GSGR Quick Start Guide</a></p> <p>Quick start guide and safety instructions for the Giles &amp; Posner Mini-Me! Snack Maker (Model EK4215GSGR). Learn how to use, clean, and store your snack maker safely.</p>
	<p><a href="#">Giles &amp; Posner Popcorn Maker Quick Start Guide</a></p> <p>Learn how to safely set up, use, and maintain your Giles &amp; Posner Popcorn Maker with this quick start guide. Includes essential safety instructions and care tips for optimal performance.</p>
	<p><a href="#">Giles &amp; Posner 3-in-1 Treat Maker Instruction Manual</a></p> <p>Comprehensive guide for the Giles &amp; Posner 3-in-1 Treat Maker, covering safety instructions, care and maintenance, troubleshooting, and recipes for waffles, mini doughnuts, and cake pops.</p>
	<p><a href="#">Giles &amp; Posner Dip &amp; Share Chocolate Fountain Instruction Manual</a></p> <p>Instruction manual for the Giles &amp; Posner Dip &amp; Share Chocolate Fountain, covering safety, care, assembly, operation, and troubleshooting.</p>
	<p><a href="#">Giles &amp; Posner Chocolate Fountain User Guide</a></p> <p>User guide for the Giles &amp; Posner Chocolate Fountain, covering assembly, preparation, dipping ideas, chocolate types, cleaning, troubleshooting, and safety instructions.</p>