

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VEHOP](#) /

› [VEHOP D88 OWS Open Ear TWS Earbuds User Manual](#)

VEHOP D88

VEHOP D88 OWS Open Ear TWS Earbuds User Manual

Model: D88

1. INTRODUCTION

Thank you for choosing the VEHOP D88 OWS Open Ear TWS Earbuds. These earbuds are designed to provide a comfortable and immersive audio experience with an open-ear design, advanced Bluetooth 5.4 connectivity, and low-latency gaming capabilities. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance.

2. PACKAGE CONTENTS

Please check the package for the following items:

- VEHOP D88 OWS Open Ear TWS Earbuds (Left and Right)
- Charging Case
- Type-C Charging Cable
- Instruction Manual

3. PRODUCT OVERVIEW

The VEHOP D88 earbuds feature an open-ear design for comfort and environmental awareness. The charging case provides portable power and includes a digital display for battery status.



Image: VEHOP D88 OWS Open Ear TWS Earbuds and their charging case. The earbuds are black with an ear hook design, and the circular charging case features a digital battery indicator.

3.1. Touch Controls

The earbuds are equipped with touch-sensitive controls for easy management of music, calls, and other functions. Refer to the diagram below for specific gestures.

Revolutionary wireless earphones that combine next-generation style and technology

It's sure to become a great partner for your everyday life!



Image: Diagram illustrating the touch controls for the VEHOP D88 OWS Earbuds. It shows gestures for power on/off, music playback (next/previous song, regeneration/temporary stop), call management (receiving, rejecting), voice assistant activation, volume adjustment, and automatic pairing. Note: The earbuds shown in this diagram are gold, but the controls apply to the black model.

- **Power On:** Take out of the case.

- **Power Off:** Press and hold for 5 seconds, or simply return to the case.
- **Play/Pause/Regeneration:** Tap left/right earbud once.
- **Next/Previous Song:** Tap the right earbud twice.
- **Receive a Call:** Tap left/right earbud once.
- **Reject a Call:** Press and hold left and right earbuds for 2 seconds.
- **Voice Assistant:** Press and hold either earbud for 2 seconds.
- **Adjust Volume:** Tap right earbud 3 times to increase volume; tap left earbud 3 times to decrease volume.
- **Automatic Pairing:** Occurs when first turned on.

4. SETUP

4.1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. The charging case can be fully charged in approximately 1.5 hours using the provided Type-C cable.

1. Place the earbuds into the charging case. Ensure they are correctly seated.
2. Connect the Type-C charging cable to the charging port on the case and to a USB power source.
3. The digital display on the charging case will indicate the charging status and battery level.
4. Once fully charged, disconnect the charging cable.

A single charge provides over 5 hours of playtime, with the charging case extending total playtime to approximately 45 hours. The standby time is up to 120 hours.

Incredible battery life: Music all day long

The earphones can be used for a long time without any problems. Furthermore, the charging case allows you to fully charge the earphones multiple times.





Image: Illustration highlighting the battery life of the VEHOP D88 OWS Earbuds. It shows the earbuds and charging case with a digital display indicating "99", symbolizing full charge. Note: The earbuds and case shown in this image are gold, but the battery features apply to the black model.

4.2. Pairing with a Device

The earbuds use Bluetooth 5.4 for a stable and efficient connection.

1. Initial Pairing:

- Open the charging case and take out both earbuds. They will automatically enter pairing mode.
- On your device (smartphone, tablet, etc.), enable Bluetooth.
- Search for "D88" in the list of available Bluetooth devices and select it to connect.
- Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

2. Automatic Reconnection:

- After the initial pairing, the earbuds will automatically connect to the last paired device when taken out of the charging case, provided Bluetooth is enabled on the device.

**Smart control at
your fingertips**

Seamless control over your music and calls.



—

Power On
Just take it out of the case



—

Power off: Press and hold for 5 seconds or simply return to the case



—

Regeneration/temporary stop
Tap left/right once



—

Next/Previous Song
Tap left and right twice



—

Receiving a call
Tap left/right once



—

Reject a call
Press and hold left and right for 2 seconds



—

Voice Assistant
Press and hold left and right for 2 seconds



—

Adjust volume Tap right 3 times to increase volume Tap left 3 times to decrease volume



—

Pairing
Automatic pairing when first turned on

Image: Illustration showing a hand taking a VEHOP D88 OWS earbud out of its charging case, with text indicating that once paired, the earbuds will connect automatically. Note: The earbuds and case shown in this image are gold, but the automatic pairing feature applies to the black model.

5. OPERATING INSTRUCTIONS

Refer to the "Touch Controls" section (3.1) for detailed gestures for music playback, call management, and voice assistant activation.

5.1. Music Playback

- **Play/Pause:** Tap either earbud once.
- **Next Track:** Tap the right earbud twice.
- **Previous Track:** Tap the left earbud twice.
- **Volume Up:** Tap the right earbud three times.
- **Volume Down:** Tap the left earbud three times.

5.2. Call Management

- **Answer/End Call:** Tap either earbud once.
- **Reject Call:** Press and hold either earbud for 2 seconds.

5.3. Voice Assistant

- **Activate Voice Assistant:** Press and hold either earbud for 2 seconds.

5.4. Low Latency Gaming Mode

The D88 earbuds feature a 45ms low latency mode, optimized for gaming to ensure synchronized audio and video.

Equipped with amazing low latency performance that will revolutionize your gameplay!

With no time lag between audio and video, you can hear enemy footsteps and gunfire in real time, giving you an overwhelming advantage in FPS, MOBA, and battle royale games!



Image: A person wearing VEHOP D88 OWS earbuds (gold color) while playing a game on a smartphone, illustrating the low latency performance for gaming. The text emphasizes no time lag between audio and video.

This mode is automatically engaged when connected to a compatible device or can be activated through specific touch gestures (if available, otherwise it's an inherent feature). This minimizes audio delay, providing a competitive edge in gaming.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your earbuds.

- **Cleaning:** Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are IPX5 water and sweat resistant, meaning they can withstand splashes and sweat. Do not submerge them in water or expose them to heavy rain.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage. Store in a cool, dry place.
- **Charging Contacts:** Ensure the charging contacts on both the earbuds and the case are clean and free of debris to maintain proper charging.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions:

Problem	Solution
Earbuds not pairing	<ul style="list-style-type: none">• Ensure both earbuds are taken out of the case.• Turn off and on Bluetooth on your device.• Forget "D88" from your device's Bluetooth list and try pairing again.• Ensure earbuds are charged.
No sound from one earbud	<ul style="list-style-type: none">• Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out again.• Ensure both earbuds are charged.• Try re-pairing the earbuds with your device.
Earbuds not charging	<ul style="list-style-type: none">• Ensure the charging cable is securely connected to both the case and the power source.• Check if the charging contacts on the earbuds and case are clean.• Try a different Type-C cable or power adapter.
Poor call quality	<ul style="list-style-type: none">• Ensure the earbuds are within Bluetooth range of your device.• Check for obstructions between the earbuds and your device.• Ensure the microphone is not covered.

8. SPECIFICATIONS

Feature	Detail
Model Name	D88
Brand	VEHOP
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Bluetooth Range	15 Metres
Earpiece Shape	Hook (Open Ear)
Control Type	Touch Control
Audio Latency	45 Milliseconds
Audio Driver Size	15 Millimetres
Battery Life (Earbuds)	5+ Hours (single charge)
Total Playtime (with Case)	45 Hours
Standby Time	120 Hours

Feature	Detail
Charging Time (Case)	1.5 Hours
Charging Port	Type-C
Water Resistance Level	IPX5 (Water & Sweat Resistant)
Noise Control	Passive Sound Isolation
Item Weight	50 Grams
Product Dimensions	9 x 4 x 2 cm
Material	Plastic

9. WARRANTY AND SUPPORT

Your VEHOP D88 OWS Open Ear TWS Earbuds come with a 6-month warranty from the date of purchase, covering manufacturing defects.

For warranty claims, technical support, or any inquiries, please contact VEHOP customer service:

- **Email:** contact.vehop@gmail.com
- **Manufacturer Address:** 1413, VEHOP, Kalyan Shil Road, Dombivli East 421203, India

Please retain your proof of purchase for warranty validation.

