

Jectse Jectseh01frq3yoa-13

Jectse Slider Mobile Phone User Manual

Model: Jectseh01frq3yoa-13

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Jectse Slider Mobile Phone. Please read this manual thoroughly before operating the device and retain it for future reference. This phone is designed for ease of use, featuring large buttons and a sliding mechanism.

2. PRODUCT OVERVIEW

The Jectse Slider Mobile Phone is a compact and portable device equipped with essential communication and multimedia features. Its unique slider design protects the keypad when not in use and allows for easy unlocking.

Key Features:

- **Slider Mechanism:** Conveniently slide to unlock and access the keypad.
- **2.0-inch HD Display:** Clear and easy-to-read text for an enhanced viewing experience.
- **Large Buttons:** Designed for comfortable and accurate dialing and navigation.
- **Multimedia Support:** Includes MP3/MP4 player, FM radio, and a camera.
- **Essential Tools:** Alarm, calendar, flashlight, calculator, and games.
- **Voice Changer Function:** Allows for voice alteration (male, female, child).
- **Speed Dial:** Configure up to 9 family numbers for quick dialing.
- **Long Battery Life:** 1000 mAh rechargeable battery with Type-C charging for extended standby time.

Phone Components:

Familiarize yourself with the various parts of your phone.





Menu

Name

Image 2.1: Front view of the Jectse Slider Mobile Phone with the slider closed, displaying the screen and navigation buttons. This image highlights the compact form factor when the keypad is retracted.



Image 2.2: Angled view of the Jectse Slider Mobile Phone with the slider open, revealing the full alphanumeric keypad. This shows the phone ready for dialing or texting.

3. SETUP

3.1 Inserting the SIM Card and Battery

1. Carefully remove the back cover of the phone.
2. Insert your SIM card(s) into the designated slot(s). Ensure the gold contacts face downwards.
3. Insert the battery, aligning the contacts correctly.
4. Replace the back cover until it clicks into place.

3.2 Charging the Phone

Before first use, fully charge the phone battery.

1. Connect the Type-C charging cable to the charging port on the phone.
2. Connect the other end of the cable to a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator will appear on the screen. Once fully charged, disconnect the charger.



Image 3.1: The Jectse Slider Mobile Phone displayed alongside its Type-C charging cable and a lanyard. This illustrates the accessories provided for charging and portability.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen lights up.
- **To Power Off:** Press and hold the Power/End Call button until the power-off options appear, then select 'Power Off'.

4.2 Unlocking the Phone

Slide the top part of the phone upwards to reveal the keypad and unlock the device. Slide it back down to lock the keypad and protect the screen.

4.3 Making and Receiving Calls

- **To Make a Call:** Slide the phone open, dial the number using the keypad, and press the Call button

(green icon).

- **To Answer a Call:** When the phone rings, press the Call button (green icon).
- **To End a Call:** Press the Power/End Call button (red icon).

4.4 Sending and Receiving Text Messages

1. Navigate to the 'Messages' menu.
2. Select 'Write Message' or 'New Message'.
3. Enter your message using the keypad.
4. Enter the recipient's phone number or select from contacts.
5. Select 'Send'.

4.5 Using the Camera

The phone includes a basic camera for capturing photos.

1. Navigate to the 'Camera' application from the main menu.
2. Frame your shot using the screen as a viewfinder.
3. Press the designated camera button or the center navigation button to take a picture.





Image 4.1: Back view of the Jectse Slider Mobile Phone with the slider open, clearly showing the camera module. This indicates the camera's position for photography.

4.6 Multimedia Functions

- **MP3/MP4 Player:** Access the 'Multimedia' or 'Player' menu to play audio and video files stored on the phone or a memory card (if supported).
- **FM Radio:** Connect a headset (acting as an antenna) to use the FM radio function. Navigate to the 'FM Radio' menu to scan for stations.

4.7 Other Features

- **Alarm:** Set multiple alarms with custom tones.
- **Calendar:** View dates, add events, and set reminders.
- **Flashlight:** Activate the built-in flashlight from the shortcuts or tools menu.
- **Calculator:** Perform basic arithmetic operations.
- **Games:** Access pre-installed games for entertainment.
- **Internet Access/Browser:** The phone supports basic internet access and a browser. Consult your network provider for data plan details.
- **Voice Changer:** Located in the 'Tools' or 'Settings' menu, this feature allows you to change your voice during calls to male, female, or child tones.
- **Speed Dial:** Go to 'Settings' > 'Phone Settings' > 'Speed Dial' to assign up to 9 family numbers for quick dialing by long-pressing a number key.

5. MAINTENANCE

- Keep the phone dry. Moisture can damage electronic circuits.
- Do not expose the phone to extreme temperatures.
- Clean the phone with a soft, dry cloth. Avoid using harsh chemicals.
- Handle the phone with care. Avoid dropping or subjecting it to strong impacts.
- Use only approved batteries, chargers, and accessories.

6. TROUBLESHOOTING

6.1 Phone Does Not Power On

- Ensure the battery is correctly inserted and charged.
- Try charging the phone for at least 30 minutes before attempting to power it on again.

6.2 Cannot Make or Receive Calls

- Check if the SIM card is properly inserted and activated.
- Verify that you have network signal.
- Ensure your account has sufficient credit or an active plan.

6.3 Poor Audio Quality

- Check the volume settings during a call.
- Ensure the speaker and microphone are not obstructed.
- Move to an area with better network coverage.

6.4 Battery Drains Quickly

- Reduce screen brightness.
- Close unused applications.
- Limit background data usage.
- Ensure the phone is not in an area with very weak signal, as this can increase battery consumption.

7. SPECIFICATIONS

Feature	Specification
Brand	Jectse
Model Number	Jectseh01frq3yoa-13
Color	Violet
Display	2.0-inch HD
Battery Capacity	1000 mAh
Charging Port	Type-C

ASIN	B0FGSQ73CP
First Available Date	July 4, 2025

8. WARRANTY AND SUPPORT

8.1 Manufacturer Warranty

This product comes with a manufacturer's warranty of **90 days from the date of purchase**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Jectse customer support through the retailer where the product was purchased or refer to the official Jectse website for contact information.