

MyKaFort 90098

MyKaFort Remote Control City Express Train Set - Model 90098 Instruction Manual

Your guide to setting up and operating your MyKaFort train set.

1. INTRODUCTION

Thank you for choosing the MyKaFort Remote Control City Express Train Set. This battery-powered electric train toy is designed for toddlers and is compatible with most wooden railway tracks. It features dual control modes, lights, and sounds for an engaging play experience. Please read this manual carefully before use to ensure proper setup and operation.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years. Adult supervision is recommended during play. Keep packaging for important information.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- 1x Train Locomotive
- 1x Passenger Carriage
- 1x Remote Control
- 1x Posable Figure

4. PRODUCT OVERVIEW AND FEATURES

The MyKaFort City Express Train Set offers a rich play experience with the following features:

- **Dual Control Modes:** Operate the train using the included remote control or the buttons located on top of the

engine.

- **Light & Sound Effects:** Functional headlights and authentic train sounds enhance the play experience.
- **Magnetic Carriage:** The detachable passenger carriage connects securely to the locomotive using strong magnetic connectors.
- **Posable Figure:** An action figure is included and can be placed inside the carriage for imaginative journeys.
- **Universal Compatibility:** Designed to fit major wooden railway brands such as Brio, Thomas, KidKraft, and Chuggington.
- **Durable Construction:** Crafted from high-quality ABS plastic with smooth edges, suitable for children aged 3 and up.

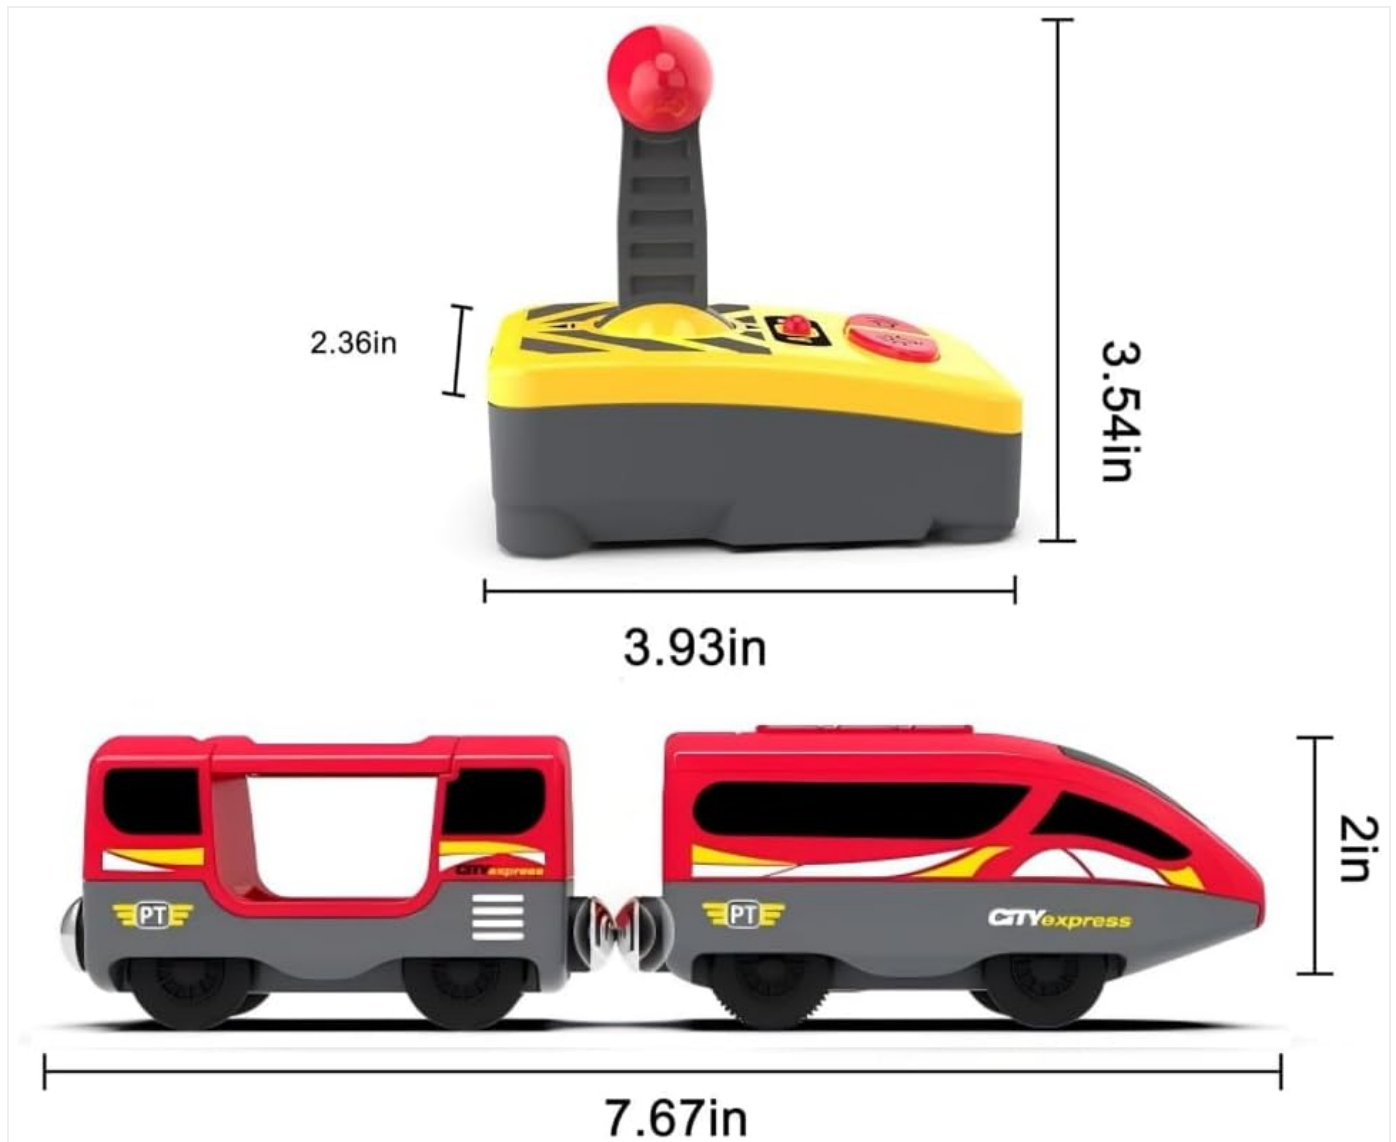


Image 1: Dimensions of the train locomotive (7.67in long, 2in high) and remote control (3.93in wide, 3.54in high, 2.36in lever height).



Image 2: Detail showing the magnetic connectors that link the train locomotive and passenger carriage.

5. SETUP

5.1 Battery Installation (Train Locomotive)

1. Locate the battery compartment on the underside of the train locomotive.
2. Using a small screwdriver, unscrew the battery compartment cover.
3. Insert 2 AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.

5.2 Battery Installation (Remote Control)

1. Locate the battery compartment on the underside of the remote control.
2. Using a small screwdriver, unscrew the battery compartment cover.
3. Insert 2 AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.



Image 3: The bottom of the train and remote control, indicating battery compartments and the A/B channel switch for pairing.

5.3 Remote Pairing

To pair the remote control with the train:

1. Ensure both the train and the remote control are turned off. The switch on the train's underside should be in the middle position.

2. Set both the train's channel switch (on the underside) and the remote's channel switch (on the bottom) to the same channel (A or B).
3. For first-time pairing, turn the train on FIRST, then turn the remote on.

6. OPERATION

6.1 Train Controls (On-board Buttons)

The train locomotive features buttons on its top for direct control:

- Press the forward button to move the train forward.
- Press the reverse button to move the train backward.
- Press the stop button to halt the train.
- These buttons also activate lights and train sounds.



Image 4: The train locomotive highlighting the on-board buttons for controlling movement, lights, and sounds.

6.2 Remote Control Functions

Once paired, use the remote control to operate the train:

- **Forward:** Push the lever forward.
- **Backward:** Pull the lever backward.
- **Stop:** Push the lever then quickly release it.
- **Sound:** Press the speaker button to activate train sounds.
- **Lights:** Press the light bulb button to activate the headlights.

6.3 Magnetic Coupling

The locomotive and carriage connect via magnetic couplers. Simply bring the ends together, and they will snap into place. To detach, gently pull them apart.

Matching the Train & Remote Frequency:

1. When the switch in the middle position, both the train and the remote control are turned off. Set both the switch to the same channel (A or B).
2. For first-time pairing:
Turn the train on **FIRST**, then turn the remote on.
3. Control:
Push the lever **forward**: Train moves forward.
Pull the lever **backward**: Train moves backward.
Push the lever then **quickly release**: Train stops.



Image 5: The MyKaFort City Express Train Set running on a wooden track, demonstrating its compatibility.

6.4 Track Compatibility

This train set is designed to be compatible with most standard wooden railway tracks, allowing for integration with existing train sets and expansion possibilities.

7. MAINTENANCE

- Wipe the train and remote control with a dry cloth to remove dust and dirt. Do not immerse in water.
- If the toy will not be used for an extended period, remove the batteries from both the train and the remote control to prevent leakage.
- Store the train set in a cool, dry place away from direct sunlight.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Train does not move or respond to remote.	1. Batteries are low or incorrectly installed. 2. Remote and train are not paired. 3. Channel switches (A/B) are mismatched.	1. Replace batteries in both train and remote. Check polarity. 2. Follow remote pairing instructions (Section 5.3). 3. Ensure both train and remote are set to the same A or B channel.
Lights or sounds are not working.	1. Batteries are low. 2. Feature not activated.	1. Replace batteries. 2. Press the dedicated light/sound buttons on the remote or train.
Train moves slowly or struggles on inclines.	Batteries are low.	Replace batteries in the train locomotive.

9. SPECIFICATIONS

Feature	Detail
Brand	MyKaFort
Model Number	90098
Material	ABS Plastic
Power Source	Battery Powered
Train Batteries	2x AA (not included)
Remote Batteries	2x AAA (not included)
Age Recommendation	36 months (3 years) and up
Control Method	Remote, Touch
Item Dimensions	4.33 x 4.33 x 2.83 inches (packaging dimensions, actual product dimensions are shown in Image 1)

10. WARRANTY AND SUPPORT

Specific warranty information and detailed support contacts are not provided in the available product data. For assistance, please refer to the retailer where the product was purchased or visit the official MyKaFort brand store online.

11. PRODUCT VIDEOS

No official seller videos are available for embedding in this manual. Please refer to the product page for any available customer-uploaded videos.

