

RETROSUN RF373E JLDK.28.10.14

RETROSUN RF373E JLDK.28.10.14 Adjustable Bed Remote Control User Manual

Instructions for Setup, Operation, and Maintenance

[Compatibility](#)

[Setup](#)

[Operation](#)

[Maintenance
Warranty](#)

[Troubleshooting](#)

[Specifications](#)

1. COMPATIBILITY

This replacement remote control, model RF373E JLDK.28.10.14, is designed for use with specific adjustable bed bases. It is compatible with:

- Blissful Nights e4 Adjustable Bed Base
- Blissful Nights e6 Adjustable Bed Base
- Ergomotion HAND WAND Adjustable Bed Base
- Greaton Adjustable Bed Base

Important Note:

Before ordering, ensure that the buttons and overall appearance of this remote match your original or old remote exactly. Discrepancies may indicate incompatibility.



Image: Front view of the RETROSUN RF373E JLDK.28.10.14 remote control, showing its button layout.

2. SETUP AND PAIRING

The remote control is typically pre-programmed to the adjustable bed base. If the remote is unresponsive or needs to be re-paired, follow these steps:

1. Ensure the remote has fresh batteries. This remote requires three (3) AAA batteries (not included).
2. Unplug the power cord of your adjustable bed base from the electrical outlet.
3. Wait for 5 seconds.
4. Plug the power cord back into the electrical outlet.
5. Within 10 seconds of plugging the power cord back in, press and hold the **"Head Up"** button (top left arrow) and the **"Foot Down"** button (bottom right arrow) simultaneously for 10 seconds.
6. The adjustable bed base should now be re-paired with the remote control.

Note:

If the remote illuminates but the bed does not respond, check the batteries and replace them if

necessary before attempting the pairing process again.



Image: Visual guide for pairing the remote control, highlighting the "Head Up" and "Foot Down" buttons to press simultaneously.

3. OPERATION

The remote control features an intuitive button layout for adjusting your bed base. While specific functions may vary slightly depending on your bed model, the general operations are as follows:

- **Head Up/Down Arrows:** Adjust the head section of the bed.
- **Foot Up/Down Arrows:** Adjust the foot section of the bed.
- **FLAT Button:** Returns the bed to a completely flat position.
- **ZERO G Button:** Activates the Zero Gravity preset position, which elevates the head and foot to relieve pressure.
- **M1, M2, M3 Buttons:** These are memory preset buttons. You can program and recall your favorite bed positions. Refer to your adjustable bed base manual for specific instructions on setting these memory positions.
- **10 MIN, 20 MIN, 30 MIN Buttons:** These typically control massage timers or other timed

functions.

- **Zzz Button:** Often activates a gentle massage or sleep mode.
- **Light Bulb Icon Button:** Controls under-bed lighting or other integrated lighting features.

The remote operates with a reliable range of up to 8 meters (26 feet) and features a 120-degree wide-angle design for flexible use without strict positioning constraints.



How To Pairing

Step 1: plug the base into your outlet.

Step 2: Press the "Head Up" and "Foot Down" button at the same time for 10 seconds

Note: if the remote is unresponsive, Unplug the power cord from the outlet, Wait 5 seconds plug it back into the outlet. Within 10 seconds of plugging the power cord into the outlet. Repeat the above steps again

Pairing Button

Image: The remote control shown in a bedroom setting with an adjustable bed, illustrating its operational distance.



Image: A hand holding the remote control, demonstrating its ergonomic design.

4. MAINTENANCE

Battery Replacement

The remote control requires three (3) AAA batteries. When the remote's performance degrades or it stops responding, it is likely time to replace the batteries.

1. Locate the battery compartment cover on the back of the remote control.

2. Slide or unclip the cover to open the compartment.
3. Remove the old AAA batteries.
4. Insert three new AAA batteries, ensuring correct polarity (+ and - ends match the markings inside the compartment).
5. Replace the battery compartment cover securely.

Caution:

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Dispose of used batteries responsibly according to local regulations.



Image: Rear view of the remote control, illustrating the battery compartment and the insertion of three AAA batteries.

5. TROUBLESHOOTING

If your remote control is not functioning as expected, consider the following common issues and solutions:

- **Remote is unresponsive:**
 - Check the batteries. Replace with fresh AAA batteries if needed.

- Perform the pairing procedure described in Section 2. Setup and Pairing.
- Ensure there are no obstructions between the remote and the bed base's receiver.
- **Bed base does not move:**
 - Verify the bed base is properly plugged into a working electrical outlet.
 - Check for any loose cables or connections on the bed base.
 - If the remote illuminates but the bed does not respond, re-pair the remote as per Section 2.
- **Buttons do not match original remote:**
 - This remote is a specific replacement. If the buttons or model number do not match your original remote, it may not be compatible with your bed base. Refer to Section 1. Compatibility.

6. SPECIFICATIONS

Feature	Detail
Brand	RETROSUN
Model Number	RF373E JLDK.28.10.14 (Internal Model: BW441)
Compatibility	Blissful Nights e4/e6, Ergomotion HAND WAND, Greaton Adjustable Bed Bases
Connectivity Technology	Infrared (IR)
Maximum Range	8 meters (26 feet)
Battery Type	3 x AAA (not included)
Material	High-quality ABS
Color	Black
Item Weight	0.08 Kilograms

7. WARRANTY INFORMATION

This RETROSUN remote control comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For warranty claims or support, please contact your retailer or the manufacturer directly with your proof of purchase.

8. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please refer to the contact information provided by your retailer or the manufacturer, Oumeite.

Always ensure you have your product model number (RF373E JLDK.28.10.14) and purchase details ready when contacting support.