#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- > PERLESMITH /
- > PERLESMITH Rolling TV Stand PSTVMC04 & Perlegear Monitor TV Stand PGTVS29 User Manual

# PERLESMITH PSTVMC04, PGTVS29

# PERLESMITH Rolling TV Stand PSTVMC04 & Perlegear Monitor TV Stand PGTVS29 User Manual

Your comprehensive guide to setup, operation, and maintenance.

# **INTRODUCTION**

This manual provides detailed instructions for the assembly, operation, and maintenance of your PERLESMITH PSTVMC04 Rolling TV Stand and Perlegear PGTVS29 Monitor TV Stand. Please read all instructions carefully before beginning assembly to ensure safe and correct usage of your product.

# PERLESMITH PSTVMC04 Rolling TV STAND

The PSTVMC04 is a versatile mobile TV cart designed for various display sizes and environments, offering mobility and adjustable viewing.

#### **Features**

- Universal Compatibility: Fits most 23" to 60" LCD, LED, flat screen, and curved TVs weighing up to 55 lbs. Supports VESA patterns including 100x100, 200x100, 200x200, 300x200, 300x300, 400x200, 400x300, and 400x400mm.
- **Height Adjustable Tray:** Includes a sturdy media shelf for laptops, DVD players, or gaming devices. The shelf height is adjustable from 12" to 24" from the floor.
- Adjustable TV Plate: The wall mount plate can be adjusted to customize your viewing height.
- Mobile Design: Equipped with smooth-rolling wheels for easy movement between rooms.

# **Setup Instructions**

Follow these steps for the proper assembly of your PSTVMC04 Rolling TV Stand:

- 1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list provided in your physical manual.
- 2. Assemble Base: Attach the X-shaped base components securely. Ensure all screws are tightened.
- 3. **Install Wheels:** Screw the four wheels into the designated slots on the base. Ensure two of the wheels are lockable and positioned for easy access.

- 4. **Attach Column:** Secure the main support column to the assembled base.
- 5. **Mount TV Plate:** Attach the TV mounting plate to the column at your desired initial height.
- 6. Install Media Shelf: Secure the media shelf to the column at a comfortable height.
- 7. **Attach TV Brackets:** Secure the VESA brackets to the back of your television, ensuring they align with your TV's VESA pattern.
- 8. **Mount TV:** Carefully lift and hang your TV onto the mounting plate. Secure it with the provided safety screws or locking mechanisms.



Image: The PSTVMC04 Rolling TV Stand fully assembled, featuring a television mounted on top and a laptop placed on its adjustable media shelf. This image demonstrates the stand's overall structure and its utility for holding both a display and auxiliary devices.



Image: A close-up view of the stable X-shaped base of the PERLESMITH Rolling TV Stand, highlighting its robust construction and the integrated wheels. This design ensures stability and easy mobility for the stand.

# **Operation**

- Moving the Stand: Unlock the wheels by flipping their levers upwards. Gently push the stand to your
  desired location. Once in position, lock the wheels by flipping the levers downwards to prevent
  accidental movement.
- Adjusting TV Height: To adjust the TV height, loosen the securing bolts on the main column, slide the TV plate to the desired height, and re-tighten the bolts firmly. Always ensure the TV is stable

before releasing it.

• Adjusting Media Shelf: The media shelf can be repositioned by loosening its attachment screws, sliding it up or down the column, and then re-tightening the screws.



Image: The PERLESMITH Rolling TV Stand illustrating its height adjustment capabilities, allowing users to achieve eyelevel comfort for optimal viewing. The image shows the range of vertical movement for the mounted television.

# **Specifications (PSTVMC04)**

Attribute	Value

Screen Size Compatibility	23" to 60"
Weight Capacity	Up to 55 lbs (25 kg)
VESA Compatibility	100x100, 200x100, 200x200, 300x200, 300x300, 400x200, 400x300, 400x400mm
Media Shelf Height Range	12" to 24" from floor

# Perlegear Monitor TV Stand PGTVS29

The PGTVS29 is a robust desktop monitor stand designed to enhance your viewing experience with extensive adjustability.

#### **Features**

- Wide Compatibility: Compatible with most 13"–34" screens weighing up to 44 lbs. Fits standard VESA mounting patterns 50x50 and 100x100mm.
- **360° Screen Rotation:** Allows for full 360-degree rotation of the screen, supporting both landscape and portrait orientations.
- Adjustable Tilt: Easily adjust the screen tilt from -15° to +10° using a convenient tilt knob.
- Swivel Functionality: Swivel the monitor +/-50° for flexible viewing angles.
- Ergonomic Height Settings: Offers multiple height positions for optimal ergonomic setup.

# **Setup Instructions**

Follow these steps for the proper assembly of your PGTVS29 Monitor TV Stand:

- 1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list provided in your physical manual.
- 2. **Assemble Base:** Attach the main column to the sturdy base plate using the provided screws.
- 3. Attach VESA Plate: Secure the VESA mounting plate to the top of the column.
- 4. **Install Monitor Brackets:** Attach the VESA brackets to the back of your monitor, ensuring they align with your monitor's VESA pattern (50x50mm or 100x100mm).
- 5. **Mount Monitor:** Carefully lift and hang your monitor onto the mounting plate. Secure it with the provided safety screws or locking mechanisms.



Image: A detailed front view of the Perlegear PGTVS29 Monitor TV Stand, showcasing its sleek design and robust construction. This image highlights the VESA mounting plate and the stable base.

# Operation

- Screen Rotation (360°): Gently rotate your monitor clockwise or counter-clockwise to switch between landscape and portrait orientations. Note that off-centered VESA patterns on some larger displays may affect vertical orientation.
- **Height Adjustment:** The stand offers multiple height positions. To adjust, carefully lift the monitor and reposition it to the desired slot on the column. Ensure it clicks securely into place.
- Tilt Adjustment (-15° to +10°): Locate the tilt knob on the mounting plate. Loosen the knob, adjust the screen to your preferred tilt angle, and then firmly re-tighten the knob to secure the position.
- Swivel Adjustment (±50°): Gently swivel the monitor left or right from its central axis to achieve your desired viewing angle.



Image: The Perlegear PGTVS29 Monitor Stand demonstrating its 360-degree screen rotation capability, allowing users to easily switch between landscape and portrait modes for their display.



Image: The Perlegear PGTVS29 Monitor Stand illustrating its ergonomic height adjustment settings, showing five distinct positions ranging from a minimum of 9.27 inches to a maximum of 15.26 inches for optimal viewing comfort.



Image: The Perlegear PGTVS29 Monitor Stand demonstrating its screen swivel freedom, allowing the display to pivot up to +/- 50 degrees horizontally for flexible viewing angles.



Image: The Perlegear PGTVS29 Monitor Stand showcasing its tilt adjustment range from -15 degrees to +10 degrees, controlled by an easy-to-use tilt knob for optimizing viewing angles and reducing glare.

# **Specifications (PGTVS29)**

Attribute	Value
Screen Size Compatibility	13" to 34"
Weight Capacity	Up to 44 lbs (20 kg)
VESA Compatibility	50x50mm, 100x100mm
Column Height	17.24"
Rotation	360°
Tilt Range	-15° to +10°
Swivel Range	+/-50°

# GENERAL MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV and monitor stands.

- Cleaning: Use a soft, dry cloth to wipe down the surfaces of the stands. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by drying thoroughly. Avoid abrasive cleaners or solvents.
- **Check Connections:** Periodically inspect all screws, bolts, and connections to ensure they remain tight and secure. Re-tighten any loose fasteners.
- Wheel Maintenance (PSTVMC04): Keep the wheels free of debris and dust. If movement becomes stiff, clean the wheel axles and consider applying a small amount of silicone-based lubricant.
- **Weight Limits:** Never exceed the specified weight capacities for either stand. Overloading can lead to instability and damage.

# **TROUBLESHOOTING**

This section addresses common issues you might encounter with your stands.

# **PSTVMC04 Rolling TV Stand**

- · Stand is Wobbly:
  - Ensure all assembly screws are fully tightened.
  - Verify that the TV's weight does not exceed the 55 lbs capacity.
  - Check that the TV is properly centered on the mounting plate.

# • Wheels Not Rolling Smoothly:

- Check for debris (hair, lint) wrapped around the wheel axles and remove them.
- Ensure the wheel locks are disengaged.

# • TV Not Level:

- Ensure the TV mounting brackets are evenly attached to the TV and the mounting plate.
- Adjust the leveling screws (if applicable) on the TV brackets.

# **PGTVS29 Monitor TV Stand**

# • Monitor is Wobbly:

- Ensure all assembly screws, especially those connecting the column to the base and the VESA plate to the column, are fully tightened.
- Verify that the monitor's weight does not exceed the 44 lbs capacity.
- Ensure the monitor is securely attached to the VESA plate.

# • Difficulty Adjusting Tilt/Swivel/Rotation:

- For tilt, ensure the tilt knob is sufficiently loosened before attempting adjustment, then re-tighten firmly.
- For swivel and rotation, ensure no cables are snagging or restricting movement.

#### • Monitor Not Level:

- Ensure the VESA brackets are evenly attached to the monitor.
- Check that the monitor is properly seated on the mounting plate.

# WARRANTY AND SUPPORT

PERLESMITH products are manufactured with quality and durability in mind. For specific warranty information, please refer to the documentation included with your purchase or visit the official PERLESMITH website.

If you encounter any issues not covered in this manual or require further assistance, please contact PERLESMITH customer support:

- Website: Visit the PERLESMITH Store on Amazon
- **Email:** Refer to your product packaging or the official website for the most current support email address.
- Phone: Refer to your product packaging or the official website for the most current support phone number.

When contacting support, please have your product model number (PSTVMC04 or PGTVS29) and purchase information ready.

# Related Documents - PSTVMC04, PGTVS29



#### Perlegear PGTVS29 Tabletop TV Stand Instruction Manual

This instruction manual provides comprehensive guidance for assembling and using the Perlegear PGTVS29 tabletop TV stand. It covers compatibility checks, parts identification, step-by-step installation for various TV back types, cable management, and adjustment procedures like swivel, tilt, and rotation.



#### PERLESMITH Mobile TV Cart PSTVMC04 Instruction Manual

Instruction manual for the PERLESMITH PSTVMC04 Mobile TV Cart, detailing assembly, safety information, and VESA compatibility.



#### PERLESMITH PSTVMC06 TV Cart Instruction Manual

Comprehensive instruction manual for the PERLESMITH PSTVMC06 TV Cart. This guide provides detailed steps for assembly, safety precautions, VESA compatibility checks, and adjustments for a rolling TV stand with an adjustable shelf.



# PERLESMITH PSTM1 TV Tripod Stand Installation Guide

Detailed installation instructions for the PERLESMITH PSTM1 TV Tripod Stand, a portable and height-adjustable floor stand for 23-55 inch LED, LCD, and OLED flat-screen TVs with VESA 400x400mm compatibility and an 88 lbs weight capacity.



# PERLESMITH PSTM2 TV Tripod Stand Instruction Manual

Instruction manual for the PERLESMITH PSTM2 TV Tripod Stand, detailing assembly, safety instructions, and adjustments for mounting TVs up to 75 inches.



# PERLESMITH PSTVS33 Tabletop TV Stand Instruction Manual

This instruction manual provides detailed steps for assembling and installing the PERLESMITH PSTVS33 Tabletop TV Stand. It covers compatibility checks for VESA patterns and weight limits, lists all included parts and hardware, and guides users through each installation step, including attaching brackets, assembling the base, mounting the TV plate, securing the TV, and managing cables. Safety warnings and contact information are also provided.