

## Whirlpool C WSD 74M WBS IT

# Whirlpool C WSD 74M WBS IT – 7 Kg Heat Pump Dryer Instruction Manual

Model: C WSD 74M WBS IT (859991700910)

## 1. INTRODUCTION

Thank you for choosing a Whirlpool appliance. This instruction manual provides essential information for the safe and efficient use of your new 7 Kg Heat Pump Dryer. Please read this manual thoroughly before using the appliance and keep it for future reference.

Your Whirlpool C WSD 74M WBS IT dryer features advanced technologies designed to optimize drying performance and energy efficiency:

- **6th Sense Technology:** Intelligent sensors detect humidity and dryness levels, automatically adjusting settings for optimal drying results.
- **SenseInverter Motor:** Ensures quiet operation, energy savings, and long-lasting performance.
- **AirFresh:** Refreshes dry clothes with warm air, softening fabrics and reducing wrinkles.
- **Time Drying:** Allows selection of drying programs between 10 and 160 minutes, with adjustable duration.
- **Extra Silence:** Minimizes noise levels for quiet drying of cotton or mixed synthetic garments.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Remove all objects from pockets such as lighters and matches.

- Ensure adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- The appliance must be correctly earthed.
- Do not install or store this appliance where it will be exposed to the weather.

### 3. PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your Whirlpool dryer.



Front view of the Whirlpool C WSD 74M WBS IT heat pump dryer, showing the control panel, large black door, and lower vent.



Angled view of the Whirlpool C WSD 74M WBS IT heat pump dryer, highlighting its compact design and side profile.



Detailed view of the Whirlpool C WSD 74M WBS IT dryer's control panel, displaying various drying programs and function buttons.



Lower front section of the dryer, showing the access panel for the filter and the ventilation grille.

## Key Components:

- **Control Panel:** Used to select programs and adjust settings.
- **Drum:** Where laundry is placed for drying.
- **Door:** Provides access to the drum.
- **Lint Filter:** Collects lint during drying; must be cleaned regularly.
- **Water Tank:** Collects condensed water; must be emptied after each cycle.
- **Condenser Filter:** Requires periodic cleaning to maintain efficiency.

## 4. SETUP AND INSTALLATION

## 4.1 Unpacking

- Remove all packaging materials from the dryer.
- Check for any transport damage. If damaged, do not install or operate the appliance. Contact customer service.
- Remove any protective films or tapes from the appliance.

## 4.2 Placement

- Place the dryer on a firm, level floor. Adjust the feet to ensure stability.
- Ensure there is adequate ventilation around the dryer. Do not block the air intake or exhaust vents.
- Maintain a minimum clearance of 10 cm around the appliance for proper air circulation.
- Do not install the dryer in rooms where the temperature may fall below 5°C, as this can affect performance.

## 4.3 Electrical Connection

- Connect the power cord to a properly earthed electrical outlet.
- Ensure the voltage and frequency match the specifications on the rating plate of the appliance.
- Do not use extension cords or multiple socket adapters.

## 4.4 Initial Use

- Before the first use, wipe the inside of the drum with a damp cloth to remove any dust from manufacturing.
- Run a short cycle with a damp cloth to ensure proper operation and remove any residual odors.

# 5. OPERATING INSTRUCTIONS

---

## 5.1 Loading Laundry

- Sort laundry by fabric type and desired drying level.
- Do not overload the dryer. The maximum capacity is 7 kg.
- Ensure all items are thoroughly spun in a washing machine to remove excess water.
- Close zippers, hooks, and fastenings to prevent damage to garments and the drum.

## 5.2 Selecting a Program

Turn the program selector knob on the control panel to choose the desired drying program. The display will show the estimated drying time.



Close-up of the control panel, showing program selector and digital display.

## Available Programs:

- **AirFresh:** For refreshing dry clothes.
- **Baby:** Gentle drying for baby clothes.
- **Rapid 30':** Quick drying cycle.
- **Shirts:** Specific program for shirts.
- **Duvet:** For drying duvets and large items.
- **Outdoor/Sport:** For sportswear and outdoor garments.
- **Jeans:** Dedicated program for denim.
- **Time Drying:** Manual time selection (10-160 minutes).
- **Delicates:** For delicate fabrics.
- **Wool:** Gentle drying for wool items.
- **Mixed:** For mixed fabric loads.
- **Synthetics:** For synthetic garments.
- **Cotton Eco:** Energy-efficient cotton drying.
- **Cotton:** Standard cotton drying.

## 5.3 Adjusting Settings

After selecting a program, you can modify certain options using the buttons on the control panel:

- **Drying Level:** Adjust the desired dryness (e.g., Iron Dry, Hanger Dry, Cupboard Dry, Extra Dry).
- **Temperature:** Select a lower temperature for delicate items.
- **Extra Silence:** Activates a quieter drying mode.
- **Anti-Crease:** Reduces creasing by periodically tumbling clothes after the cycle ends.

## 5.4 Starting and Ending a Cycle

- Press the Start/Pause button to begin the drying cycle.
- To pause a cycle, press the Start/Pause button again. Press it once more to resume.
- At the end of the cycle, an audible signal may sound, and the display will indicate completion.
- Remove laundry promptly to minimize creasing.

# 6. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

## 6.1 Cleaning the Lint Filter

- The lint filter is located inside the door opening.
- Clean the lint filter after every drying cycle.
- Pull the filter upwards to remove it. Open the filter and remove all lint by hand or with a soft brush.
- Rinse the filter under running water if necessary, and ensure it is completely dry before reinserting.

## 6.2 Emptying the Water Tank

- The water tank collects condensed water during the drying process.
- Empty the water tank after each drying cycle. It is usually located at the top left of the control panel.
- Pull out the tank, empty the water, and push it back into place until it clicks.

## 6.3 Cleaning the Condenser Filter

- The condenser filter is located behind the lower access panel at the front of the dryer.
- Clean the condenser filter periodically, approximately every 5-10 cycles, or when indicated by the appliance.
- Open the access panel, unlatch and remove the condenser filter.
- Rinse the filter under running water to remove lint and debris. Ensure it is completely dry before reinserting.

## 6.4 Cleaning the Exterior

- Wipe the exterior surfaces of the dryer with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

## 7. TROUBLESHOOTING

---

If you encounter issues with your dryer, refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Dryer does not start	No power supply; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power plug and fuse; Ensure door is firmly closed; Select a program; Press Start/Pause button.
Clothes not drying properly	Lint filter clogged; Water tank full; Condenser filter clogged; Overloaded dryer; Incorrect program selected.	Clean lint filter; Empty water tank; Clean condenser filter; Reduce load size; Select appropriate program.
Dryer is noisy	Foreign objects in drum; Dryer not level; Loose components.	Check drum for foreign objects; Adjust dryer feet to level; Contact service if noise persists.
Water leaking	Water tank not properly inserted; Water tank full.	Ensure water tank is correctly seated; Empty water tank.
Display shows an error code	Specific internal fault.	Refer to the full user manual for specific error code meanings or contact customer service.

## 8. SPECIFICATIONS

---

Feature	Specification
Brand	Whirlpool
Model Number	859991700910
Product Dimensions (HxWxD)	84.6 x 59.7 x 54.5 cm (approximate, based on package dimensions)
Package Dimensions	88.5 x 65 x 55 cm
Weight	43.5 kg
Capacity	7 Kilograms

Feature	Specification
Energy Efficiency Rating	C
Color	White
Form Factor	Front Load
Access Location	Front Load
Country of Origin	Turkey
Included Components	Power cable

## 9. WARRANTY AND SUPPORT

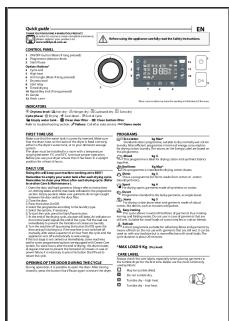
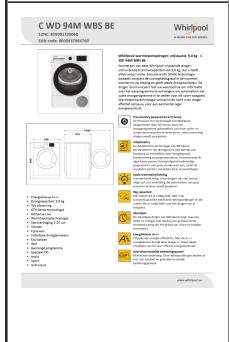
Your Whirlpool dryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions.

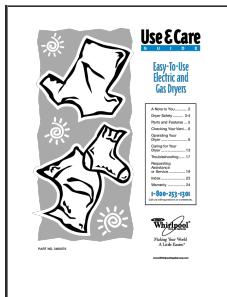
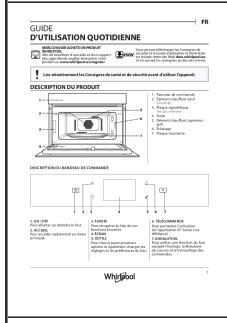
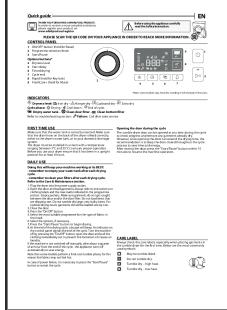
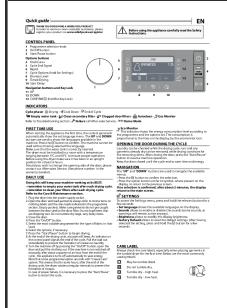
For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool Customer Service. You can find contact details on the official Whirlpool website or in the documentation provided with your appliance.

Amazon also offers specialized customer support for purchases made through their platform. For returns within 14 days of receipt, please consult Amazon's return policy page.

© 2025 Whirlpool Corporation. All rights reserved. This manual is for informational purposes only.

### Related Documents - C WSD 74M WBS IT

	<p><b><a href="#">Whirlpool WHP80250 Heat Pump Clothes Dryer Quick Guide</a></b>  A quick guide for the Whirlpool WHP80250 heat pump clothes dryer, covering control panel features, programs, daily use, troubleshooting, and maintenance.</p>
	<p><b><a href="#">Whirlpool C WD 94M WBS BE Warmtepompdroger: 9kg Capaciteit, Energieklasse A+++   Productinformatie</a></b>  Ontdek de Whirlpool C WD 94M WBS BE warmtepompdroger met een ruime capaciteit van 9 kg, energieklasse A+++, en geavanceerde technologieën zoals 6th Sense en PrecisionDry voor optimale droogresultaten en energie-efficiëntie.</p>

	<p><a href="#"><b>Whirlpool Easy-To-Use Electric and Gas Dryers Use &amp; Care Guide</b></a></p> <p>Comprehensive Use &amp; Care Guide for Whirlpool electric and gas dryers, covering safety, operation, maintenance, troubleshooting, and warranty information. Learn how to use your dryer efficiently and safely.</p>
	<p><a href="#"><b>Guide d'Utilisation Quotidienne Whirlpool</b></a></p> <p>Guide complet d'utilisation quotidienne pour le four à micro-ondes Whirlpool, couvrant la description du produit, le panneau de commande, les accessoires, les fonctions de cuisson, les fonctionnalités 6th Sense, l'utilisation de l'écran tactile, la configuration, le dépannage et le nettoyage.</p>
	<p><a href="#"><b>Whirlpool Tumble Dryer Quick Guide</b></a></p> <p>A quick guide to operating, maintaining, and troubleshooting your Whirlpool tumble dryer, covering essential functions and care instructions.</p>
	<p><a href="#"><b>Whirlpool Tumble Dryer Quick Guide - Model W7 D94WB EE</b></a></p> <p>Comprehensive quick guide for operating, maintaining, and troubleshooting your Whirlpool W7 D94WB EE tumble dryer. Learn about programs, options, care, and common issues.</p>