

## Philips S1882/00

# Philips Shaver 1000 Series S1882/00 User Manual

Model: S1882/00

## 1. IMPORTANT SAFETY INFORMATION

Read this user manual carefully before using the appliance and save it for future reference. Always follow basic safety precautions when using electrical appliances.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance if it is damaged. Always check the appliance before use.
- Do not immerse the charging cable or adapter in water.
- Only use the original USB-A charging cable provided with the shaver. A power adapter is not included and must be purchased separately.
- The shaver is suitable for cleaning under running tap water and for use in the shower. For hygiene reasons, do not share the shaver with other persons.

## 2. PRODUCT OVERVIEW

The Philips Shaver 1000 Series S1882/00 is designed for an efficient and comfortable shaving experience. It features advanced technology for both wet and dry use.

### Key Features:

- **PowerCut Technology:** Equipped with 27 self-sharpening blades, delivering 3,500,000 cutting motions per minute for precise and efficient shaving.
- **3D Floating Heads:** The advanced head design moves freely in three directions, adapting to your facial contours for a closer and more comfortable shave.
- **Versatile Wet/Dry Use:** Fully waterproof design allows for convenient shaving with gel, foam, or dry, even while showering.

- **Quick Charging:** A 1-hour charge provides 35 minutes of cordless runtime, ideal for daily use and travel.
- **Easy Maintenance:** Features a one-touch open system for simple and quick cleaning under running water.



Image: The shaver's PowerCut blades, featuring 27 self-sharpening elements for efficient cutting.



Image: The 3D floating heads of the shaver, designed to adapt to facial contours.

### Included Components:

- Philips Shaver 1000 Series unit
- Protective cap
- USB-A charging cable (power adapter not included)



## Protective cap

Keeps the head safe and clean while traveling

Image: The shaver with its protective cap, useful for keeping the head safe and clean during travel.

### 3. SETUP

#### Charging the Shaver:

1. Ensure the shaver is switched off.
2. Insert the small plug of the USB-A charging cable into the shaver's charging socket.
3. Plug the USB-A connector into a compatible USB power adapter (not included) or a powered USB port.
4. The battery indicator light on the shaver will illuminate, indicating that it is charging. A full charge takes approximately 1 hour and provides up to 35 minutes of cordless shaving time.
5. Unplug the shaver once fully charged or when the indicator shows a full battery.





## IPX7-level waterproof

Washable **under running water** or use  
in the **shower**

Image: Close-up of the shaver's battery indicator light, showing charging status.



## Battery indicator

Stay powered and know when to charge at a glance



Image: A hand holding the shaver and the USB-A charging cable, demonstrating the charging connection.

## 4. OPERATING THE SHAVER

### General Shaving Tips:

- For best results, ensure your skin is clean before shaving.
- Move the shaver in small, circular motions over your skin.
- Apply gentle pressure. Do not press too hard, as this can cause irritation.
- Stretch your skin with your free hand to make hairs stand upright, especially in difficult areas.

### Dry Shaving:

For a quick and convenient shave, use the shaver on dry skin. Ensure your skin is completely dry before starting.

### Wet Shaving (with foam or gel):

For a more comfortable and refreshing shave, you can use the shaver with shaving foam or gel. This is particularly recommended for sensitive skin.

1. Wet your face with warm water.
2. Apply a small amount of shaving foam or gel to your face.
3. Shave as usual, moving the shaver in circular motions.
4. Rinse the shaver head under running water during and after shaving to prevent clogging.



Image: A man demonstrating both dry shaving and wet shaving with the Philips Shaver.




---

## 5. MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your shaver.

### Cleaning After Each Use:

1. Switch off the shaver.
2. Press the release button to open the shaver head unit (one-touch open system).
3. Rinse the shaver head thoroughly under warm running tap water until all hair clippings are removed.
4. Shake off excess water and allow the shaver head to air dry before closing it.
5. Close the shaver head unit securely.



**Shave dry or wet, even under the shower**

**Easy cleaning with one-touch open**

**Ready when you need it**  
1-hour charge,  
35 minutes runtime

Image: The shaver head being rinsed under running water, demonstrating the easy cleaning process.

### Replacing Shaving Heads:

For optimal shaving performance, it is recommended to replace the shaving heads approximately every 12 months. Replacement heads can be purchased from authorized Philips retailers or the Philips website.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is empty.	Charge the shaver for at least 1 hour.
Shaver does not charge.	Charging cable or adapter is faulty.	Ensure the USB-A cable is properly connected. Try a different USB power adapter.
Poor shaving performance.	Shaver heads are dirty or worn out.	Clean the shaver heads thoroughly. If performance does not improve, replace the shaving heads.
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure you are using gentle, circular motions. Consider wet shaving with foam/gel. Allow skin to adapt.

## 7. SPECIFICATIONS

Feature	Detail
Model Name	S1882/00

Feature	Detail
Brand	Philips
Shaving System	PowerCut Blades, 27 Cutting Elements
Head Type	3D Floating Heads
Operation	Wet/Dry (Shower Shaving, Dry Shaving, Facial Hair Trimming)
Power Source	Cordless, Rechargeable Battery
Battery Type	Lithium-ion (estimated)
Charging Time	1 hour for full charge
Runtime	35 minutes
Included Components	Electric Shaver, Protective Cap, USB-A Charging Cable
Item Weight	200 Grams
Blade Material	Stainless Steel
Waterproof Level	IPX7 (Washable under running water, suitable for shower use)

## 8. WARRANTY AND SUPPORT

Philips offers a manufacturer's warranty for this product. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims.

### For Support:

- Visit the official Philips website for your region for product registration, FAQs, and support contact information.
- Refer to the warranty card included in your product packaging for detailed warranty terms.