



Manuals.plus /

› REAHOME /

› REAHOME TV Stand with Mount User Manual

REAHOME HD049CF

REAHOME TV Stand with Mount User Manual

Model: HD049CF

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your REAHOME TV Stand with Mount. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

The REAHOME TV Stand with Mount is a versatile entertainment center designed to accommodate TVs from 32 to 75 inches. It features a height-adjustable TV mount, ample storage with 7 drawers and open shelves, and a durable carbon fiber black finish.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Follow the assembly instructions carefully. Incorrect assembly can lead to instability and potential injury.
- Do not exceed the maximum weight capacity for the TV mount (110 lbs), wood top (150 lbs), or drawers (20 lbs each).
- Place the TV stand on a level and stable surface to prevent tipping.
- Keep small parts away from children during assembly.
- If mounting the TV to the wall, ensure proper wall anchors are used for your wall type and consult a professional if unsure.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present. Refer to the included hardware pack for specific part identifiers.

- TV Stand Frame Components
- 7 Fabric Drawers
- Adjustable TV Mount Assembly

- Hardware Pack (screws, bolts, nuts, adjustable feet, tools)
- Instruction Manual

SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended to have two people for assembly. Please follow the step-by-step instructions provided in the separate assembly guide included with your product. The general steps involve:

1. **Unpacking:** Carefully remove all components from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Frame Assembly:** Assemble the main frame of the TV stand using the provided hardware.
3. **Shelf Installation:** Attach the top and internal shelves to the frame.
4. **Drawer Installation:** Insert the fabric drawers into their designated compartments.
5. **TV Mount Assembly:** Assemble the adjustable TV mount and attach it to the rear of the TV stand frame.
6. **Adjustable Feet:** Install the adjustable feet at the base of the stand.

An assembly video is available to assist with the process. Refer to the QR code or link provided in the physical assembly guide for access.



Image: Overall dimensions of the TV stand, including height, width, and depth, with specific measurements for shelves and drawers.

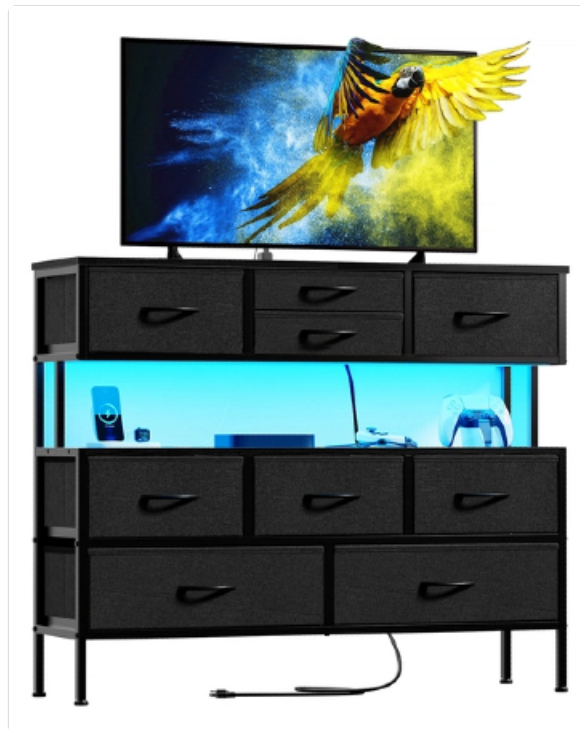


Image: Close-up diagrams demonstrating the adjustable height and width features of the TV mount, and the 360-degree rotation of the adjustable feet for leveling.

OPERATING INSTRUCTIONS

Attaching Your TV

The adjustable TV mount is designed for televisions between 32 and 75 inches, with a maximum load capacity of 110 lbs. Ensure your TV's VESA mounting pattern is compatible with the provided mount.

1. Attach the TV brackets to the back of your television using the appropriate screws and spacers from the hardware kit.
2. Carefully lift the TV and hook the attached brackets onto the vertical bars of the TV stand mount.
3. Secure the TV to the mount using the safety screws or clips as indicated in the assembly guide.

Adjusting the TV Mount

The TV mount allows for height and width adjustments to achieve your preferred viewing angle and accommodate various TV sizes.

- **Height Adjustment:** Loosen the securing bolts on the vertical bars of the mount, slide the TV up or down to the desired height (between 33-38 inches from tabletop to bottom of TV), and re-tighten the bolts securely.
- **Width Adjustment:** The horizontal arms of the mount can be adjusted to fit different TV widths. Loosen the relevant screws, slide the arms to align with your TV's mounting points, and re-tighten.

Utilizing Storage

The TV stand features 7 fabric drawers and open shelves for organizing media devices, accessories, and other items.

- Place heavier items on the bottom shelves or within the drawers to maintain stability.
- The wood top has a loading capacity of 150 lbs, and each drawer can hold up to 20 lbs.
- Use the open shelves for media consoles, soundbars, or decorative items.



Image: A REAHOME TV stand with a large television mounted on its adjustable stand, showcasing the integrated mount feature.



Image: A REAHOME TV stand with a television mounted directly to the wall above it, demonstrating an alternative setup option.



Image: The REAHOME TV stand with several drawers pulled open, revealing organized storage for books, remotes, and other small

MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust the stand and shelves to prevent buildup.
- **Hardware Check:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary.
- **Drawer Care:** The fabric drawers can be spot cleaned with a mild detergent and water. Allow to air dry completely.
- **Avoid Overloading:** Do not place items heavier than the specified weight limits on the shelves or in the drawers.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly/unstable	Uneven floor; loose hardware	Adjust the leveling feet at the bottom of the stand. Ensure all assembly screws are tightened securely.
TV mount does not hold TV securely	Incorrect TV size/weight; loose mounting bolts; incorrect VESA pattern	Verify TV size (32-75 inches) and weight (max 110 lbs). Ensure all TV mount bolts are tightened. Confirm VESA pattern compatibility.
Drawers do not slide smoothly	Overloaded drawer; obstruction; incorrect assembly	Reduce weight in the drawer (max 20 lbs). Check for any items obstructing the drawer's movement. Re-check drawer assembly.
Missing parts	Packaging error	Contact REAHOME customer support with your model number and a list of missing parts.

SPECIFICATIONS

- **Model:** HD049CF
- **Brand:** REAHOME
- **Color:** Black Carbon Fiber
- **Product Dimensions:** 12"D x 63"W x 38"H
- **Item Weight:** 48.4 pounds
- **Recommended TV Size:** 32-75 inches
- **TV Mount Load Capacity:** 110 lbs
- **Wood Top Load Capacity:** 150 lbs
- **Drawer Load Capacity:** 20 lbs per drawer
- **Mounting Type:** Floor Mount (with optional wall mounting for TV)
- **Special Feature:** Adjustable Feet, Adjustable TV Mount (Height & Width)
- **Assembly Required:** Yes
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official REAHOME website. If you encounter any issues or have questions regarding your REAHOME TV Stand with Mount, please contact REAHOME customer support.

Customer Support: Refer to your purchase receipt or the REAHOME brand store for contact details.

Online Resources: For additional support, assembly videos, and FAQs, visit the REAHOME Store on Amazon.