

[Manuals.plus](#) /

> [HOMCOM](#) /

> HOMCOM Swivel Rocker Recliner Chair (Model 700-175V80BK) User Manual

HOMCOM 700-175V80BK

HOMCOM Swivel Rocker Recliner Chair User Manual

Model: 700-175V80BK

1. IMPORTANT SAFETY INFORMATION

- **Maximum Weight Capacity:** Do not exceed the maximum weight capacity of 298 lbs (135 kg). Exceeding this limit may cause damage to the chair and potential injury.
- Ensure all components are securely assembled before use. Regularly check all fasteners to ensure they remain tight.
- Keep children and pets away from the chair's moving parts, especially during reclining or rocking operations.
- Avoid placing the chair near heat sources or in direct sunlight to prevent material degradation.
- Do not stand on the chair or use it as a step stool.
- Disconnect the power cord from the wall outlet before cleaning or performing any maintenance.

2. PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the included parts list in your physical manual for detailed identification.



Image: The product is delivered in one package.

3. SETUP AND ASSEMBLY

Assembly typically requires two people. Follow the steps below carefully. An assembly video is provided for visual guidance.

Your browser does not support the video tag.

Video: This video demonstrates the assembly process for the HOMCOM Massage Recliner Chair, including attaching the armrests and securing components.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Attach Armrests:** Locate the attachment points on the chair base and the armrests. Align the metal brackets on the armrests with the corresponding slots on the chair base. Secure them using the provided screws and Allen wrench. Ensure the zippers on the armrests are open to access the attachment points.
3. **Connect Backrest:** Slide the backrest onto the base, ensuring the metal guides align and lock into place. You may need to apply gentle pressure.
4. **Connect Power:** Locate the power cables for the massage and heating functions. Connect them securely.
5. **Final Checks:** Once assembled, ensure all connections are tight and the chair is stable before use. Close any open zippers on the armrests.

4. OPERATING INSTRUCTIONS

4.1 Reclining Function

To recline the chair, pull the side tab located on the right side of the chair. Lean back gently to extend the footrest and recline the backrest up to 150 degrees. To return to the upright position, push down on the footrest with your legs and lean forward.

VIBRATION MASSAGE AND HEATING

✓ 8 Points

✓ 5 Modes

✓ Heating Function



Image: Manual recline up to 150 degrees with footrest extension.

4.2 Swivel and Rocking Functions

The chair features a 360-degree swivel base, allowing you to rotate smoothly in any direction. It also provides a gentle rocking motion for added comfort.

MANUAL RECLINER



Image: The chair features a 360-degree swivel base and rocking capability.

4.3 Vibration Massage and Heat Functions

Use the wired remote control to operate the massage and heating features. The chair includes eight vibrating massage nodes targeting the back, lumbar, thighs, and legs, with five selectable massage modes. The lumbar area also features a heating function.



Image: The chair offers 8-point vibration massage with 5 modes and a lumbar heating function, controlled by a remote.

4.4 Storage Solutions

The chair is equipped with two convenient side storage pockets for remotes, magazines, or other small items, and dual built-in cup holders to keep beverages within easy reach.

5. MAINTENANCE

- **Cleaning:** The PU leather upholstery can be wiped clean with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the material.
- **Regular Inspection:** Periodically check all screws and connections to ensure they are tight. Tighten any loose fasteners to maintain stability and safety.
- **Spill Management:** In case of spills, blot immediately with a clean, dry cloth. Do not rub.

6. TROUBLESHOOTING

- **Leg Rest Not Fully Extending:** Ensure there are no obstructions beneath the footrest. Check that the

reclining mechanism is free of debris. If the issue persists, inspect the internal mechanism (accessible via zippers on the armrests) for any dislodged parts or loose connections.

- **Chair Not Level:** Verify that the chair is placed on a flat, even surface. If the issue continues, check the base and frame for any signs of damage or uneven assembly.
- **Massage/Heat Not Working:** Ensure the power cord is securely plugged into a functional wall outlet. Check all cable connections between the chair and the remote control. Replace remote batteries if applicable (though this model uses a wired remote, check for any internal battery compartments if issues arise).
- **Difficulty Reclining:** Ensure the side tab is fully pulled. The reclining mechanism requires some body weight to engage. If it feels stiff, check for obstructions in the mechanism.

7. SPECIFICATIONS



Image: Detailed dimensions of the chair in upright and reclined states.

Feature	Detail
---------	--------

Feature	Detail
Model Number	700-175V80BK
Color	Black
Material	Faux Leather, Foam, Alloy Steel Frame
Upright Dimensions (W x D x H)	33.5" x 39" x 40.6" (85cm x 99cm x 103cm)
Reclined Dimensions (W x D x H)	33.5" x 63.8" x 32.3" (85cm x 162cm x 82cm)
Seat Height	19.3" (49cm)
Seat Depth	20.5" (52cm)
Weight Capacity	298 lbs (135 kg)
Features	Vibration Massage (8 points, 5 modes), Lumbar Heating, 360° Swivel, Rocking, Manual Recline (up to 150°), Dual Cup Holders, Side Pockets
Assembly Required	Yes

8. WARRANTY AND SUPPORT

For warranty information, returns, or customer support, please contact Aosom Direct, the seller of this product. They offer a 30-day easy return policy and dedicated customer support.

Please retain your purchase receipt for any warranty claims or support inquiries.