

SIGBOT HB-991

SIGBOT Portable Electric Coffee Grinder HB-991 User Manual

Model: HB-991

1. INTRODUCTION

The SIGBOT Portable Electric Coffee Grinder HB-991 is designed for coffee enthusiasts who desire freshly ground coffee anywhere. Featuring 38 precise grind settings and a durable conical burr, this rechargeable mill is suitable for various brewing methods, including espresso, Moka pot, Turkish coffee, and more. Its compact design makes it ideal for travel, camping, or office use.



Image: The SIGBOT Portable Electric Coffee Grinder, showcasing its sleek design and portability.

2. SETUP

2.1 Charging the Grinder

Before first use, ensure the grinder is fully charged. Connect the provided Type-C cable to the charging port on the top of the grinder and to a compatible power source (power bank, car charger, or wall adapter). The indicator light will show charging status. A full charge provides approximately 40 grinding sessions.

Get The Fragrant Camp Coffee In Your Adventure



AC direct charging



Car charger charging



Power bank charging



Do not use while charging.



Type-C charging

USB

Image: The grinder connected via its Type-C charging port, illustrating charging flexibility.

2.2 Loading Coffee Beans

1. Remove the top cover of the grinder.
2. Pour your desired amount of whole coffee beans into the bean hopper. Do not overfill.
3. Replace the top cover securely.

2.3 Adjusting Grind Settings

The grinder features 38 external grind settings, allowing for precise control over your coffee grounds. To adjust, rotate the dial located on the lower part of the grinder body. The settings range from 'FINE' (1-5) for espresso to 'COARSE' (28-38) for French press. Setting 5 is recommended for optimal performance for espresso.



Image: Visual guide to the 38 grind settings and their recommended uses for various coffee types.

3. OPERATION

The SIGBOT coffee grinder offers simple one-touch operation:

1. **Start Grinding:** Double-click the power button on the top of the grinder to begin grinding. The grinder will automatically stop once the beans are fully ground.
2. **Pause Grinding:** Single-click the power button to pause the grinding process. Click again to resume.

A 15g dose of coffee beans typically grinds in about 30 seconds.

Smart & Simple Operation Design

Freshly ground coffee anywhere

- ✓ Double-click Start
- ✓ Automatically Stop
- ✓ Single-click Pause



Image: Demonstrating the smart and simple operation design with double-click start and single-click pause.

3.1 Visual Guide to Grinding Process

Your browser does not support the video tag.

Video: This video demonstrates the SIGBOT Portable Electric Coffee Grinder in action, showing the process of loading beans, adjusting grind settings, and the grinding operation.

4. MAINTENANCE

4.1 Cleaning Instructions

The grinder features fully detachable components for easy cleaning. Regular cleaning ensures optimal performance and extends the life of your grinder.

- Unscrew the grinding cup from the main motor unit.

- Use the provided cleaning brush to remove any residual coffee grounds from the burr and grinding chamber.
- The grinding cup can be rinsed with water. Ensure it is completely dry before reassembling.
- **Important:** The motor unit should **not** be exposed to water. Wipe it clean with a dry cloth only.



Image: The grinder disassembled into its main components, highlighting the ease of cleaning.

5. TROUBLESHOOTING

- **Grinder not starting:** Ensure the grinder is charged. Double-click the power button to start. Check if the grinding cup and top cover are securely attached.
- **Inconsistent grind:** Verify that the grind setting is appropriate for your desired coffee type. Ensure the burr is clean and free of obstructions.
- **Grinder stops unexpectedly:** The grinder has an automatic stop feature when grinding is complete. If it stops prematurely, check for low battery or if the bean hopper is empty.

6. SPECIFICATIONS

Feature	Detail
Brand	SIGBOT
Model Number	HB-991
Color	Black
Material	Stainless Steel
Product Dimensions	2.8"L x 2.8"W x 8"H
Item Weight	1.57 pounds (0.71 Kilograms)
Voltage	7.4 Volts
Batteries	2 Lithium Ion batteries required (included)
Grind Settings	38 (External Adjustment)

Feature	Detail
Burr Type	Conical Burr (420 Stainless Steel)
Charging	Type-C USB (cable included)

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact SIGBOT customer service directly. Specific warranty terms may vary.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question