

[Manuals.plus](#) /

> [jumper](#) /

> Jumper 17.6 Inch Laptop EZbook P1 User Manual

jumper EZbook P1

Jumper 17.6 Inch Laptop EZbook P1 User Manual

Model: EZbook P1

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Jumper 17.6 Inch Laptop EZbook P1. Please read this guide thoroughly to ensure proper usage and to maximize the lifespan of your device. Keep this manual for future reference.



Image: The Jumper EZbook P1 laptop, showcasing its sleek design and large display.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Jumper 17.6 Inch Laptop EZbook P1
- Power Adapter
- User Manual (this document)

- Warranty Card

3. PRODUCT OVERVIEW (HARDWARE FEATURES)

Familiarize yourself with the physical components and ports of your laptop.

3.1 Display and Keyboard

The laptop features a 17.6-inch Full HD (1920x1200) IPS display with a 16:10 aspect ratio, offering clear visuals and vibrant colors. The keyboard is backlit for comfortable typing in various lighting conditions and includes a numeric keypad for enhanced productivity.



Image: The Jumper EZbook P1 laptop screen displaying a high-resolution image, highlighting its 17.6-inch IPS Full HD display.



Image: Close-up of the Jumper EZbook P1's backlit keyboard, showing illuminated keys and a large touchpad.

3.2 Ports and Connectivity

The laptop is equipped with various ports for comprehensive connectivity:

- **1x Type-C Port:** For data transfer and potentially charging (check power adapter specifications).
- **1x HDMI Port:** For connecting to external displays.

- **1x 3.5mm Headphone Jack:** For audio output.
- **3x USB 3.0 Ports:** For connecting USB devices.
- **1x Micro TF Slot:** For expandable storage.
- **1x DC Fast-Charging Port:** For connecting the power adapter.

Wireless connectivity includes dual-band Wi-Fi 6 (2.4G/5G) and Bluetooth 5.2.



Image: Diagram illustrating the various high-speed interfaces and ports available on the Jumper EZbook P1 laptop, including USB 3.0, HDMI, Type-C, 3.5mm audio jack, and TF card slot.

4. SETUP

4.1 Initial Power On and Charging

1. Connect the power adapter to the DC fast-charging port on the laptop and plug it into a power outlet.
2. Press the power button to turn on the laptop.
3. Allow the battery to charge fully before initial use, or continue with setup while charging.

4.2 Windows 11 Setup

Follow the on-screen instructions to complete the Windows 11 initial setup. This typically involves:

- Selecting your region and keyboard layout.
- Connecting to a Wi-Fi network.
- Signing in with a Microsoft account or creating a local account.
- Setting up privacy settings.

4.3 Office 365 Activation

Your laptop includes a 12-month subscription to Office 365. Follow the prompts upon first launching an Office application (e.g., Word, Excel) to activate your subscription. An internet connection and a Microsoft account are required for activation.

Unparalleled performance

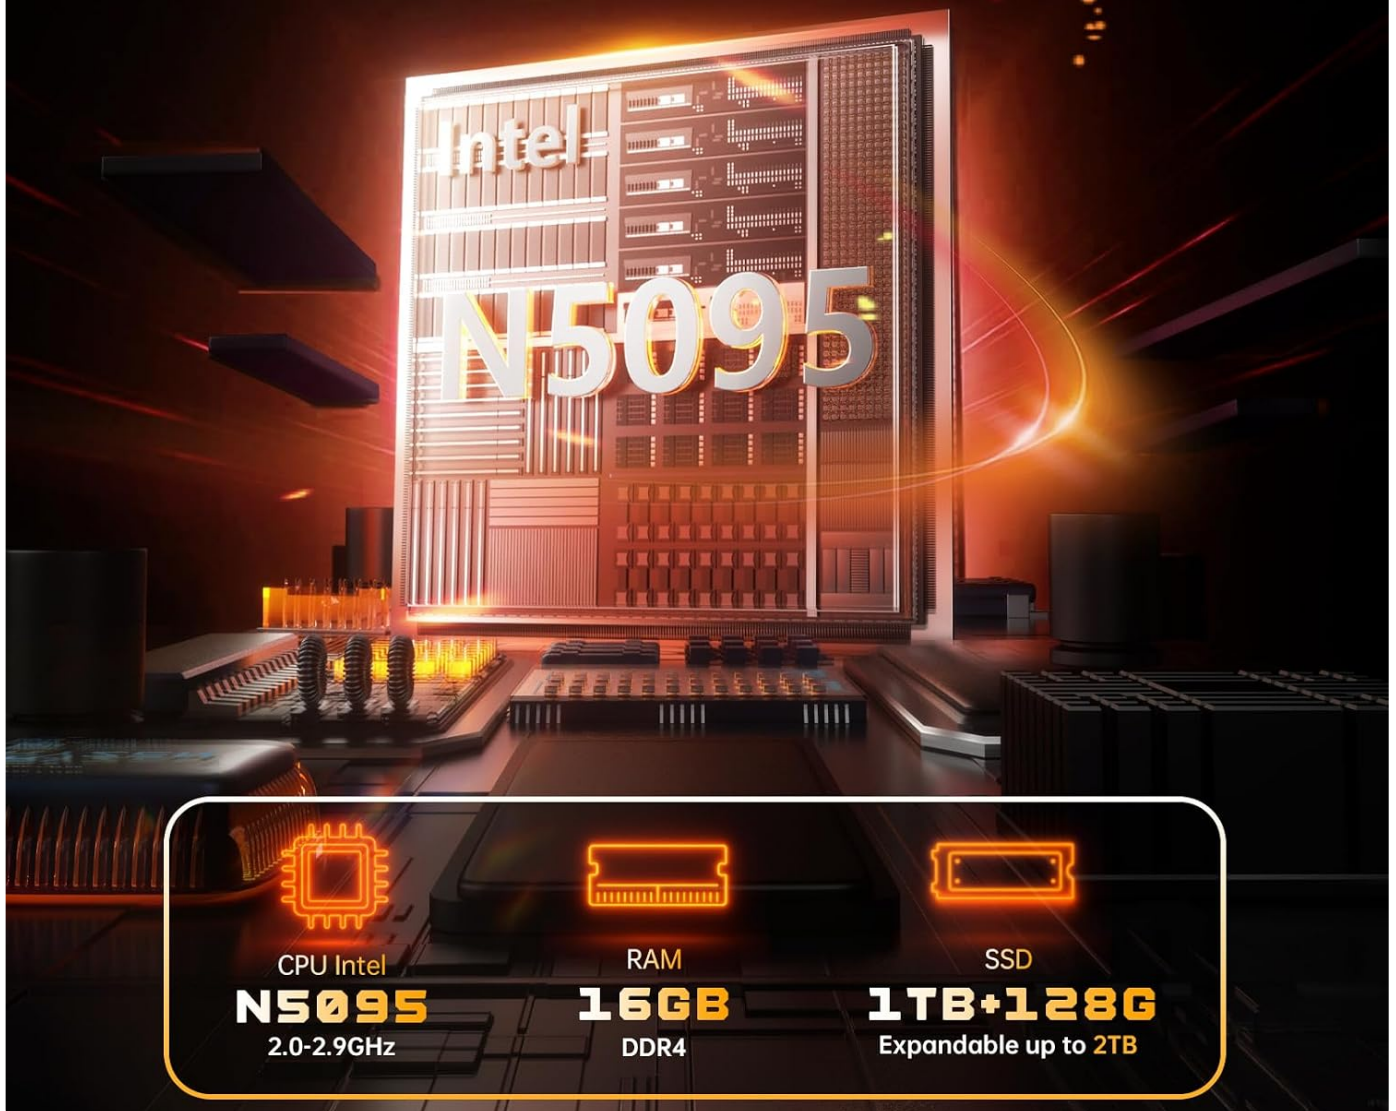


Image: The Jumper EZbook P1 laptop displaying the Office 365 logo and icons for Word, Excel, PowerPoint, and Outlook, indicating the included software subscription.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Sleep Mode

- **Power On:** Press the power button located on the keyboard.
- **Shut Down:** Click the Start button, then Power > Shut down.
- **Sleep Mode:** Close the laptop lid or click the Start button, then Power > Sleep.

5.2 Keyboard and Touchpad

- **Backlit Keyboard:** Use the dedicated function key (often Fn + Fx) to adjust or toggle the keyboard backlight.
- **Touchpad:** Supports multi-touch gestures for navigation. Refer to Windows settings for customization.

5.3 Connecting Peripherals

- **USB Devices:** Insert USB drives, mice, or other peripherals into the USB 3.0 ports.
- **External Display:** Connect an HDMI cable from the laptop's HDMI port to an external monitor or TV.
- **Bluetooth Devices:** Enable Bluetooth in Windows settings and pair with compatible devices like headphones or speakers.

5.4 Storage Management

The laptop comes with 1TB SSD and 128GB eMMC storage. You can expand storage further using the Micro TF slot.



Image: The Jumper EZbook P1 laptop displaying a video editing interface, illustrating its capability for smoother experience with 16GB RAM and 1TB SSD + 128GB eMMC storage.

5.5 Battery Management

The 7000mAh (38Wh) battery provides up to eight hours of usage. For optimal battery life:

- Charge the laptop when the battery level is low.
- Avoid completely draining the battery frequently.
- Adjust screen brightness and close unused applications to conserve power.



Image: An internal view of the Jumper EZbook P1 laptop highlighting its 7000mAh battery capacity.

6. MAINTENANCE

6.1 Cleaning the Laptop

- Use a soft, lint-free cloth to clean the screen and exterior.
- Avoid harsh chemicals or abrasive materials.
- Ensure the laptop is powered off and unplugged before cleaning.

6.2 Software Updates

Regularly check for and install Windows updates to ensure system stability and security. Go to Settings > Windows Update.

6.3 Thermal Management

The laptop features built-in fan technology for optimal thermal management. Ensure proper airflow around the laptop and avoid blocking vents to prevent overheating.



Image: An internal diagram of the Jumper EZbook P1 laptop showing its fan and heat dissipation system for efficient cooling.

7. TROUBLESHOOTING

If you encounter issues with your laptop, refer to the following common solutions:

Problem	Possible Solution
Laptop won't turn on	Ensure the power adapter is securely connected and the battery is charged. Try holding the power button for 10-15 seconds for a hard reset.
Wi-Fi not connecting	Check if Wi-Fi is enabled in Windows settings. Restart your router and the laptop. Verify Wi-Fi password.
Slow performance	Close unnecessary applications. Check for background processes. Ensure sufficient free storage space. Run a disk cleanup.
Keyboard backlight not working	Press the dedicated function key (e.g., Fn + Fx) to toggle or adjust the backlight.

Problem	Possible Solution
External display not detected	Ensure the HDMI cable is securely connected. Check display settings in Windows (Windows key + P).

For more complex issues, please contact customer support.

8. SPECIFICATIONS

Key technical specifications for the Jumper EZbook P1 laptop:

Feature	Specification
Model Name	EZbook P1
Screen Size	17.6 Inches
Resolution	1920x1200 (FHD)
CPU Model	Intel N95 (4 cores, 4 threads)
RAM	16 GB DDR5
Storage	1TB SSD + 128GB eMMC
Operating System	Windows 11
Battery Capacity	7000mAh (38Wh)
Connectivity	Wi-Fi 6, Bluetooth 5.2
Ports	1x Type-C, 1x HDMI, 1x 3.5mm Headphone Jack, 3x USB 3.0, 1x Micro TF slot, 1x DC Fast-Charging
Keyboard	Backlit, with Numeric Keypad
Webcam	Yes

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Jumper EZbook P1 laptop comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and hardware malfunctions under normal use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

If you require assistance or have questions regarding your laptop, please contact Jumper customer support:

- **Email Support:** service@jumper-customersupport.com
- **Amazon Order Support:** Log in to your Amazon buyer account, find your order, and click "Get Product Support" or "Get Help".

Jumper aims to provide assistance within 24 hours.

© 2026 Jumper. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question