

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WISHOLY](#) /

› [WISHOLY K10 Home Projector User Manual](#)

WISHOLY K10

WISHOLY K10 Home Projector User Manual

Model: K10

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your WISHOLY K10 Home Projector. Please read this manual thoroughly before using the product to ensure safe and optimal performance.



Figure 1: WISHOLY K10 Projector with streaming service interfaces.

2. SPECIFICATIONS

Brand	WISHOLY
Model	K10
Resolution	1920 x 1080 (Full HD)
Brightness	27000 Lumens
Contrast Ratio	12000:1
Operating System	Android TV
Wireless Connectivity	Wi-Fi 6, Bluetooth 5.4

Input Ports	2x HDMI 2.1, 1x USB 3.0, 1x 3.5mm Audio Jack
Projection Size	Up to 200 inches
Special Features	Electric Focus, Automatic Keystone Correction, 270° Rotatable Stand, Built-in HiFi Speaker, 50% Zoom Function
Dimensions	26.7 x 18.8 x 14.6 cm
Weight	1.1 kg

3. SETUP

3.1 Unpacking and Placement

1. Carefully remove the projector and all accessories from the packaging.
2. Place the projector on a stable, flat surface. The 270° rotatable stand allows for flexible positioning, including ceiling projection.
3. Ensure adequate ventilation around the projector to prevent overheating.

WISHOLYを選んだ理由

27000 LM
高輝度
1080P 高解像度
4K 高画質
12000:1 コントラスト比

Android TV内蔵で、好きなアプリを自由にダウンロード可能

270°回転スタンドの可動域が広く、設置場所を選ばない

鮮やかな色彩とプロ級画質

VS

スマホとのワイヤレス接続が面倒

三脚スタンドが別途購入必要

ぼやけた画質

10000 LM
画面が暗い
720 解像度ぼやけた画質
8000:1 コントラスト比

Figure 2: The projector's 270° rotatable stand for versatile placement.

3.2 Power Connection

- Connect the power adapter to the projector's power input port.
- Plug the power adapter into a suitable electrical outlet.

3.3 Initial Power On and Basic Settings

1. Press the power button on the projector or remote control to turn it on.
2. Follow the on-screen prompts to select your preferred language and connect to a Wi-Fi network.
3. The projector features automatic keystone correction. If the image appears distorted, the projector will automatically adjust it to a rectangular shape.
4. Use the remote control to adjust the electric focus for a sharp image.



Figure 3: Electric focus adjustment for a clear image.

Your browser does not support the video tag.

Video 1: Overview of the WISHOLY K10 Projector's features, including automatic focus and keystone correction.

4. OPERATING INSTRUCTIONS

4.1 Android TV Functionality

- The WISHOLY K10 comes with Android TV built-in, allowing direct access to streaming applications.
- Navigate the home screen using the remote control.
- Access the Google Play Store to download and install apps like Netflix, YouTube, Amazon Prime Video, Hulu, and Disney+.
- No external devices are needed for streaming content once apps are installed.

Your browser does not support the video tag.

Video 2: Guide on how to download and install apps like U-NEXT on the projector's Android TV interface.

4.2 External Device Connectivity

The projector supports various wired and wireless connections:

- **HDMI:** Connect gaming consoles (PS5, Xbox, Switch), PCs, Macs, or DVD players using an HDMI cable. The projector has two HDMI 2.1 ports.
- **USB:** Connect USB drives for media playback via the USB 3.0 port.
- **3.5mm Audio Jack:** Connect external speakers or headphones.
- **Wi-Fi 6:** For high-speed wireless screen mirroring from iOS/Android smartphones and PCs. Enjoy 4K streaming and online gaming with minimal latency.
- **Bluetooth 5.4:** Connect wireless headphones or Bluetooth speakers for enhanced audio. This ensures stable connection and perfect audio-visual synchronization.

Bluetooth5.4・より高速な通信

より安定した接続、より広い無線通信範囲、より速い通信速度！



Figure 4: Bluetooth 5.4 connectivity for audio devices.

Your browser does not support the video tag.

Video 3: Instructions for screen mirroring with an iOS device.

Important Note on Screen Mirroring: This projector is not compatible with Google Pixel devices. Some Android devices (e.g., AQUOS) may not have built-in screen mirroring functionality. Please verify your smartphone's screen mirroring capabilities before attempting to connect wirelessly.

4.3 Image Adjustment

- **Electric Focus:** Use the remote control to fine-tune the image sharpness.
- **Automatic Keystone Correction:** The projector automatically corrects image distortion to maintain a perfect rectangular display, even when placed at an angle.
- **Zoom Function:** Adjust the image size from 50% to 100% without moving the projector.

5. MAINTENANCE

5.1 Cleaning

- **Lens:** Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Avoid abrasive materials or harsh chemicals.
- **Exterior:** Wipe the exterior of the projector with a soft, dry cloth. Do not use liquid cleaners directly on the device.
- **Ventilation Ports:** Periodically check and clean the ventilation ports to ensure unobstructed airflow. Use a soft brush or compressed air to remove dust.

5.2 Storage

- When not in use for extended periods, store the projector in a cool, dry place away from direct sunlight and extreme temperatures.
- Cover the lens with its cap to protect it from dust and scratches.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image projected	Power not connected, input source incorrect, lens cap on.	Check power connection, select correct input source (HDMI, Android TV), remove lens cap.
Blurred image	Focus not adjusted, projector too far/close.	Use remote control for electric focus adjustment. Ensure projector is within optimal projection distance.
Distorted image (trapezoid)	Projector not perpendicular to screen.	Automatic keystone correction should activate. If not, reposition the projector or manually adjust if available.
No sound	Volume too low, external audio device not connected/selected.	Increase volume. Check external audio connections (Bluetooth, 3.5mm jack) and ensure correct output is selected.
Screen mirroring issues	Incompatible device, Wi-Fi issues.	Ensure your device is not a Google Pixel or an Android device lacking screen mirroring. Check Wi-Fi connection stability. Refer to Video 3 for iOS mirroring guide.

7. WARRANTY AND SUPPORT

Your WISHOLY K10 Projector comes with a **2-year warranty**. An option to extend the warranty may be available. In case of any malfunction or issues, please contact our support center.

- Our professional support staff are available year-round to assist you in Japanese.
- For inquiries regarding setup, operation, or troubleshooting, please do not hesitate to contact us.

For detailed contact information, please refer to the product packaging or the official WISHOLY website.



