

[Manuals.plus](#) /

> [Talkcoder](#) /

> Talkcoder 64GB Voice Activated Recorder Instruction Manual

## Talkcoder 64GB

# Talkcoder 64GB Voice Activated Recorder Instruction Manual

Model: 64GB

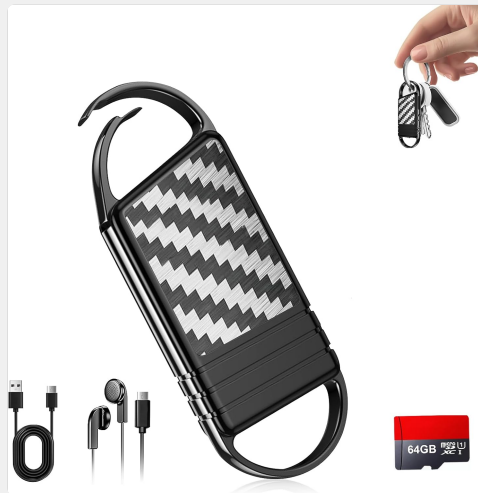 


Image: Talkcoder 64GB Voice Activated Recorder with included accessories.

## INTRODUCTION

Thank you for choosing the Talkcoder 64GB Voice Activated Recorder. This device is designed for clear audio capture in various environments, featuring a compact design, voice activation, and advanced noise reduction. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance.

## PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Voice Recorder
- Headphone
- Data Cable
- Storage Pouch

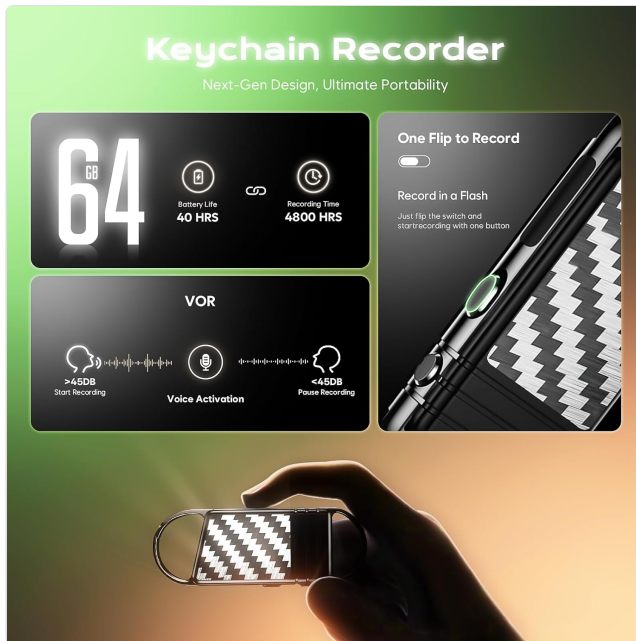 


Image: The Talkcoder Voice Recorder shown with its included accessories: headphones, data cable, and storage pouch.

## PRODUCT OVERVIEW

The Talkcoder voice recorder features a compact design with intuitive controls. Familiarize yourself with the device's components:

- **Recording Switch:** Used to initiate or stop recording.
- **Voice Activation (VA) Switch:** Engages voice-activated recording mode.
- **USB Port:** For charging and data transfer.
- **Headphone Jack:** For audio playback.
- **Indicator Light:** Provides status feedback (e.g., recording, charging).
- **Keyring Loop:** For portability and attachment.

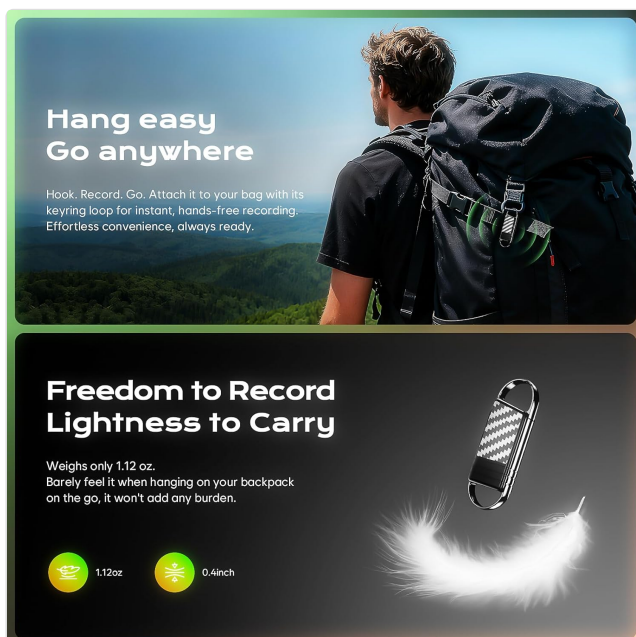 


Image: Close-up view of the Talkcoder Voice Recorder, highlighting its recording switch, voice activation switch, and ports.

## SETUP

### 1. Charging the Device

Before first use, fully charge the recorder. Connect the provided data cable to the recorder's USB port and to a power source (e.g., computer USB port, USB wall adapter). A full charge takes approximately 2 hours and provides up to 40 hours of continuous recording time.

### 2. Power On/Off

To power on the device, slide the main switch to the 'ON' position. To power off, slide the switch to 'OFF'.

### 3. Connecting to a Computer or Phone (OTG)

The recorder can connect to a computer or compatible smartphone for file transfer. Use the provided data cable. For smartphone connection, an OTG adapter (included) is required. Ensure the recording device is powered off before connecting to a phone for file transfer.



Image: The voice recorder connected via USB to a laptop and an OTG adapter to a smartphone, illustrating data transfer capabilities.

## OPERATING INSTRUCTIONS

### 1. Basic Recording

To start recording, simply slide the main switch to the 'ON' position. The device will begin recording immediately. To stop recording, slide the switch back to 'OFF'. Recordings are automatically saved.

### 2. Voice Activated Recording (VOR)

For voice-activated recording, slide the switch to the 'VA' position. The recorder will automatically start recording when sound is detected above a certain decibel level (approximately >45dB) and pause when sound falls below that level (approximately <45dB). This feature conserves memory and battery life by skipping silent periods.

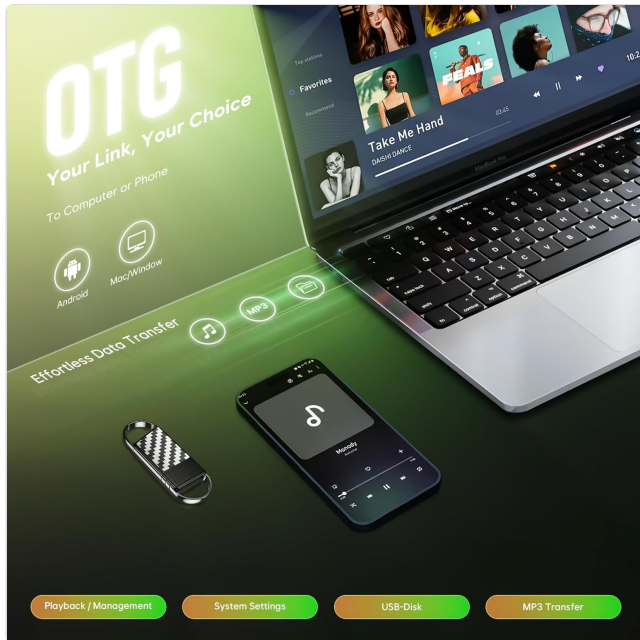 


Image: A graphic illustrating the voice activation function, showing how the recorder starts recording when sound exceeds 45dB and pauses when it drops below 45dB.

### 3. Playback

Connect the included headphones to the device's headphone jack. Use the device's controls (refer to the full user manual for specific button functions) to navigate and play back your recordings. The device supports MP3 playback.

### 4. File Management

To manage recorded files, connect the device to a computer or smartphone as described in the Setup section. The device will appear as a removable storage drive, allowing you to copy, move, or delete files. The 64GB internal memory can store approximately 4800 hours of recordings.

### 5. AI Noise Reduction

The Talkcoder recorder is equipped with a DSP 3.0 HD noise reduction chip. This technology intelligently analyzes audio signals in real-time to minimize background noise, enhancing the clarity of your recordings.



Image: A graphic illustrating the DSP 3.0 HD noise reduction chip and its function in enhancing audio quality.

## MAINTENANCE

- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge it regularly, even if not in use for extended periods.
- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the recorder in a cool, dry place away from direct sunlight and extreme temperatures.
- **Data Backup:** Regularly back up important recordings to a computer or other storage device to prevent data loss.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 2 hours.
Poor recording quality.	Excessive background noise; microphone obstructed.	Ensure the microphone is clear. Record in a quieter environment or utilize the AI Noise Reduction feature.
Cannot transfer files to computer/phone.	Incorrect connection; device not recognized.	Ensure the device is powered off before connecting. Use the provided data cable. For phones, ensure the OTG adapter is correctly used and the phone supports OTG. Try a different USB port or cable.
Voice Activated Recording (VOR) not working as expected.	Ambient noise level too low or too high; switch in wrong position.	Ensure the switch is in the 'VA' position. Adjust the recording environment to ensure sound levels are within the activation threshold (>45dB).
Difficulty discerning recording status.	Indicator light not clearly visible or understood.	Refer to the full user manual for detailed indicator light behavior. Ensure the device is in a well-lit area if visibility is an issue.

## SPECIFICATIONS

<b>Brand</b>	Tallkoder
<b>Model</b>	64GB Voice Activated Recorder
<b>Memory Storage Capacity</b>	64 GB (approx. 4800 hours recording)
<b>Battery Life</b>	Up to 40 Hours (continuous recording)
<b>Charging Time</b>	Approx. 2 hours
<b>Microphone Form Factor</b>	Built-In
<b>Microphone Operation Mode</b>	Noise Cancellation
<b>Hardware Interface</b>	USB
<b>Headphones Jack</b>	3.5 millimeters

<b>Compatible Devices</b>	Earphone, Laptop, Personal Computer, Smartphone
<b>Item Weight</b>	4.6 ounces
<b>Package Dimensions</b>	6.5 x 3.58 x 1.14 inches

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or further assistance, please refer to the official Talkcoder website or contact their customer service department. Details can typically be found on the manufacturer's packaging or website.

Manufacturer: **Talkcoder**

For additional resources, you may visit the [Talkcoder Store on Amazon](#).