

[Manuals.plus](#) /

› [Orixforce](#) /

› Orixforce Dual Basket Air Fryer MCAI-DUAL User Manual

Orixforce MCAI-DUAL

Orixforce Dual Basket Air Fryer MCAI-DUAL User Manual

Model: MCAI-DUAL

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Orixforce Dual Basket Air Fryer, model MCAI-DUAL. This appliance is designed for air frying various foods with minimal oil, offering a healthier cooking alternative with its dual independent cooking zones.



Image 1.1: The Orixforce Dual Basket Air Fryer in operation, showcasing its two independent cooking baskets filled with french fries and breaded shrimp.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Orixforce Dual Basket Air Fryer.

Components:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Cooking Baskets (x2):** Removable, nonstick baskets for holding food.
- **Crisper Plates (x2):** Inserted into the baskets to allow air circulation around food.
- **Digital LED Display:** Shows time, temperature, and cooking presets.
- **Control Panel:** Touch-sensitive buttons for operation.



4. SETUP (BEFORE FIRST USE)

Follow these steps before using your air fryer for the first time.

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean Components:** Wash the cooking baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. The baskets and crisper plates are dishwasher safe.
3. **Wipe Main Unit:** Wipe the inside and outside of the main unit with a damp cloth.
4. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper airflow. Ensure there is at least 6 inches of space around the unit.
5. **Initial Run (Optional but Recommended):** To eliminate any manufacturing odors, plug in the air fryer and run it empty at 400°F (200°C) for about 10-15 minutes. A slight odor may be present, which is normal and will dissipate.

5. OPERATING INSTRUCTIONS

Learn how to use your Orixforce Dual Basket Air Fryer for optimal cooking results.

Control Panel Overview:



Image 5.1: Detailed view of the digital LED control panel, showing temperature, time, and preset icons for both cooking zones.

- **Power Button:** Turns the unit on/off.
- **Zone Select (1/2):** Toggles between Basket 1 and Basket 2 to adjust settings independently.
- **Temperature Controls (▲/▼):** Adjusts cooking temperature (175°F–400°F).
- **Time Controls (▲/▼):** Adjusts cooking time.
- **Preset Functions:** Icons for common foods (Vegetables, Fish, Shrimp, Ribs, Wings, Pizza, Chips) with pre-set time and temperature.
- **Smart Finish:** Synchronizes cooking times for both baskets to finish simultaneously.
- **Shake Reminder:** An icon may appear to remind you to shake the basket.

General Operation:

1. **Prepare Food:** Place food into the cooking baskets, ensuring not to overfill. Insert the crisper plates into the baskets before adding food.
2. **Insert Baskets:** Slide the baskets firmly into the main unit.

3. **Power On:** Press the Power button. The display will illuminate.
4. **Select Zone:** Press the '1' or '2' button to select the basket you wish to program.
5. **Set Temperature and Time:** Use the temperature and time control buttons to set your desired cooking parameters. Alternatively, select a preset function.
6. **Start Cooking:** Press the Play/Pause button to begin cooking. Repeat for the second basket if cooking different items.
7. **Smart Finish (Optional):** If cooking two different items that need to finish at the same time, program both baskets, then press the 'Smart Finish' button. The air fryer will automatically adjust the start times.
8. **Shake Reminder:** If the shake icon appears, carefully remove the basket, shake the contents, and reinsert.
9. **Remove Food:** Once cooking is complete, the air fryer will beep. Carefully pull out the baskets using the cool-touch handles. Use tongs to remove food.

6. COOKING GUIDE AND TIPS

- **Preheating:** For best results, preheat the air fryer for 3-5 minutes at the desired temperature before adding food.
- **Oil Usage:** While air frying requires little to no oil, a light spray of oil can enhance crispiness, especially for fresh ingredients.
- **Do Not Overfill:** Avoid overcrowding the baskets to ensure even cooking and crisping. Cook in batches if necessary.
- **Shake/Flip:** For most foods, especially smaller items like fries or nuggets, shaking or flipping them halfway through cooking promotes even browning.
- **Check Doneness:** Always check food for doneness and adjust cooking time as needed.
- **Frozen Foods:** Air fryers are excellent for cooking frozen foods. Follow package instructions, but typically reduce cooking time slightly and check frequently.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Baskets and Crisper Plates:** The nonstick cooking baskets and crisper plates are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. Do not use metal utensils or abrasive cleaning materials, as this can damage the nonstick coating.
3. **Wipe Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Clean Heating Element:** If necessary, use a cleaning brush to remove any food residue from the heating element inside the air fryer.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



Image 7.1: View inside the air fryer baskets, highlighting the removable crisper plates for easy cleaning.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Food is not cooked evenly.	Baskets are overcrowded. Food not shaken/flipped.	Cook in smaller batches. Shake or flip food halfway through cooking.

Problem	Possible Cause	Solution
Food is not crispy.	Too much moisture in food. Not enough oil (for some foods). Temperature too low.	Pat food dry before air frying. Lightly spray with oil. Increase temperature or cooking time.
White smoke coming from appliance.	Grease residue from previous use. High-fat food cooking.	Clean baskets and crisper plates thoroughly after each use. For high-fat foods, drain excess fat during cooking.

9. SPECIFICATIONS

Technical details of the Orixforce Dual Basket Air Fryer MCAI-DUAL.

- **Model:** MCAI-DUAL
- **Brand:** Orixforce
- **Capacity:** 9.6 Liters Total (Dual 4.8 Quart Baskets)
- **Output Wattage:** 1700 Watts
- **Voltage:** 120 Volts
- **Product Dimensions:** 14.5"D x 16"W x 13"H
- **Item Weight:** 10.25 Pounds
- **Temperature Range:** 175°F – 400°F
- **Special Features:** Automatic Shut-Off, Temperature Control, Timer, Nonstick Coating
- **Material:** Metal, Plastic
- **Color:** Black

10. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Orixforce Dual Basket Air Fryer, please refer to the documentation provided at the point of purchase or visit the official Orixforce website for customer service contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question