

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Ingenio Serenity 4-Piece Wok Edition Cookware Set (L8274S04) Instruction Manual

Tefal L8274S04

Tefal Ingenio Serenity 4-Piece Wok Edition Cookware Set (L8274S04) Instruction Manual

Model: L8274S04 | Brand: Tefal

INTRODUCTION

This manual provides essential information for the safe and effective use of your Tefal Ingenio Serenity 4-Piece Wok Edition Cookware Set. Please read these instructions carefully before first use and retain them for future reference. The Ingenio Serenity range is designed for versatility, allowing seamless transitions from stovetop to oven, table, and refrigerator, thanks to its removable handle and stackable design.

PACKAGE CONTENTS

Your Tefal Ingenio Serenity 4-Piece Wok Edition Cookware Set includes the following items:

- 1x Frying Pan (28cm)
- 1x Saucepan (20cm)
- 1x Wok Pan (26cm)
- 1x Ingenio Removable Handle

SET 4 PIECES SERENITY



Poêle 28cm



Wok 26cm



Casserole 20cm



Poignée amovible robuste

Image: The four components of the Ingenio Serenity Wok Edition set, including a frying pan, wok, saucepan, and the detachable handle.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all items from the packaging. Dispose of packaging materials responsibly.
2. **Initial Cleaning:** Before first use, wash all cookware items and the removable handle with warm soapy water. Rinse thoroughly and dry completely.
3. **Conditioning (for non-stick surfaces):** For optimal non-stick performance, lightly coat the interior of the pans with a small amount of cooking oil. Heat on low for 30 seconds, then remove from heat and wipe clean with a paper towel. This step is optional but recommended.
4. **Handle Attachment:** Practice attaching and detaching the Ingenio handle a few times before cooking. Ensure it clicks securely into place. The handle is designed to be robust and can support up to 10kg (internal tests).



Image: Demonstrating the secure attachment of the removable Ingenio handle to a pan.

OPERATING INSTRUCTIONS

1. Using the Removable Handle

- To attach: Align the handle with the pan's attachment points and press firmly until you hear a click, indicating it is securely locked.
- To detach: Press the release button on the handle and pull it away from the pan.
- Only attach the handle when moving the pan or stirring food. Remove it during cooking on the stovetop or when placing the pan in the oven to prevent overheating the handle.

2. Cooking on the Stovetop

- These pans are compatible with all types of hobs, including induction.
- Use medium to low heat settings. High heat can damage the non-stick coating and is generally not necessary due to the efficient heat distribution.

- The Mineralia non-stick coating provides long-lasting performance and allows for cooking with minimal fat.
- Always use wooden, silicone, or plastic utensils to protect the non-stick surface. Avoid metal utensils.



Image: The Mineralia non-stick coating, designed for durability and easy food release.

3. Oven Use

- The pans are oven-safe without the handle. Ensure the handle is detached before placing the pan in the oven.
- Always use oven mitts when handling hot pans from the oven.

COMPATIBLE AU FOUR



Image: A pan from the set being placed into an oven, demonstrating its oven compatibility without the handle.

4. Serving and Storage

- After cooking, the pan can be brought directly to the table for serving by attaching the handle.
- For storing leftovers, detach the handle and place the pan directly into the refrigerator.
- The stackable design allows for efficient storage, saving up to 50% more space compared to traditional cookware.

GAIN DE PLACE



Image: Stacked Ingenio Serenity pans, illustrating the space-saving storage feature.

MAINTENANCE AND CARE

- **Cleaning:** The cookware is dishwasher safe. However, hand washing with warm soapy water and a non-abrasive sponge is recommended to prolong the life of the non-stick coating.
- **Handle Care:** The removable handle can also be washed by hand. Ensure it is completely dry before storing.
- **Avoid Abrasives:** Do not use harsh scourers, abrasive cleaners, or steel wool on any part of the cookware, especially the non-stick surface.
- **Storage:** When stacking pans, consider using pan protectors to prevent scratching the non-stick surfaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Food sticking to the pan.	High heat, insufficient oil, or damaged non-stick coating.	Use medium to low heat. Ensure a small amount of oil is used. Avoid metal utensils. Re-condition the pan if needed.
Handle not attaching securely.	Incorrect alignment or debris in the attachment mechanism.	Ensure the handle is correctly aligned with the pan's attachment points. Check for and remove any food debris.
Pan warping or deforming.	Sudden temperature changes (e.g., hot pan under cold water) or excessive heat.	Allow pans to cool completely before washing. Avoid using excessively high heat.

SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	L8274S04
Color	Blue Calm
Material	Non-stick (Mineralia coating)
Dimensions (L x W x H)	33.2 x 33.2 x 12.5 cm (approximate for packaged set)
Item Weight	3.44 Kilograms
Compatibility	All hob types, including induction. Oven safe (without handle).
Dishwasher Safe	Yes (hand washing recommended for longevity)
Special Features	Stackable design, space-saving, removable handle, Mineralia non-stick coating.

WARRANTY AND SUPPORT

Warranty Information

The Ingenio removable handle is guaranteed for 10 years against manufacturing defects, based on internal testing standards (can support up to 10kg). For specific warranty details regarding the cookware items, please refer to the warranty card included with your product or visit the official Tefal website.

Customer Support

For further assistance, product inquiries, or to report any issues, please contact Tefal customer service. You can find contact information on the official Tefal website or through your local retailer.

Official Tefal Website: www.tefal.com

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FGY1B57N>

More documents and user manuals: <https://manuals.plus/>